

## ADDENDUM A LBT8877 ADDENDUM TO LBT8877

### ITALIANO

## AVVISO IMPORTANTE PER INSTALLATORE




Gentile Cliente

la centrale che ha acquistato, è conforme alla norme europee EN50131 al Grado 3.


Il Grado 3, al fine d'aumentare la sicurezza intrinseca del sistema, impone all'utente delle restrizioni d'impiego. In particolare le visualizzazioni di stato sistema, e soprattutto di stato settori, non sono disponibili su tastiere e lettori in modo puntuale (così come per le centrali 1067/032, 1067/042 e 1067/052) ma solo dopo aver introdotto un codice valido oppure una chiave valida.

La informiamo che è possibile, portare il sistema dal Grado 3 al Grado 2, quindi con maggiori informazioni visualizzate dalle tastiere e dai lettori (ad esempio lo stato delle zone) dal menu MANUTENZIONE – MODO D'USO.

Per modificare il modo d'uso del sistema:

- 1) Digitare **<codice Tecnico>**, premere , poi  e infine più volte  finché non appare MANUTENZIONE.

**UT00 : TECNICO  
MANUTENZIONE**

- 2) Premere  e poi più volte  finché non appare MODO D'USO.

**MANUTENZIONE  
MODO D'USO.**

- 3) Premere . Usare i tasti  e  per cambiare il modo d'uso. Confermare la scelta con .

**MODO D'USO  
MODO 3**



**ATTENZIONE!** Impostando il Modo d'uso 2 o il Modo d'uso 0 il sistema perde la conformità EN50131 Grado 3 che eventualmente aveva.

- 4) Premere più volte il tasto  per uscire dal menu.




Sempre per le stesse ragioni di sicurezza, la centrale esce di fabbrica con il test di linea telefonica abilitato di tipo ATS4; questo significa che, si aspetta di trovare un comunicatore telefonico, di tipo ATS4, collegato alla linea telefonica PSTN.

Non trovandolo, il sistema genera un'anomalia.



La informiamo che è possibile, modificare questo parametro accendendo al menu:

#### TEST LINEA TELEFONICA





Per modificare il test di linea PSTN fare quanto segue:

- 1) Digitare **<codice Tecnico >**, premere , poi  e infine più volte  finché non appare TRAS. TELEFONICO.

**UT00:TECNICO**  
**TRAS. TELEFONICO**

- 2) Premere  e poi più volte  finché non appare TEST LINEA PSTN.

**TRAS. TELEFONICO**  
**TEST LINEA PSTN**

- 3) Premere . Selezionare coi tasti  e  DISABILITA, 24 H, SISTEMA ON o ATS4. Confermare la scelta con .

**TEST LINEA PSTN**  
**24 H**

- 4) Premere più volte il tasto  per uscire dal menu.

Per maggiori dettagli vedere "Manuale di programmazione".



**ATTENZIONE!** Impostando il Modo d'uso 2 o il Modo d'uso 0 il sistema perde la conformità EN50131 Grado 3 che eventualmente aveva.

## IMPORTANT NOTICE FOR THE INSTALLER

Dear Customer,  
the control panel you have purchased conforms with European standard EN50131 at Grade 3.

In order to increase the security inherent to the system, Grade 3 sets some restrictions upon the user. More specifically, the visualizations of system status and, above all, partition status, are not available on the keypads and readers in punctual mode (as in the 1067/032, 1067/042 and 1067/052 control panels), unless the valid code or key have not been inserted.

Please remember that it is possible to bring the system from Grade 3 to Grade 2, and therefore visualize more information from the keypads and readers (for example, status of various zones) from the MAINTENANCE – USE MODE menu.

To change the use mode of the system:

- 1) Enter **<Installer code>**, press , then  and finally  repeatedly until MAINTENANCE appears.

**UT00 : INSTALLER  
MAINTENANCE**

- 2) Press  and then  several times until USE MODE appears.


**MAINTENANCE  
USE MODE**

- 3) Press . Press  and  to select the mode. Press  to confirm.

**USE MODE  
MODE 3**













**IMPORTANT!** By setting Mode 2 or Mode 0 the system will lose EN50131 Grade 3 compliance.

- 4) Press  repeatedly to exit from the menu.

Always for the same security features, the control panel has the ATS4 type test enabled as a default setting; this means that it expects to find an ATS4 telephone dialler connected to the PSTN telephone line. If it does not find this dialler, the system will generate a fault. Please remember that it is possible to modify this parameter by accessing the TELEPHONE LINE TEST menu.

Proceed as follows to modify the PSTN line test:

- 1) Enter **<Installer code>**, press , then  and finally  repeatedly until TELEPHONE DIALER appears.
- 2) Press  and then  several times until PSTN LINE TEST appears.
- 3) Press . Press  and  to select DISABLE, 24 H, SYSTEM ON or ATS4. Press  to confirm.
- 4) Press  repeatedly to exit from the menu.

**UT00:INSTALLER  
TELEPHONE DIALER**

**TELEPHONE DIALER  
PSTN LINE TEST**

**PSTN LINE TEST  
24 H**

See the "Programming Manual" for more details.



**IMPORTANT!** By setting Mode 2 or Mode 0 the system will lose EN50131 Grade 3 compliance.