


### GEAR ACCESSORIES FOR SCANDINAVIAN CYLINDER Ref. 1086/27

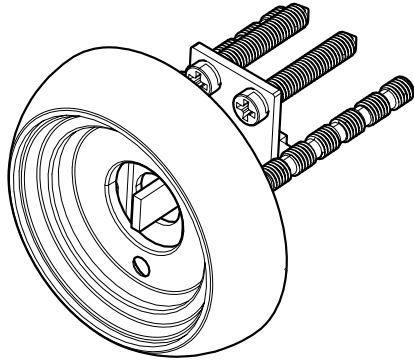

#### FIRST INSTALLATION BOOKLET


### 1. GENERAL DESCRIPTION

The Gear Ref. accessories 1086/27 allow the installation of the Sclak Gear Ref. 1086/22 on doors with Scandinavian type cylinders.

### 2. PACK CONTENTS

- Scandinavian cylinder adapter
- Bracket
- Closing plate
- 1.5mm male Allen key
- Torx key
- M3x6mm hex grub
- 2 x M5x30 mm screws
- 2 x M5x90 mm screws
- Latch
- Installation booklet

### 3. PARTS DESCRIPTION

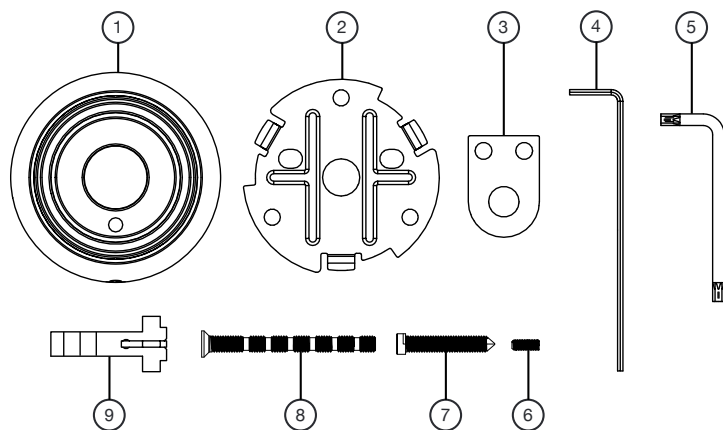

1. Scandinavian cylinder adapter
2. Bracket
3. Closing plate
4. Allen key
5. Torx key
6. Hex grub
7. M5x30 mm screw
8. M5x90 mm screw
9. Latch


### 4. INSTALLATION OF GEAR Ref. 1086/27 ACCESSORIES AND SCLAK GEAR Ref. 1086/22 DEVICE

**WARNING!** Urmet S.p.a shall not be held liable for damage or malfunctions of any nature deriving from or in any way connected to installations not carried out following these instructions or by unskilled personnel. This disclaimer also extends to the product warranty period.


Before installing, check that the distance between the door edge and the center of the Scandinavian cylinder adaptert (present in Gear accessories Ref. 1086/27) is at least 31 mm.

The following are the methods for the first installation of a Sclak Gear Ref. 1086/22 device with Gear Ref. 1086/27 accessories on Scandinavian cylinder.


1. At the front of the cylinder insert the latch provided with the accessories for Gear Ref.1086/27.

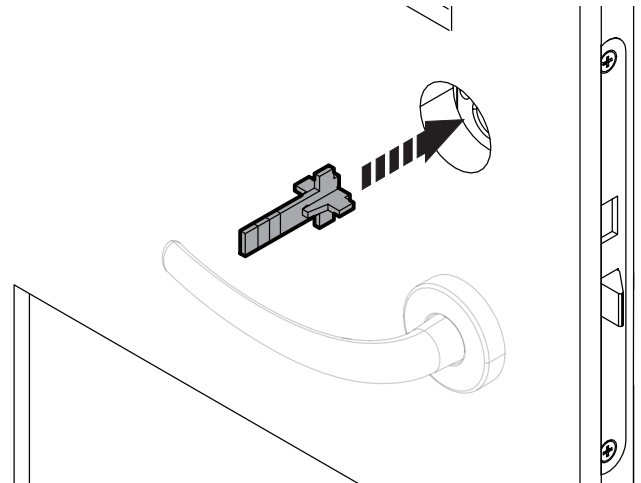


2. Carry out a fastening test of the bracket (supplied with the Gear Ref. 1086/27 accessories) in order to measure and mark the correct length of the latch.

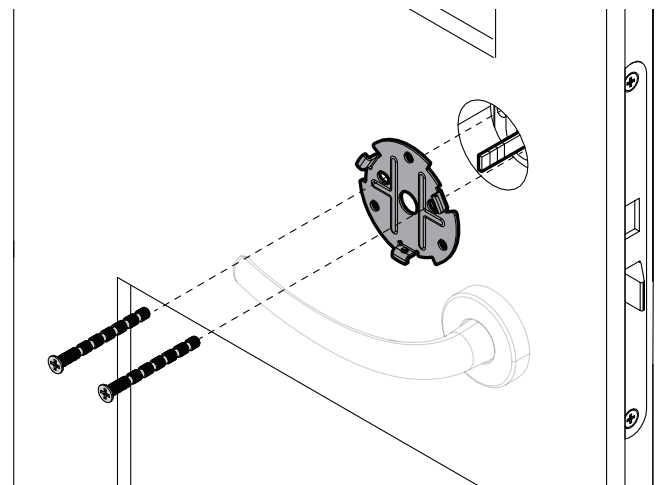


3. The latch must be **from a minimum of 4 mm to a maximum of 7 mm** from the bracket, depending on the thickness of the door, in order to correctly mount the Sclak Gear Ref. 1086/22.

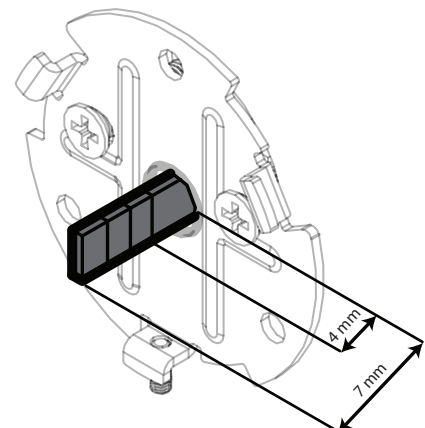


4. After taking the correct measurement of the latch, remove the bracket and latch from the door cylinder.
5. If it is necessary to shorten the length of the latch, break it at the most suitable pre-break point according to the previously marked point.
6. Then secure the latch and closing plate in the door slot by tightening the M5x30 mm screws with the Torx key (supplied with Gear 1086/27 accessories).

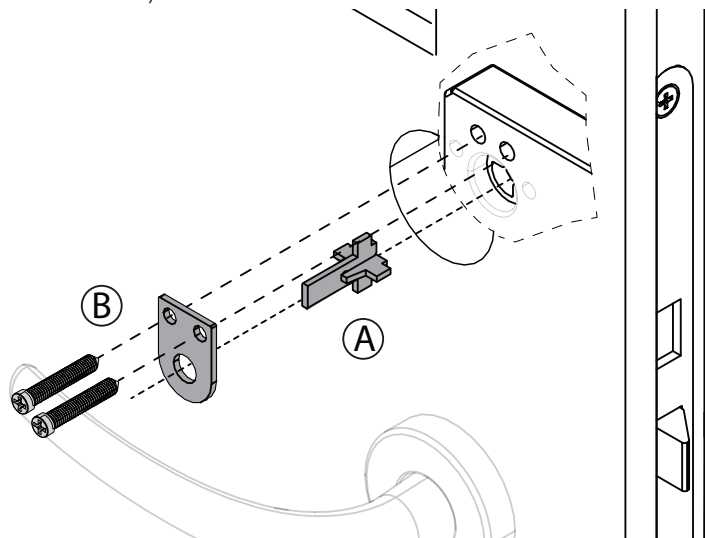


7. Carry out a fastening test of the bracket on the door in order to measure and mark the correct length of the M5X90 mm screws (supplied) according to the thickness of the door and the bushing (not supplied) on the outer side of the door. If necessary, remove the screws and cut them at the points marked according to the measurement carried out previously.

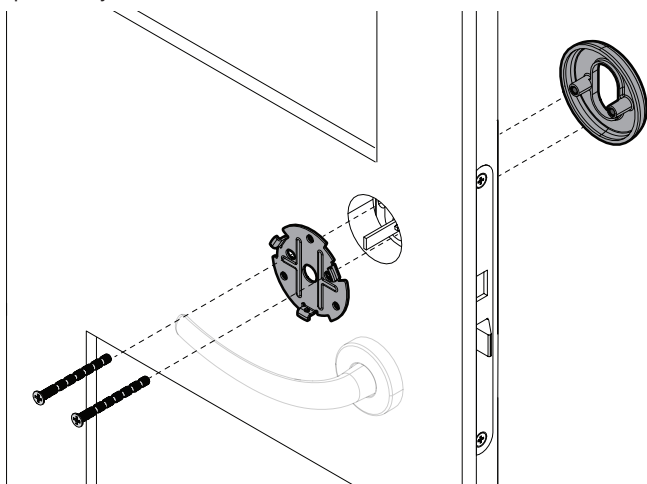


8. Secure the bracket to the door with the screws.

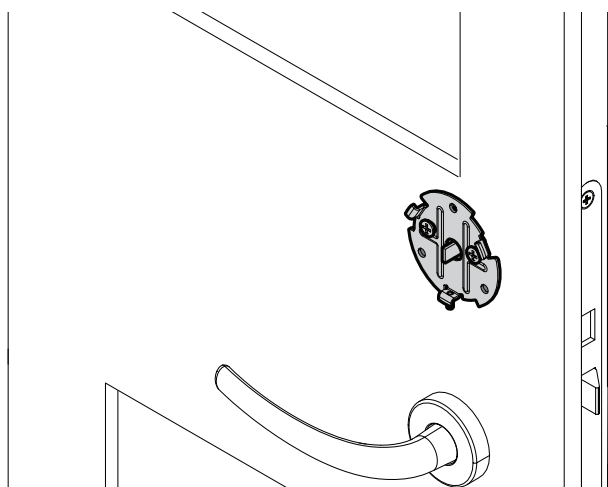


9. Attach the Sclak Gear Ref. 1086/22 device to the cylinder adapter by screwing the lower screw M4x8 mm and the serrated washer (supplied with the Sclak Gear) into the inner part using a screwdriver. Then insert the M3x6 grub screw (supplied) into the bottom of the cylinder adapter and tighten it slightly.

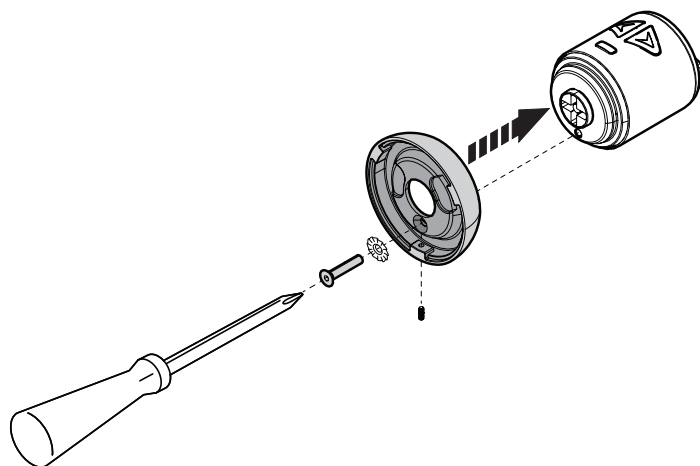

10. Insert the Sclak Gear device onto the bracket fixed on the door (A) and turn left (B).

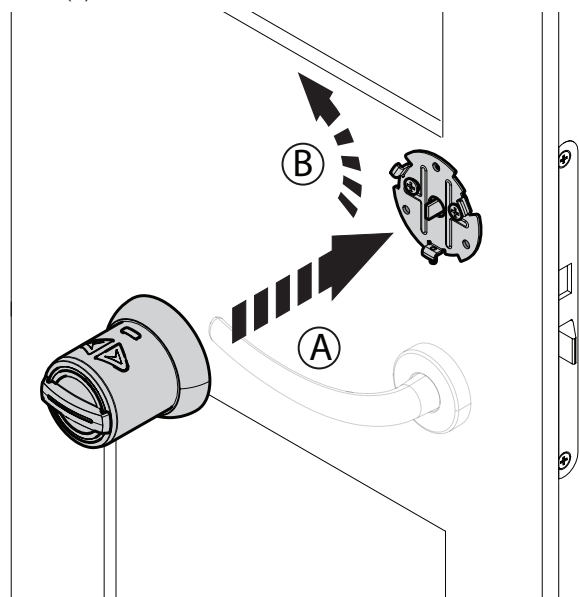

11. Using the 1.5 mm Allen key (supplied) turn the previously inserted screw until the Sclak Gear is completely locked on the bracket.

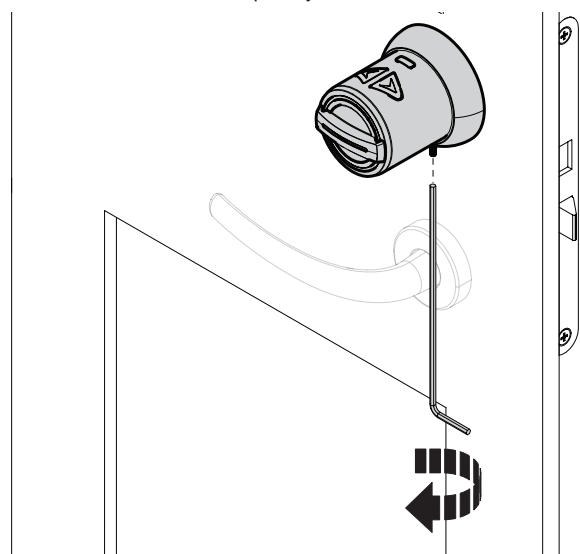

**DS1086-017A**


URMET S.p.A.  
10154 TURIN (ITALY)  
VIA BOLOGNA 188/C  
Tel. +39 011.24.00.000 (AUT. REC.)  
Fax +39 011.24.00.300 - 323

**urmet**

Technical area  
customer service +39 011.23.39.810  
<http://www.urmet.com>  
email: [sclak.support@urmet.com](mailto:sclak.support@urmet.com)  
MADE IN CHINA

**LBT21315**

### GEARTILBEHØR TIL SKANDINAVISK CYLINDER Sch. 1086/27

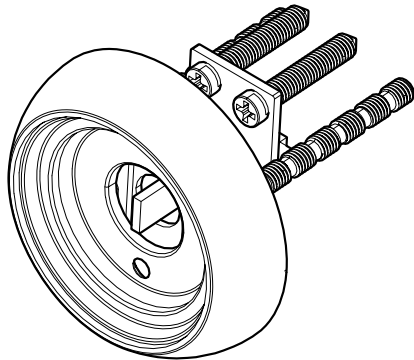

### MANUAL TIL FØRSTE INSTALLATION


#### 1. GENEREL BESKRIVELSE

Gear-tilbehør Sch. 1086/27 gør det muligt at installere Sclak Gear Sch. 1086/22 på døre med cylindere af skandinavisk type.

#### 2. PAKKENS INDHOLD

- Adapter til skandinavisk cylinder
- Beslag
- Lukningsplade
- Unbrako han-nøgle 1,5 mm
- Torx nøgle
- Sekskantet skrue M3x6 mm
- 2 skruer M5x30 mm
- 2 skruer M5x90 mm
- Låsebeslag
- Installationshæfte

#### 3. BESKRIVELSE AF DELE

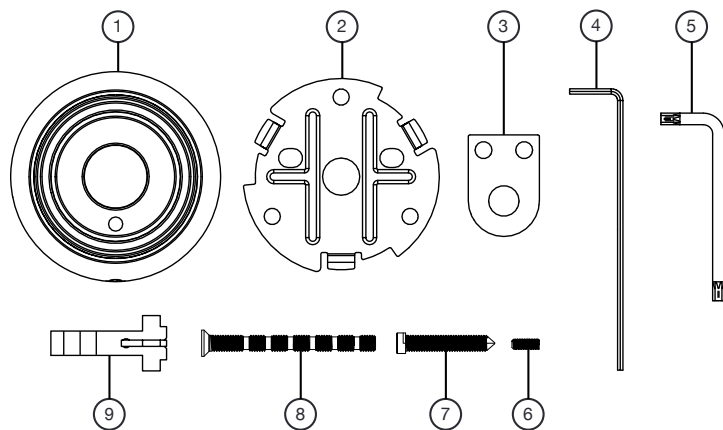

1. Adapter til skandinavisk cylinder
2. Beslag
3. Lukningsplade
4. Unbrakonøgle
5. Torx nøgle
6. Sekskantet skrue
7. Skrue M5x30 mm
8. Skrue M5x90 mm
9. Låsebeslag


#### 4. INSTALLATION AF EKSTRAUDSTYR GEAR Sch. 1086/27 OG AF ENHEDEN SCLAK GEAR Sch. 1086/22

OBS! Urmet S.p.a. påtager sig intet ansvar for skader eller funktionsfejl af nogen art, der skyldes eller på nogen måde er forbundet med installationer, der er udført på alternative måder eller i strid med disse instruktioner eller af ufaglært personale. Denne ansvarsfraskrivelse gælder også i produktets garantiperiode.


Før installationen skal man kontrollere, at afstanden mellem dørkanten og midten af adapter til skandinavisk cylinder (findes i Gear-tilbehør Sch. 1086/27) er mindst 31 mm.

Følgende er proceduren for den første installation af en Sclak Gear-enhed Sch. 1086/22 med Gear-tilbehør Sch. 1086/27 på skandinavisk cylinder.


1. Indsæt låsebeslaget, der leveres med Gear-tilbehøret Sch. 1086/27, i foran på cylinderen.

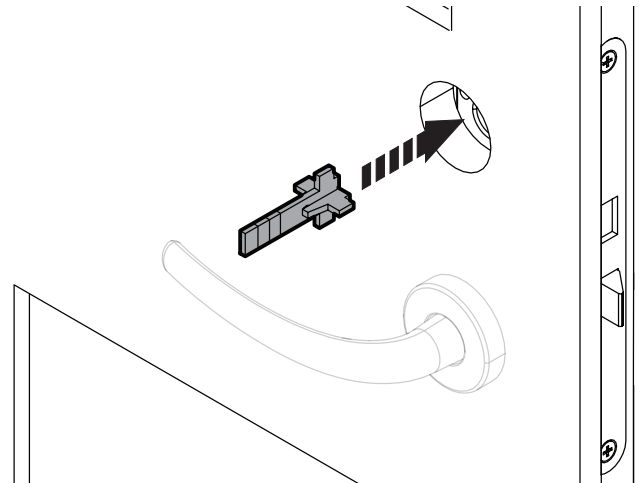


2. Prøv at montere beslaget (leveres med Gear-tilbehør Sch. 1086/27) for at måle og markere den korrekte længde af låsebeslaget.

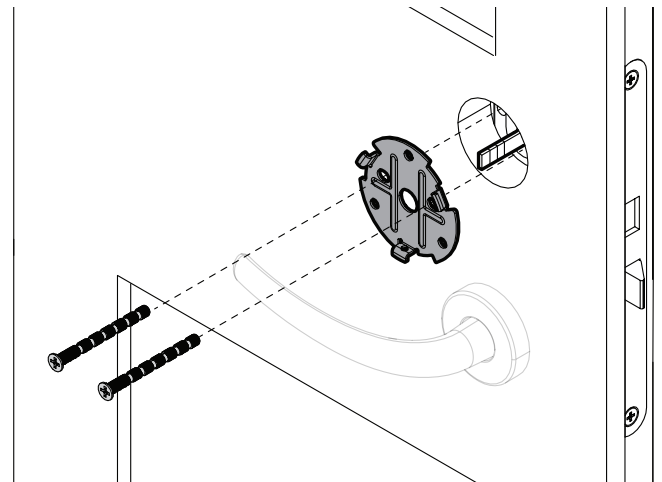


3. Låsebeslaget skal være mindst 4 mm og højst 7 mm fra beslaget, afhængigt af dørens tykkelse, for at kunne montere Sclak Gear Sch. 1086/22.

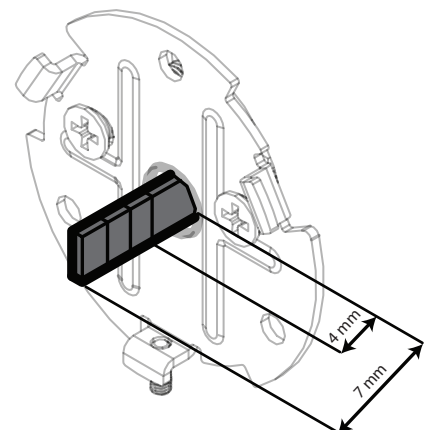


4. Når du har målt låsebeslaget korrekt, skal du fjerne beslaget og låsebeslaget fra dør cylinderen.
5. Afkort om nødvendigt låsebeslagets længde ved at brække det af på det mest passende punkt, der blev markeret tidligere.
6. Fastgør derefter låsen og lukkepladen i døråbningen ved at stramme M5x30 mm-skruerne med Torx-nøglen (leveres med Gear-tilbehør 1086/27).

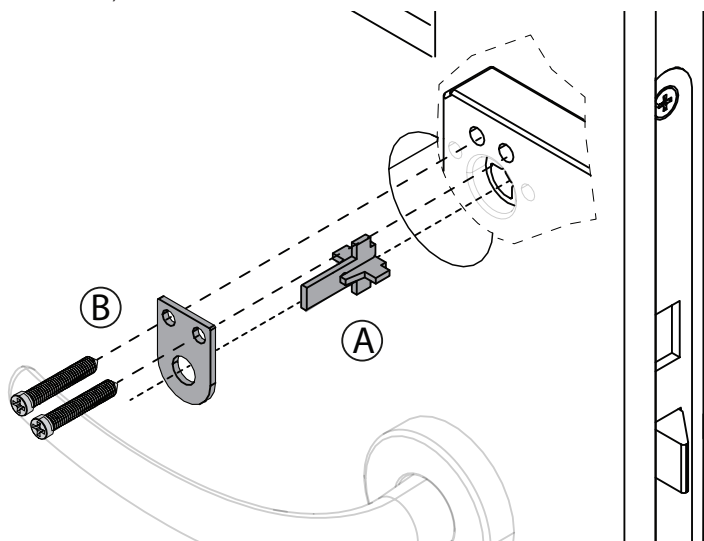


7. Udfør en prøvefastgørelse af beslaget på døren for at måle og markere den korrekte længde af M5X90 mm-skruerne (medfølger) i henhold til dørens tykkelse og bøsningen (medfølger ikke) på ydersiden af døren. Fjern om nødvendigt skruerne, og skær dem til ved de markerede punkter i henhold til den tidligere måling.

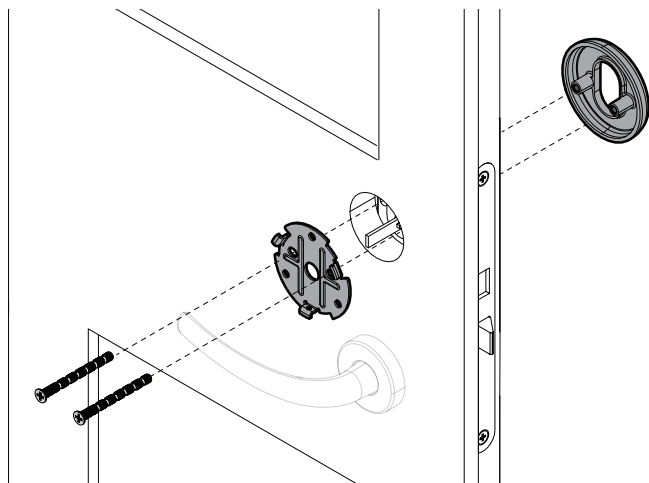


8. Fastgør beslaget til døren med skruerne.

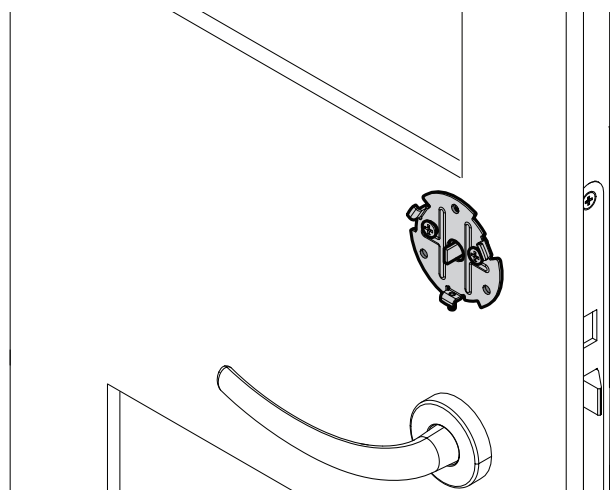


9. Hægt Sclak Gear-enheden Sch. 1086/22 på cylinderadapteren ved at skrue den nederste M4x8 mm-skrue og takket skive (leveres med Sclak Gear) indvendigt med en skruetrækker. Sæt derefter den (medfølgende) M3x6-skrue ind i den nederste del af cylinderadapteren, og skru den let fast.

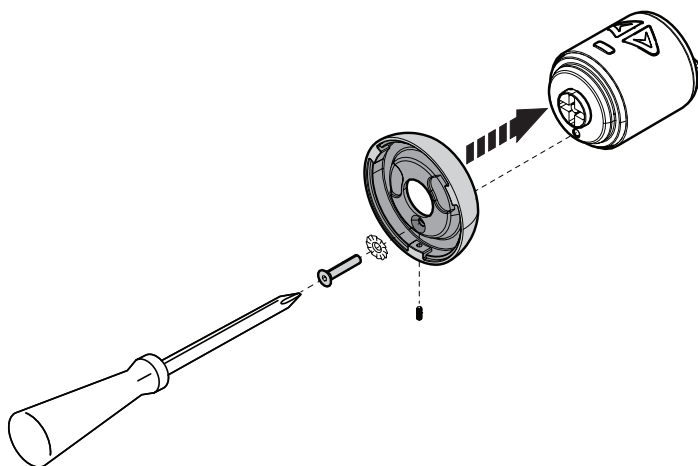

10. Sæt Sclak Gear-enheden på beslaget, der er fastgjort til døren (A), og drej den til venstre (B).

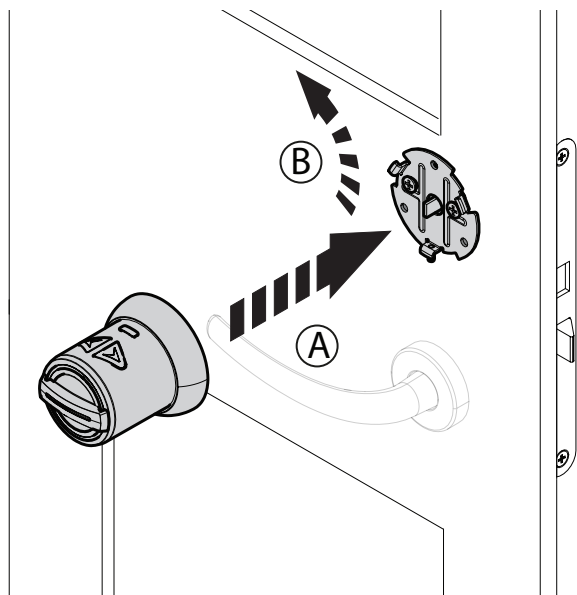

11. Brug den 1,5 mm sekskantede unbrakonøgle (medfølger) til at stramme skruen, der blev sat i tidligere, indtil Sclak Gear er låst helt fast på beslaget.

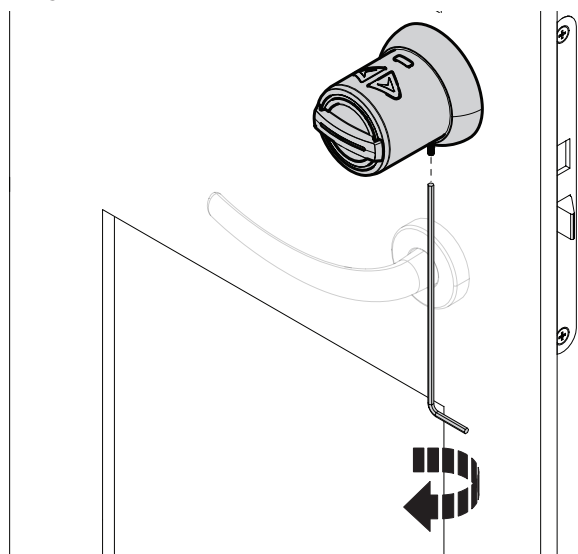

DS1086-017A

URMET S.p.A.  
10154 TURIN (ITALY)  
VIA BOLOGNA 188/C  
Tel. +39 011.24.00.000 (AUT. REC.)  
Fax +39 011.24.00.300 - 323

**urmet**

LBT21315

Technical area  
customer service +39 011.23.39.810  
<http://www.urmet.com>  
email: [sclak.support@urmet.com](mailto:sclak.support@urmet.com)  
MADE IN CHINA