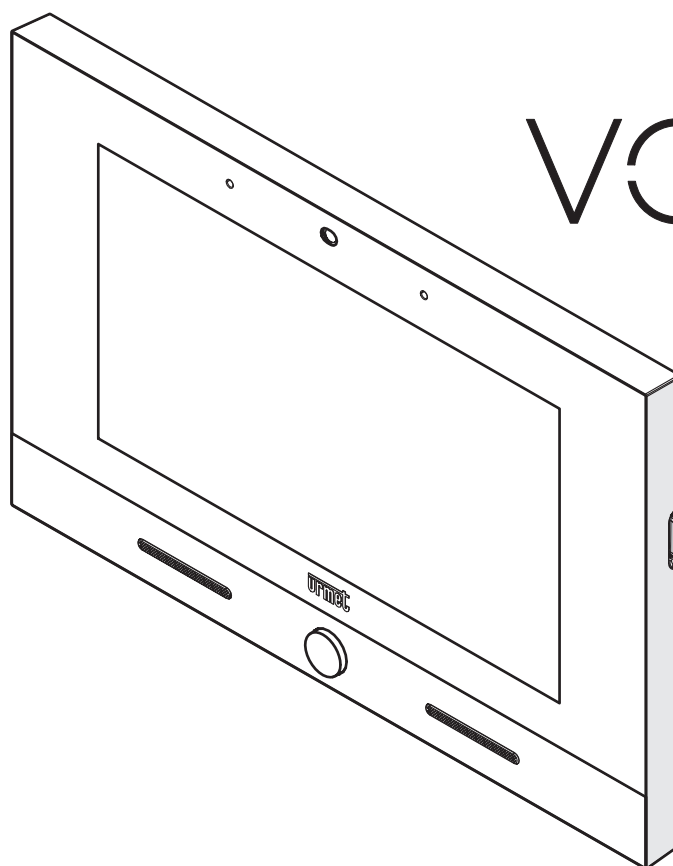


**7" VIDEO DOOR PHONE****Ref. 1760/31 - 1760/31A (White)****Ref. 1760/33 - 1760/33A (Black)****VOG⁷****USER BOOKLET**

The information contained in this booklet has been carefully collected and checked; however, the manufacturer may not be held responsible for any errors or omissions. The manufacturer reserves the right to introduce at any time and without notice improvements or changes in the products and services described in the booklet.

This manual may also contain references to or information on products or services not yet available commercially. Such references or information will not in any way imply that the company intends to market such products or services.

All the trademarks mentioned in this document are the property of their respective owners.

All rights reserved. We hereby authorise the partial or total reproduction of this document for the exclusive purpose of using the 1760/31 or /33 Video door phone.

INDEX

1. DEVICE GENERAL DESCRIPTION	5
1.1 In a nutshell	5
1.2 How to turn on the screen and access the various functions	5
1.3 How to navigate between applications	6
1.4 How to interpret the reports	8
1.5 How to turn off the screen (Stand-by)	8
1.6 How to send an alarm	8
1.6.1 Panic alarm	8
1.6.2 Technology alarm and intrusion alarm	9
1.7 Screen lock function	9
1.8 How to control a Video door phone reset	10
2. USING THE DEVICE AS VIDEO DOOR PHONE TERMINAL	10
2.1 How to answer an external call	10
2.1.1 Adjustment on OSD menu (On Screen Display)	11
2.1.2 How to answer a call with the “Remote” option enabled	11
2.2 How to answer a call from the switchboard	12
2.3 How to answer an intercom call	12
2.4 Speech activation by pressing the  button (Push to talk mode)	13
2.5 How to access Video Door Phone functions	13
2.6 How to use audio messages (Voice “Post-its”)	14
2.6.1 How to record an audio message	14
2.6.2 How to listen to an audio message	14
2.7 How to call the switchboard	15
2.8 How to call the lift	15
2.9 How to activate a special function	15
2.10 How to open the entrance door without having been called	16
2.11 How to open the garage/driveway gate without having been called	16
2.12 How to activate the Video Door Phone Voicemail	16
2.13 How to turn off the Video Door Phone Voicemail	17
2.14 Activating the “Remote” mode	17
2.15 Deactivating the “Remote” mode	17
2.16 How to view voicemail calls	17
2.16.1 How to delete one or more voicemail recordings	18
2.17 MUTE function	18
2.18 Door open indication	19
2.19 How to make an intercom call	19
2.20 How to check the call log	20
2.21 How to search for a name in the address book	21
2.22 How to add new contacts to your address book	22
2.23 Auto-on function	23
2.24 How to view snapshots	24
2.24.1 How to delete one or more snapshots	24

3. USE OF THE DEVICE AS TERMINAL FOR: HOME AUTOMATION, ACCESS CONTROL, INTRUSION ALARM CONTROL UNIT AND MULTIMEDIA	25
3.1 App Firefox	25
3.2 Yokis Home Automation	26
3.3 MIFARE (Access control Application)	27
3.3.1 How to change the access code for the administrator	29
3.3.2 How to create, delete, or replace a key for the administrator	30
3.3.3 How to manage users	31
3.3.4 How to record accesses and exits	35
3.3.5 How to view a user's log	35
3.3.6 How to view all logs	36
3.4 Gallery	37
3.5 Yokis YnO App	38
3.6 Urmet secure App	40
3.7 Media player	41
3.8 iUVS App	40
3.9 CallMe App	44
3.9.1 Video door phone Configuration	44
3.9.2 Configuration and Use of CallMe App	46
3.10 Configuration of video door phone parameters and Video Door Phone application	47

1. DEVICE GENERAL DESCRIPTION

The following booklet describes how to use the video door phone.

1.1 IN A NUTSHELL

The Video door phone 1760/31 or /33 is a touchscreen device of the 2Voice system that can operate as:

- Advanced Video Door Phone;
- Yokis Home Automation Terminal;
- Terminal for displaying video surveillance cameras;
- Terminal for displaying the intrusion alarm control unit status;
- MIFARE Access Control;
- Urmet Application Manager (Urmet Secure, iUVS, YnO).

The Video door phone uses the Android operating system and is able to perform both the specific functions of Urmet systems and the generic functions of other applications. To optimise user-friendliness, the Video door phone comes with certain factory-preloaded applications.


1.2 HOW TO TURN ON THE SCREEN AND ACCESS THE VARIOUS FUNCTIONS


The 1760/31 or /33 Video door phone screen is normally off and automatically lights up when it receives a video door phone call (see section [How to answer an external call](#)).

In this case, a screen page is displayed from which the user can answer the caller and open the entrance door.

The screen can also be voluntarily turned on by the user, to access one of its many applications. To turn on the screen simply:

- tap anywhere on the screen;
- press the Home button (at the bottom centre of the video door phone) to display the Homepage.


The default Home Page is the Video Door Phone application  , from which you can access the various video door phone functions (you can change this setting and choose another application as your Home Page, for example one of the Home Automation ones).

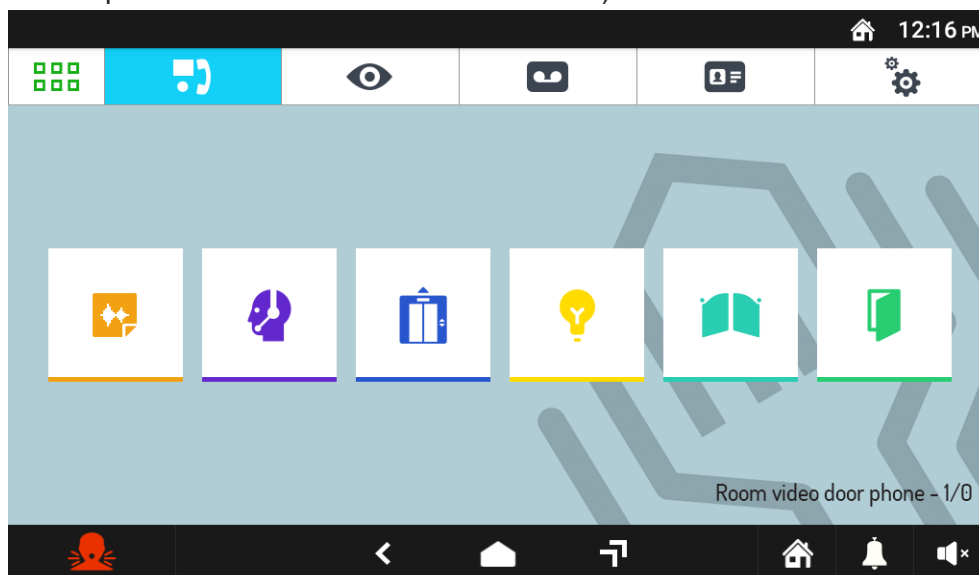

Video Door Phone Home Page (default option)

At the bottom right, the user code and ID code (**1/0**) configured on the device can be displayed.

Room video door phone: It indicates the name of the video door phone assigned when configuring the call forwarding function via the CallMe Set app.

 *If the function has not been configured, the name of the video door phone is not displayed.*

- 1:** Indicates the user code (flat number) in which the video door phone is installed.
- 0:** Indicates the video door phone's ID code.

The video door phone functions are the following:



Recording short audio messages (Post.it)



Calling the switchboard (if there is a switchboard in the 2Voice system)



Lift control (if a Ref. 1083/80 and the function is appropriately configured).



Activation of an auxiliary function, e.g. switching on staircase lights (if there is a Ref. 1083/80 and the function is appropriately configured).



Opening a driveway or garage gate.



Opening the door

WARNING! The functions' availability depends on how the video door phone system has been designed and built. Some of the functions described below may not be available in your system. You may want to check with your installer if a specific function is available or can be implemented.

The other navigation icons in the top bar can be used to:



View footage from the cameras present in the system





View recorded audio-video messages (video door phone Voicemail)



Display the address book and the call log




Change the video door phone settings and/or the operating language

To change the default application tap the icon  , provided in the top left corner, to access the Top Page, then tap the Set-up icon  and finally the Home Page menu.


1.3 HOW TO NAVIGATE BETWEEN APPLICATIONS


The various applications are accessible from the Top Page, by tapping the special icon.

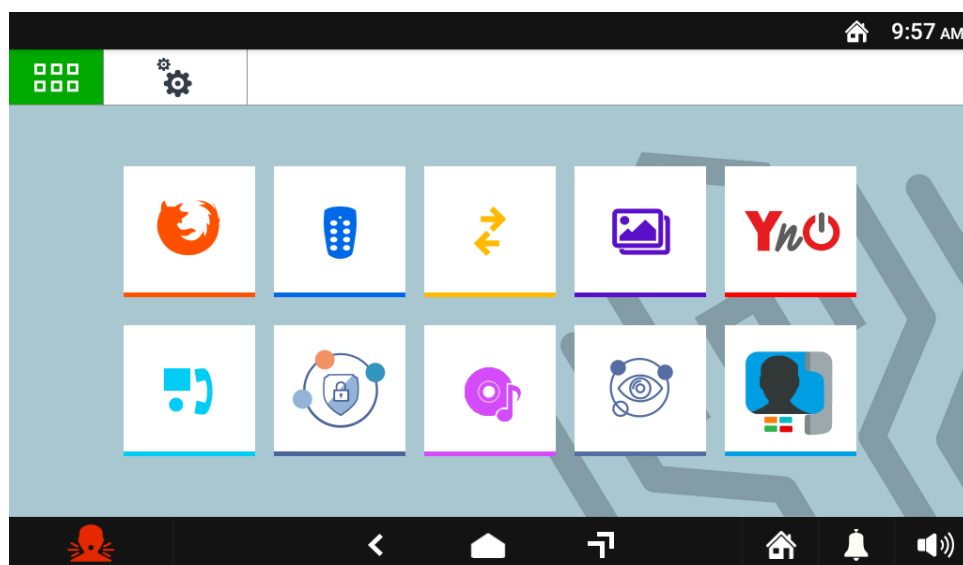

Example of Top Page

For all details on the Apps present on the video door phone, see the relevant paragraphs in the following manual.

To return to the Home Page from any screen page, tap the icon  in the middle of the bottom bar.

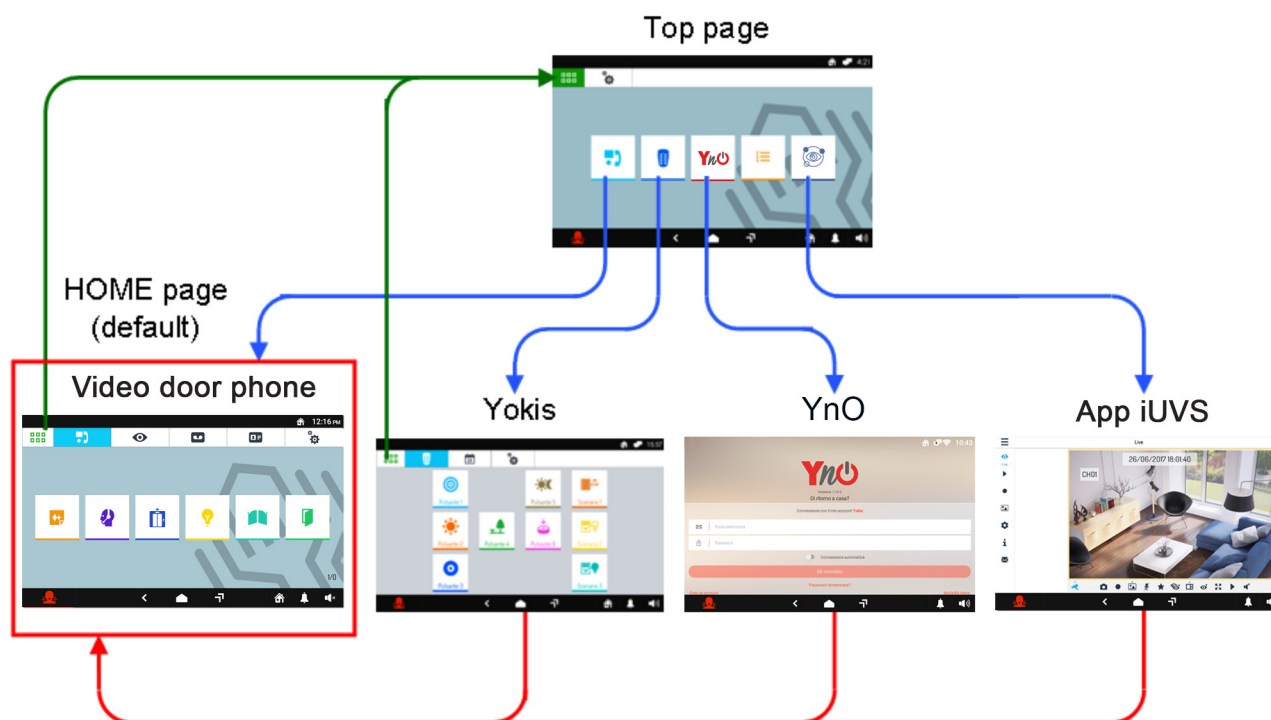

The default Homepage is the Video Door Phone application, but it can be replaced with one of the other applications using the Top Page Configuration menu  .

The other navigation icons in the top bar can be used to:



Return to the previous page.



Go to the page that lists the recently opened applications.



Send a panic alarm signal(function possible if there is a concierge switchboard in the 2Voice system).



Mute the call (Mute) to the Video door phone for a user-settable period of time.



Change the call volume.



Set the following device states: At home / Recording / Remote (only one active at a time).

1.4 HOW TO INTERPRET THE REPORTS

The bar at the top right of the screen shows status information:




Automatic door opening (if this feature is enabled).



At home / Recording / Remote (only one active at a time).



Active WiFi connection



Time.

A new notification is signalled by the blue LED flashing on the Home button of the Video Door Phone from the relative icon in the upper left corner and the corresponding item in the scrolling menu.

The possible notifications are:



Micro SD Card in.



New contact request.



New Post-it not yet listened to.



Missed Call.



Video message not yet viewed.



Panic Alarm sent/cancelled.



Gesture or voice commands enabled



Door open detection

1.5 HOW TO TURN OFF THE SCREEN (STAND-BY)

To manually turn off the screen, press the Home key on the video door phone 1760/31 or /33.

The screen turns off automatically:


- when the user-programmable time-out delay has elapsed (see paragraph Configurations in the [Parameter configuration booklet](#));
- at the end of an incoming call, if the screen was previously off.

1.6 HOW TO SEND AN ALARM

The panic alarm signal is sent from the video door phone to the concierge switchboard in the system. In addition, the panic alert is also sent to all smartphones in which the call forwarding function has been activated via the CallMe app.

1.6.1 Panic alarm

How to send a panic alarm:

- Turn on the screen, if off, by tapping it at any point or by pressing the Home button on the Video door phone.
- Touch the  icon in the lower left corner of the screen, unless it is disabled in the configuration parameters or there is no exchange in the system (for more information, refer to chapter **Configurations** in the [Parameter configuration booklet](#)).
- In the pop-up page that opens, press the **CONFIRM** button to send the alarm.

ATTENTION! In any case, even in the absence of confirmation, the alarm message will be sent at the end of the timeout (5 seconds), unless you cancel the sending by pressing the CANCEL button.

The panic alarm can also be activated via an external device, such as a button, connected to the terminal block behind the Video door phone. In this case the Panic Alarm message will be sent directly without any request for sending confirmation.

SENDING TO SWITCHBOARD

WARNING! The alarm function requires that:

- the video door phone system has a switchboard;
- there is a switchboard operator on duty;
- the switchboard operator has been properly trained on what to do in the event that an alarm is received.

After pressing the button, a panic alarm is sent to the concierge switchboard.

When a panic alarm is received, the switchboard attendant picks up the handset and enters into conversation with the video door phone. The conversation can only be interrupted by the switchboard operator and has no time limit.

In the event that the switchboard operator does not respond within 30 seconds of sending the panic alarm, an alarm notification will be displayed on the switchboard. If the switchboard operator makes a call within 180 seconds of receiving the panic alarm, he/she will automatically enter into conversation with the video door phone.

SENDING TO APP CALL ME


If the call forwarding function has been configured on the video door phone, the “Panic Alarm” message is also sent to all smartphones on which the CallMe app is installed (for full details on how to configure the call forwarding function, please refer to the chapter ***Configuring the Call Forwarding Function*** in the [Parameter configuration booklet](#)). Using the CallMe app, an emergency call can be made from the smartphone to the apartment that sent the panic alert.

1.6.2 Technology alarm and intrusion alarm

The technology alarm and the intrusion alarm are triggered by an external device, e.g. a push-button connected to the terminal board behind the video door phone. After pushing the push-button, the video door phone beeps to confirm and the corresponding alarm is sent to the concierge switchboard.

1.7 SCREEN LOCK FUNCTION

To lock the video door phone screen, press and hold the Home button on the video door phone or press and hold anywhere on the display until the following screen appears.

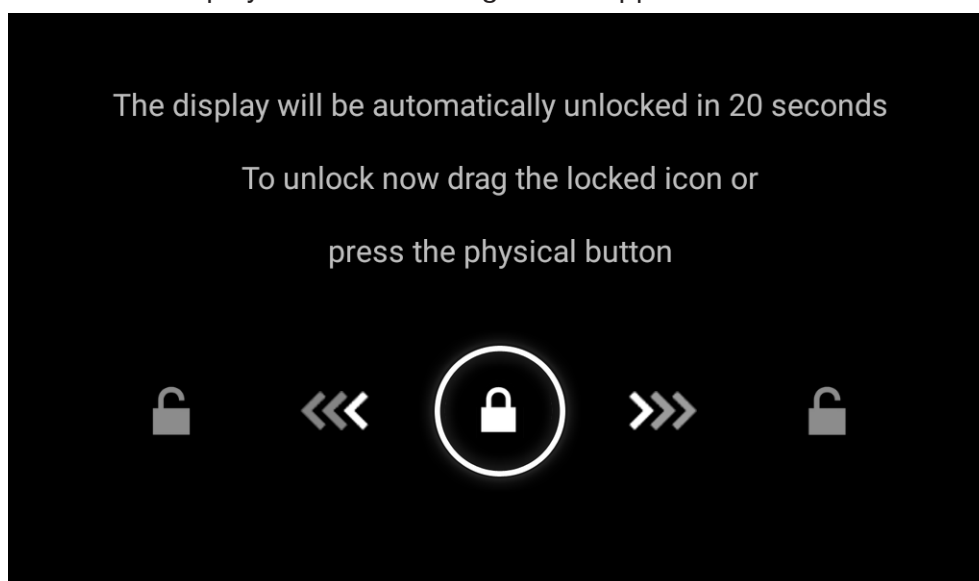

The screen is inhibited for 20 seconds, after which it resumes operation.

It is possible to unlock the lock screen function early by pressing the Home key again or by following the instructions shown on the screen.

The screen lock function is useful when you want to clean the screen, to avoid unintentional activation of the Video Door Phone functions.

1.8 HOW TO CONTROL A VIDEO DOOR PHONE RESET

For a reset of the Video door phone, press and hold the centre button of the Video door phone until it restarts.


2. USING THE DEVICE AS VIDEO DOOR PHONE TERMINAL

The Video Door Phone application is the main application of the 1760/31 or /33 Video door phone and it is also the default Home Page. The application turns the device into an advanced video door phone terminal.





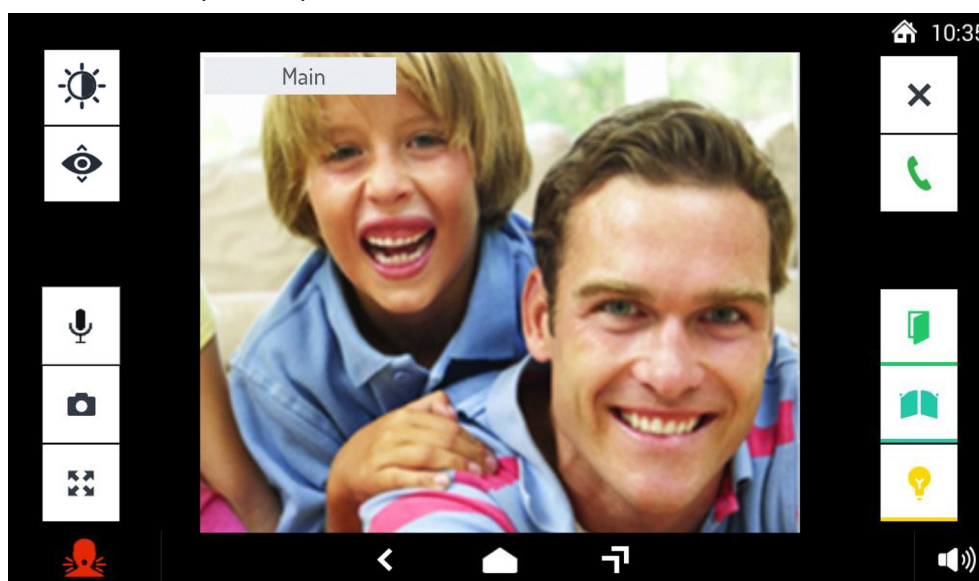

Some of the following operations can also be performed using gesture or vocal commands. For further information, refer to “[Complete booklet for use of gesture commands](#)” or “[Complete booklet for use of vocal commands](#)” by pressing the relevant link or downloading the booklet from www.urmet.com in the relevant product data sheet.







2.1 HOW TO ANSWER AN EXTERNAL CALL

When the Video door phone receives an outdoor door phone video call, it rings and the screen lights up from its default switched-off state. The video door phone will show the image of the caller on the display. If in the apartment there are one or more **Slave** video door phones powered by a local power supply unit and the “**Simultaneous ignition**” video parameter is enabled on all video door phones, when a call is received, all the video door phones will display an image of the caller (for all details, refer to the “[Installation handbook](#)” included with the product). If there are Slave video door phones powered by system Bus, only the Master video door phone will display the caller’s image. To display the caller’s image on a Slave video door phone, press the relevant button.




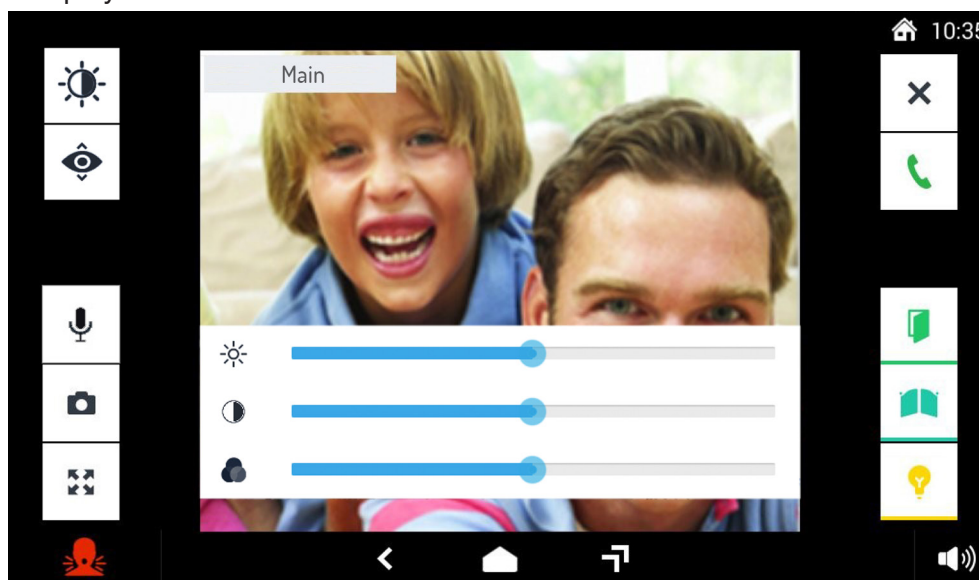
By tapping the various icons you can:

-  Reject the call. If the external calling station is a call module, a message is displayed informing that the call has been rejected.
-  Answer the call and begin a hands-free conversation.
-  Open the door.
-  Open a driveway or garage gate.
-  Access to OSD menu for adjusting video parameters (brightness, contrast and colour). The icon only appears if a call is received from a video call station.
-  Display the image taken by the next camera in the system, if any. The icon only appears if a call is received from a video call station.




-  Take a snapshot of the image displayed on the screen. The icon only appears if a call is received from a video call station.
-  Zoom the image out or in, also changing its format from 4:3 to 16:9. The icon only appears if a call is received from a video call station.
-  Turn the Video door phone microphone off and then back on, to prevent the caller hearing what you are saying. When the microphone is turned off, the corresponding icon is crossed out. The icon is only displayed after the call has been answered.
-  Activate an auxiliary function, e.g. turning on the stair lights. Tapping the icon opens a pop-up window that lists the possible controls. The icon only appears if there is a device in the 2Voice system Ref. 1083/80 and the function is appropriately configured.
-  Close the call. The icon will only be active after the call has been answered.
-  Change the audio volume in the outdoor station-to-Video door phone direction (Video door phone speaker).

2.1.1 Adjustment on OSD menu (On Screen Display)

To access the OSD menu, press the  during a video call or in auto-insertion, the following screen appears on the display:



The following parameters can be adjusted in the OSD menu:

-  Brightness
-  Contrast
-  Colour

To adjust parameters, select the slider bar associated with the parameter you wish to configure and set it to the desired value.

2.1.2 How to answer a call with the “Remote” option enabled


If the “**Remote**” option has been activated in the flat and the call forwarding function has been configured and activated, when a call is received, in addition to the video door phones, the smartphones on which the CallMe app has been installed will also ring.

If there is more than one video door phone in the apartment Ref. 1760/31 or /33 all with the “**Simultaneous ignition**” parameter activated (refer to ***Installation Manual***), the caller’s image will be displayed on the Slave video door phones.

For more information on configuring the call forwarding function, please refer to the chapter “**Call Forwarding Settings**” on the [Parameter configuration booklet](#).

2.2 HOW TO ANSWER A CALL FROM THE SWITCHBOARD

When the Video door phone receives a call from the switchboard, it rings and the screen lights up from its default switched-off state.

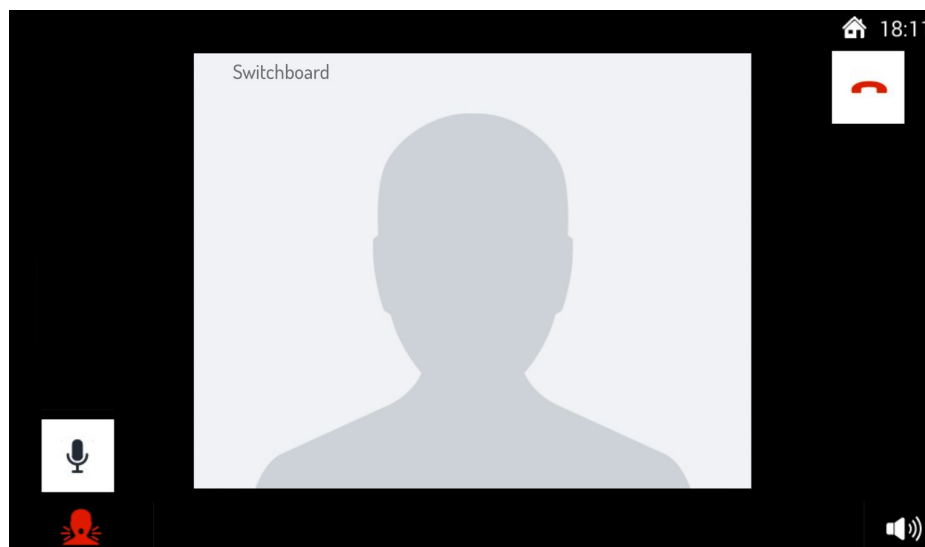

To answer the call and begin a hands-free conversation tap the icon .

After answering, by tapping the various icons you can then:



Turn the Video door phone microphone off and then back on, to stop the switchboard operator hearing what you are saying. When the microphone is turned off, the corresponding icon is crossed out. The icon is only displayed after the call has been answered.




Close the call.



Change the audio volume in the switchboard-to-Video door phone direction (Video door phone speaker).

2.3 HOW TO ANSWER AN INTERCOM CALL

When the video door phone receives an intercom call, it rings and switches on the display, which is normally off.

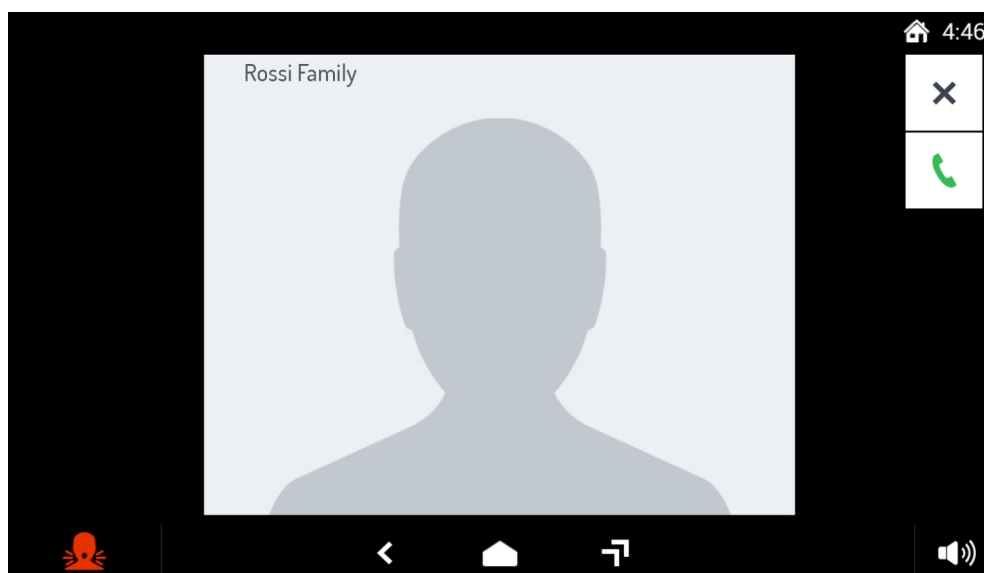

By tapping the various icons you can:



Reject the call. The message "Call rejected" is displayed on the calling device.



Answer the call and begin a hands-free intercom conversation.



Turn the Video door phone microphone off and then back on, to stop the caller from hearing what you are saying. When the microphone is turned off, the corresponding icon is crossed out. The icon is only displayed after the call has been answered.






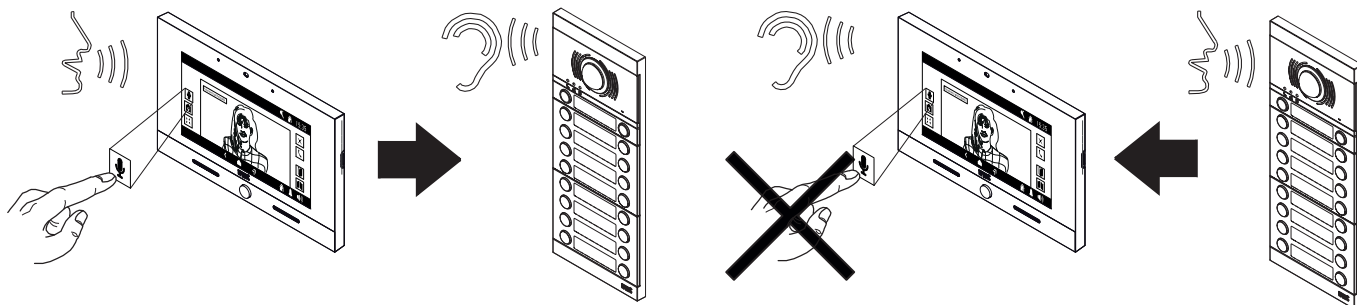
Close the call.



Change the RX audio volume.

2.4 SPEECH ACTIVATION BY PRESSING THE BUTTON (PUSH TO TALK MODE)

If communication between the handset and the video door phone is disturbed or absent, make sure you remove the transparent film covering the display of the video door phone. If the film has been removed and there is still noise on the audio, it is possible to activate the two speech channels (in and out) individually. After receiving a call, briefly press the button  to activate door phone speech, then if the button  is held down, the outdoor audio channel is activated and the caller can be spoken to. To listen, the button  must be released.




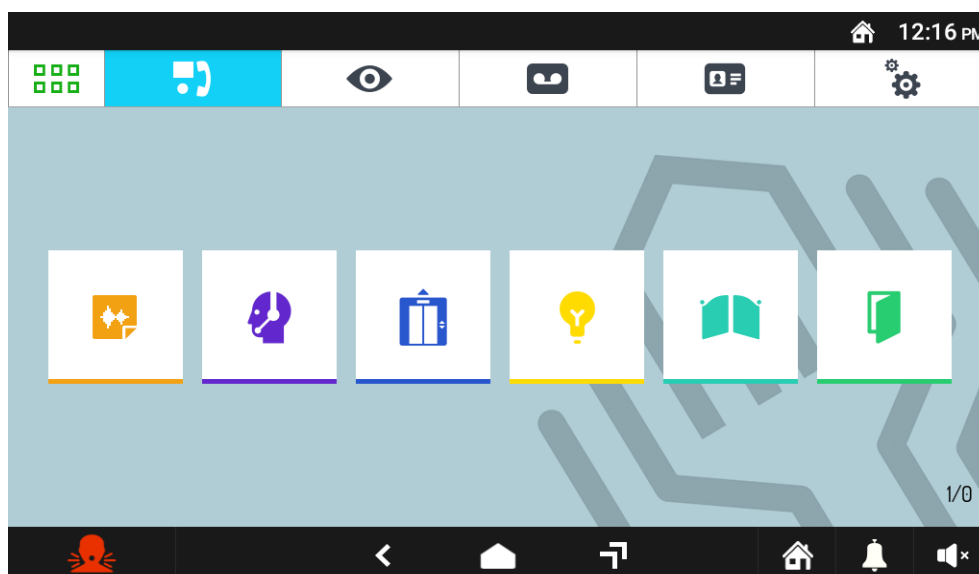
ATTENTION! When the “Push to Talk” mode is active, it is not available to activate or deactivate the video door phone microphone.

Push to Talk mode can be activated from the video door phone configuration menu (see [Parameter configuration booklet](#) in the “**Audio**” chapter).

2.5 HOW TO ACCESS VIDEO DOOR PHONE FUNCTIONS

Turn on the screen, if off, by tapping it at any point or by pressing the Home button on the Video door phone. The Home Page, i.e. the Video Door Phone main page, is displayed if the default configuration has been maintained.

If a different Video Door Phone Home Page has been selected, go to the Top Page and select the Video Door Phone application  .



The Video Door Phone page shows the functions that can be used. Select your required Video Door Phone function by tapping the corresponding icon.

2.6 HOW TO USE AUDIO MESSAGES (VOICE “POST-ITS”)

The Video door phone allows you to record short audio messages that can be subsequently listened to by their recipients after they have returned home or to the office.

To record or listen to messages:


- Access the main page of the Video Door Phone application and press the **Audio Messages** icon




A pop-up window will open that can be used to record and listen to messages.

To close the pop-up window tap the **X** icon at the top right.

2.6.1 How to record an audio message

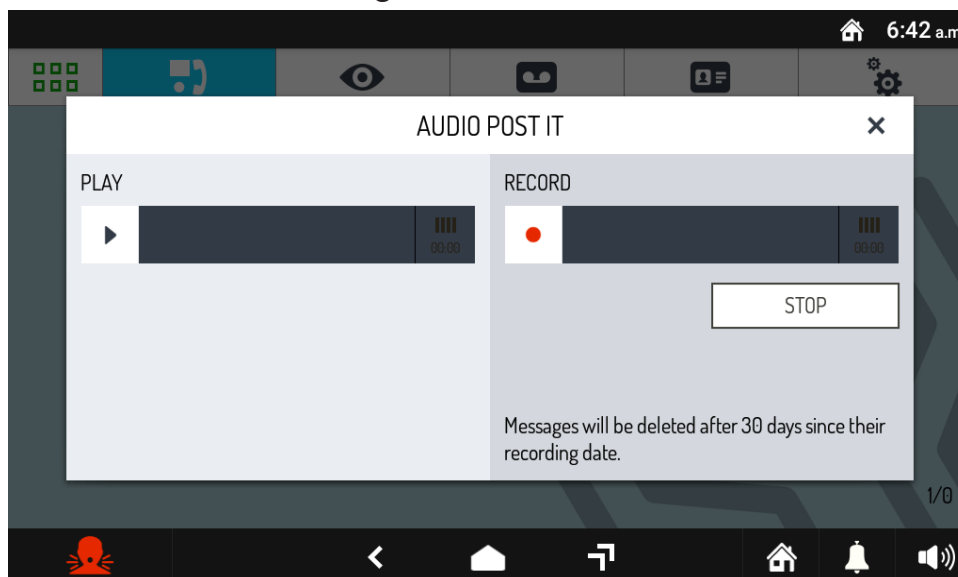

Press the **RECORD**  icon to start a new recording. The maximum permitted duration of the message is 10 seconds. The time to the end of recording is shown on a scroll bar.


To stop recording before the end of the available time tap the **STOP** button.


At the end of the recording, the message is automatically saved, with recording date and time, the Home key LED starts flashing and a message appears on the relevant icon.

The recorded message will be automatically deleted after 30 days.


2.6.2 How to listen to an audio message

The presence of new audio messages is signalled by:


- flashing the Home key LED.
- a number in the bottom right corner in the icon of the Audio messages  (the number refers to how many new messages there are).

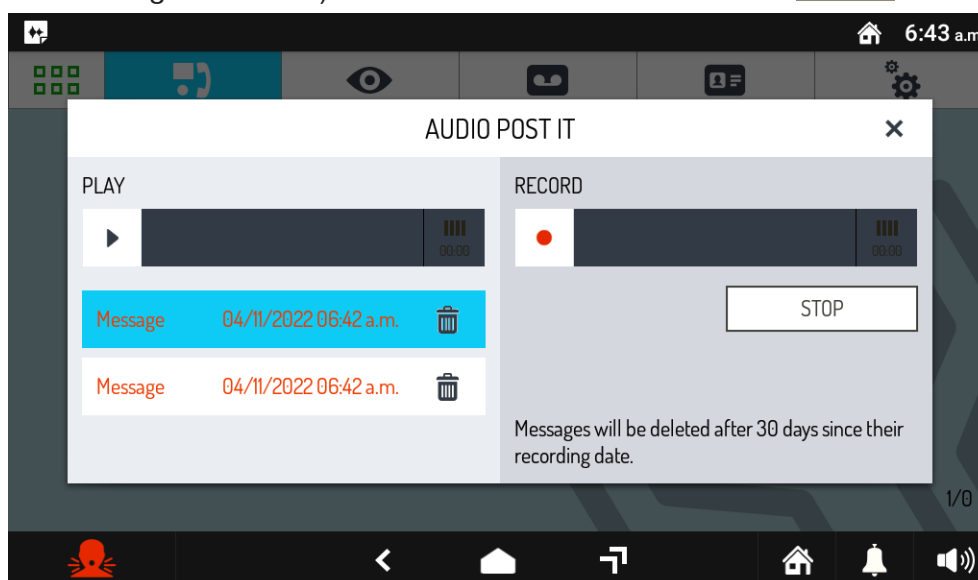

To listen to a message, press the  icon. Messages are listed by date and time.

Select the desired message and press the **PLAY**  icon to start playback. Message playing cannot be stopped before it ends.


Tap the icon  delete the message.

When there are no more new messages to listen to, the Home key LED turns off and the icon of Audio Messages function returns to the default state .

2.7 HOW TO CALL THE SWITCHBOARD

If the Video Door Phone system has a switchboard, to call it:

- Access the main page of the Video Door Phone application.


- Tap the icon .

The call is forwarded only to the respective switchboard. If the switchboard operator cannot answer, for example, because they are not there, the call is stored as a missed call.


2.8 HOW TO CALL THE LIFT

If the video door phone system is properly configured (for more information refer to the [Parameter configuration booklet](#)), you can control the lift by pressing the relevant button.

- Access the main page of the Video Door Phone application .

- Press the icon .

The following screen appears:

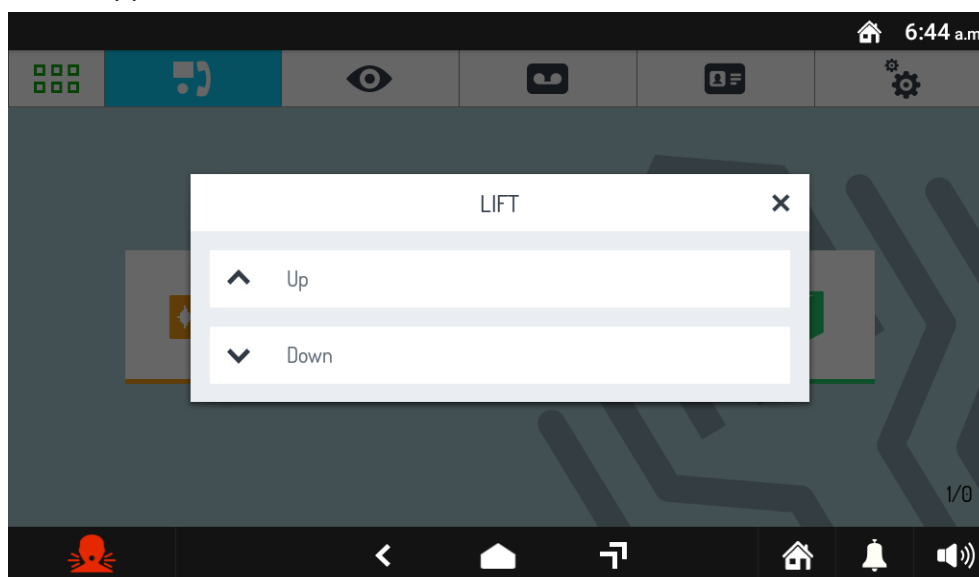


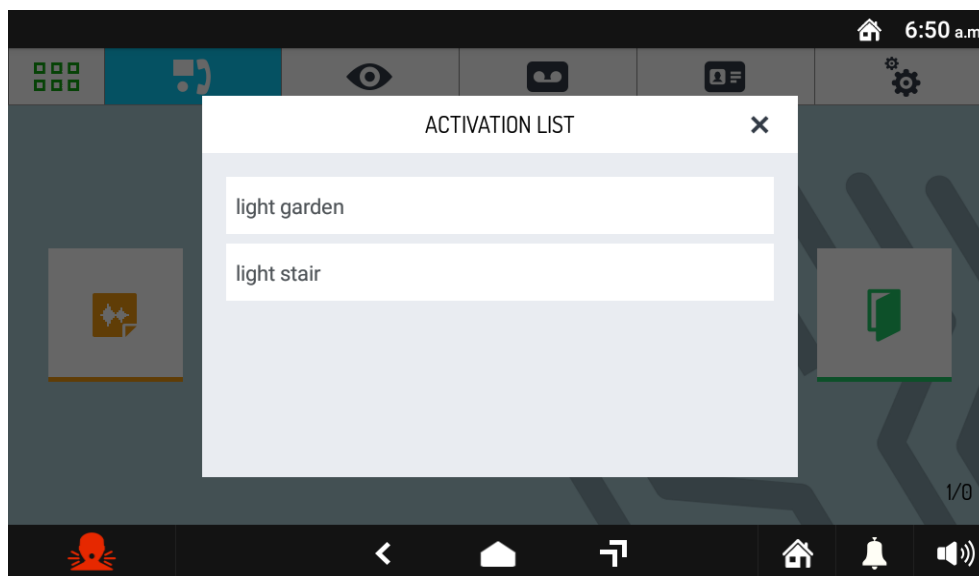
The “Up” and “Down” buttons allow the lift to be controlled according to the programming carried out by the installer on the video door phone configuration and special decoder Ref. 1083/80.

2.9 HOW TO ACTIVATE A SPECIAL FUNCTION

If the Video Door Phone system is equipped with a special decoder that is properly configured Ref. 1083/80, you can activate a special function (staircase lights, garden lights, etc.).

- Access the main page of the Video Door Phone application.

- Tap the icon .




- Tapping the icon opens a pop-up window that lists the possible functions. Tap your required function to activate it.
- To close the pop-up window tap the **X** icon at the top right.

The same special functions can also be activated by tapping the corresponding icon present in the screen page that is displayed when you answer an incoming external call (see section [“How to answer an external call”](#)).


2.10 HOW TO OPEN THE ENTRANCE DOOR WITHOUT HAVING BEEN CALLED

If properly configured, your entrance door can be opened even when you have not been called from an outdoor station.

- Access the main page of the Video Door Phone application.
- Tap the icon . Sending this control, and not its performance, is confirmed by a pop up message.

2.11 HOW TO OPEN THE GARAGE/DRIVEWAY GATE WITHOUT HAVING BEEN CALLED

If properly configured, your garage or driveway gate can be opened even when you have not been called from an outdoor station.

- Access the main page of the Video Door Phone application.
- Tap the icon . Sending this control, and not its performance, is confirmed by a pop up message.

2.12 HOW TO ACTIVATE THE VIDEO DOOR PHONE VOICEMAIL

To activate the Video Door Phone Voicemail:

- Tap the icon  in the bottom right corner.
- Select the **RECORDING**  button.
- The icon displayed switches from  to .

From this moment onwards, all calls from the outdoor station will ring the Video door phone and will be recorded. The user may choose to answer the call while the voicemail message is being recorded. In this case, the recorded message will not be stored.

The Video Door Phone Voicemail can be set up according to the 3 different operation modes:

- in the calling phase recording is immediately activated on the Video door phone;
- in the calling phase a customised audio message is played at the outdoor calling station;
- in the calling phase a customised audio message is played at the outdoor calling station and a beep is heard after which to leave a message.

For more details refer to chapter “**Configurations**” in the [Parameter configuration booklet](#)).

2.13 HOW TO TURN OFF THE VIDEO DOOR PHONE VOICEMAIL

To turn off the Video Door Phone Voicemail:

- Press the  icon in the lower right corner.
- Select the **AT HOME**  icon.
- The icon displayed switches from  to .





From this moment onwards, all calls from the outdoor calling station will not be recorded.

2.14 ACTIVATING THE “REMOTE” MODE

The “Remote” mode allows forwarding an audio/video or audio only call to a smartphone with Android or iOS operating system.

ATTENTION! The call forwarding function must be configured and activated on the video door phone in order to enable this mode (for more information, refer to chapter “**Call forwarding settings**” in the [Parameter configuration booklet](#)).



To activate the “Remote” mode:

- Press the  icon in the lower right corner.
- Select the  **REMOTE** icon.
- The icon displayed switches from  to .

From now on, in addition to the video door phones, smartphones on which the CallMe App has been installed and configured will also ring.

2.15 DEACTIVATING THE “REMOTE” MODE



To deactivate the “Remote” mode.


- Press the  icon in the lower right corner.
- Select the **AT HOME**  icon.
- The icon displayed switches from  to .

From now on, calls will no longer be forwarded to smartphones on which the CallMe App has been installed and configured, only panic alarm notifications sent by the video door phone in the apartment will be forwarded.



2.16 HOW TO VIEW VOICEMAIL CALLS

How to view calls stored as voicemail:

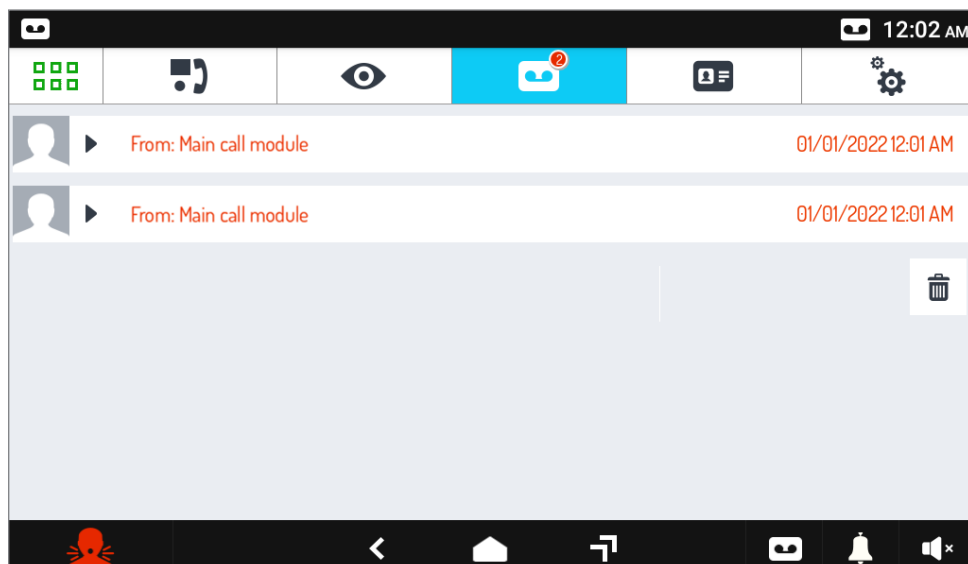- Access the main page of the Video Door Phone application .
- Press the  icon. If there are new calls in the messaging service, their number is displayed in a red circle next to the icon.




A list of voicemail calls opens; each call is identified by the name of the outdoor calling station and by the call date and time.

Select the call that you wish to view details. A pop-up window opens. Tap the button  to listen to the recorded message, the button  to close the window.




2.16.1 How to delete one or more voicemail recordings

How to delete one or more recorded messages:

- Open the list of voicemail calls (see previous section)
- Tap the button .
- Select the recorded message(s) that you want to delete (the **SELECT ALL** button selects all recorded messages).
- Tap the **DELETE** button to delete the recordings or **CANCEL** to cancel the operation without deleting the recordings.

2.17 MUTE FUNCTION


This function allows excluding the call ringer on the video door phone and any additional connected ringers.

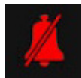- Press the  icon in the lower right corner.
- A pop-up window opens with the available MUTE duration times:
 - 15 minutes;
 - 30 minutes;
 - 1 hour;
 - 2 hours;
 - 4 hours;
 - 8 hours;
 - 24 hours;
 - Permanent.
- Tap the icon corresponding to the time that you wish to set.
- The pop-up window closes and the icon changes from  to , to indicate that the **MUTE** mode is active.


From now on, all calls will be received but the video door phone will not ring.

When the MUTE time expires, the video door phone will return to ringing normally to calls, without the need for any intervention.

The MUTE function can be stopped prematurely, as follows:

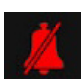
- Press the  icon in the lower right corner.

- A pop-up window opens showing the remaining time of MUTE function

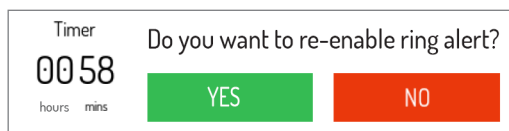

- To stop the MUTE function and reactivate the ringer, press the **YES** button.

2.18 DOOR OPEN INDICATION

The video door phone has the  icon in the upper bar of the display, which indicates whether the door has remained open on one or more entries. The door open condition is signalled by the call stations only if the duration of this event is at least 30 seconds.

 *The function must be enabled by the installer when configuring of the video door phone.*

The function is related to the status of the SP terminal of call stations and requires a door open sensor.

ATTENTION! The door open indication is displayed only on video door phones on which door opening was carried out following the last call received.

 *In addition to the icon on the display, the LED of the Home key flashes on the video door phone.*

When the door or any doors left open are closed, the icon will no longer be visible on the display and the Home button LED will stop flashing.


2.19 HOW TO MAKE AN INTERCOM CALL

To make an intercom call with another Video door phone:

- Access the main page of the Video Door Phone application



- Tap the icon .

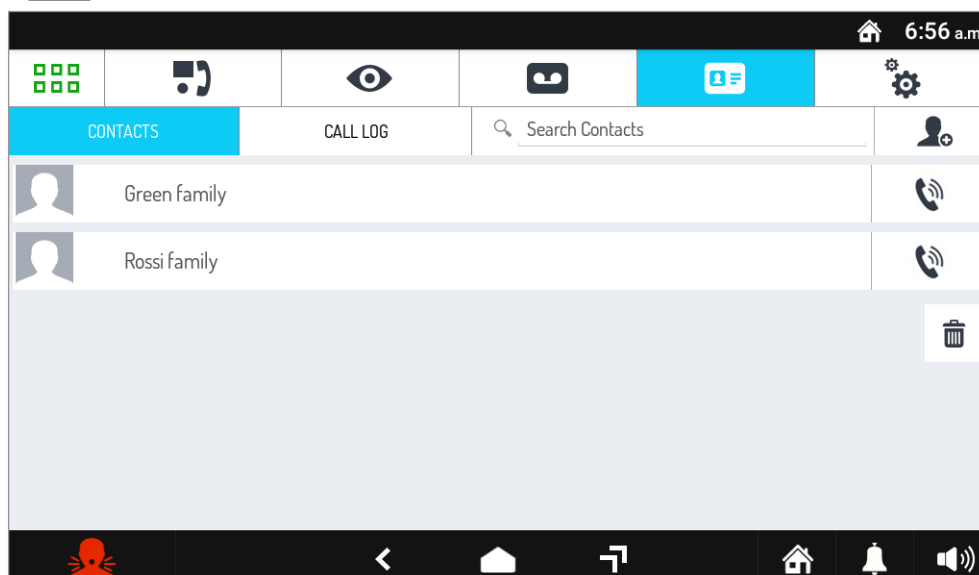


- The contact directory is displayed, showing the contacts added by the user.


In order to add a new contact, follow the procedure outlined in section “[How to add new contacts to your address book](#)”.

- To call a contact tap the icon  located next to it.

- The following window will display and the contact is called.

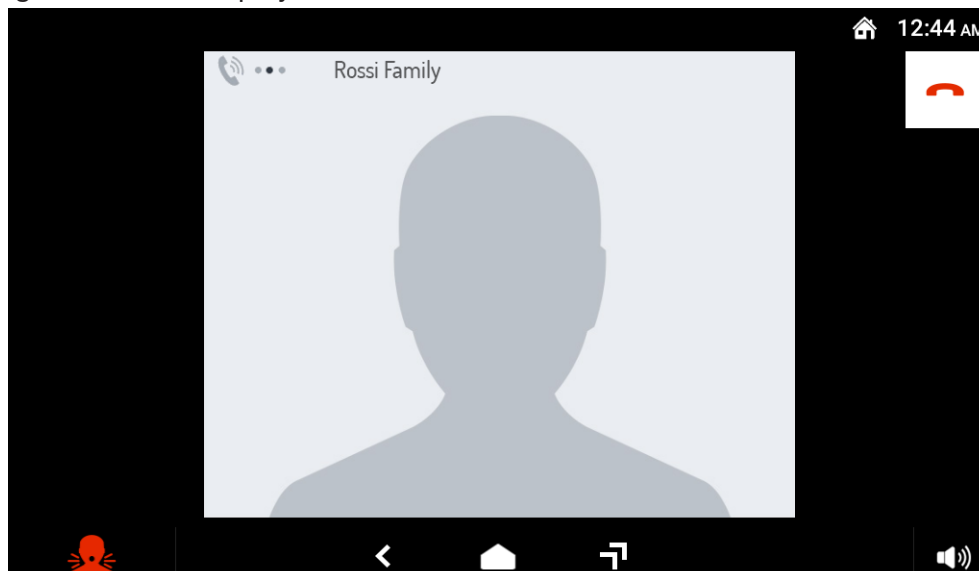




For a description of the icons shown in the window see the section “[How to answer an intercom call](#)”.

- If the called contact answers the call, basic voice communication is activated.
- If the called contact does not answer the call, the call is automatically terminated. You can terminate a call by tapping the icon .
- If the called user is already in conversation with another user (line busy), the call is terminated, the video door phone beeps 4 times and a pop-up message indicating “**BUSY**” appears on the display.


2.20 HOW TO CHECK THE CALL LOG

To examine the log of incoming and outgoing calls:

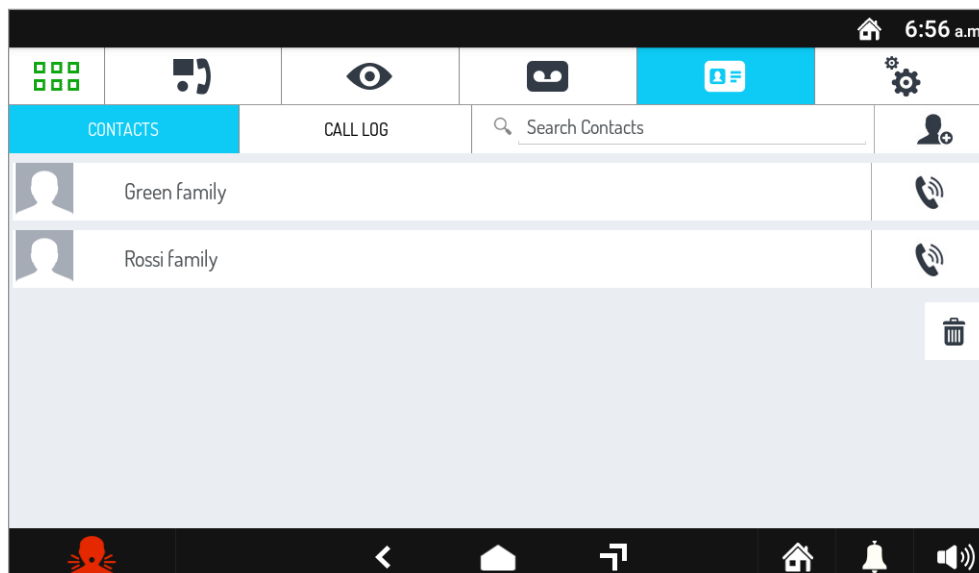


- Access the main page of the Video Door Phone application .
- Press the  icon.

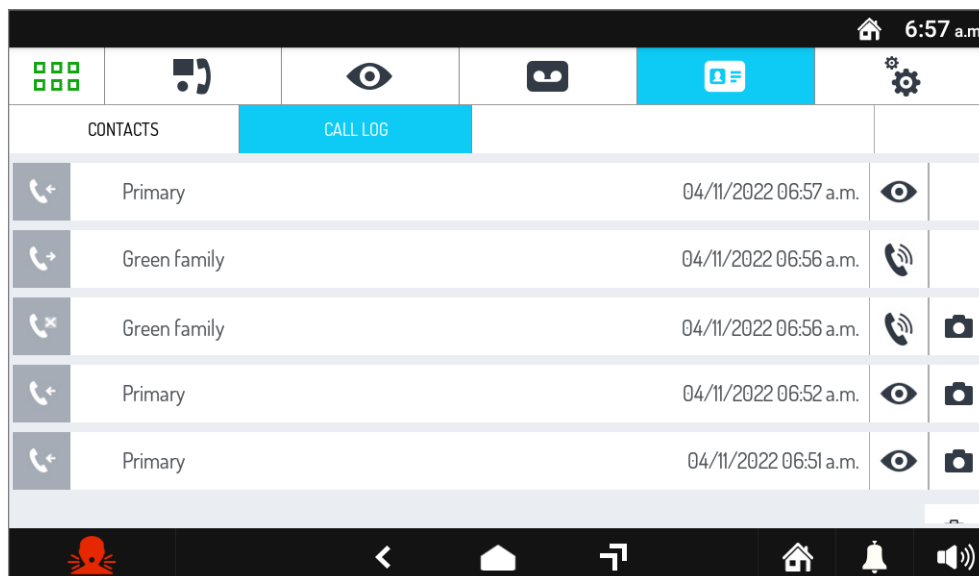


- The address book will open. Tap the icon **CALL LOG**.
- A page will open listing, in chronological order, the incoming, outgoing, and missed calls.





For each call the following information is shown:

- An icon that shows whether the call was incoming  , outgoing  or if it was missed  .
- The identifier or name of the caller or the called contact.
- Date and time of the call.


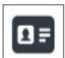
If the contact is another video door phone or a switchboard, the icon  , is displayed to call it back directly. For details on the calling procedure see section [“How to make an intercom call”](#) or section [“How to call the switchboard”](#).


If the contact is a video call station, the following icons appear:

-  allows for automatic entry at the call station.
-  displays the screenshot taken by the call station when the button to initiate the call is pressed.

2.21 HOW TO SEARCH FOR A NAME IN THE ADDRESS BOOK

In the directory, names are listed in alphabetical order. To avoid scrolling through the entire list, it is possible to use the direct search function to find a name.

- Access the main page of the Video Door Phone application.  .
- Tap the icon  .

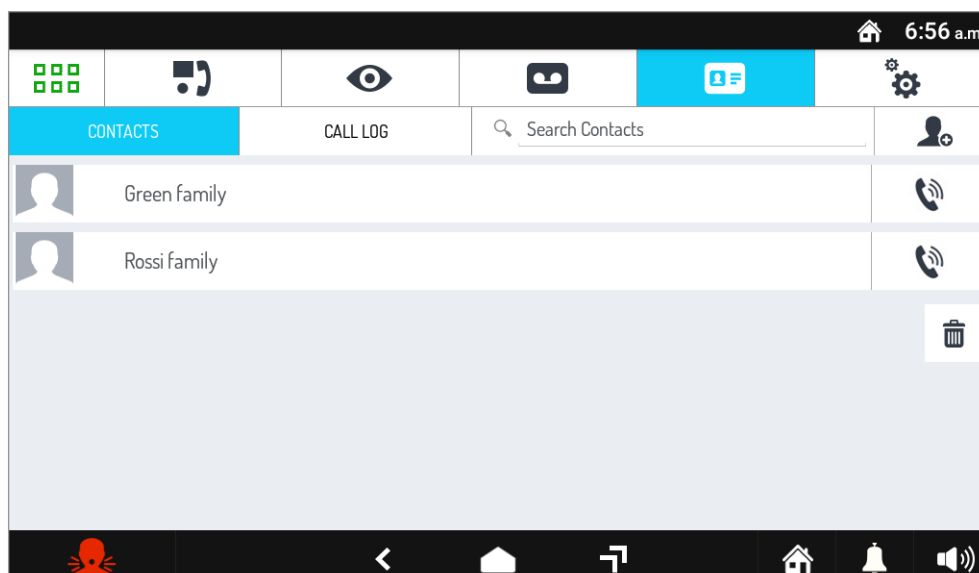


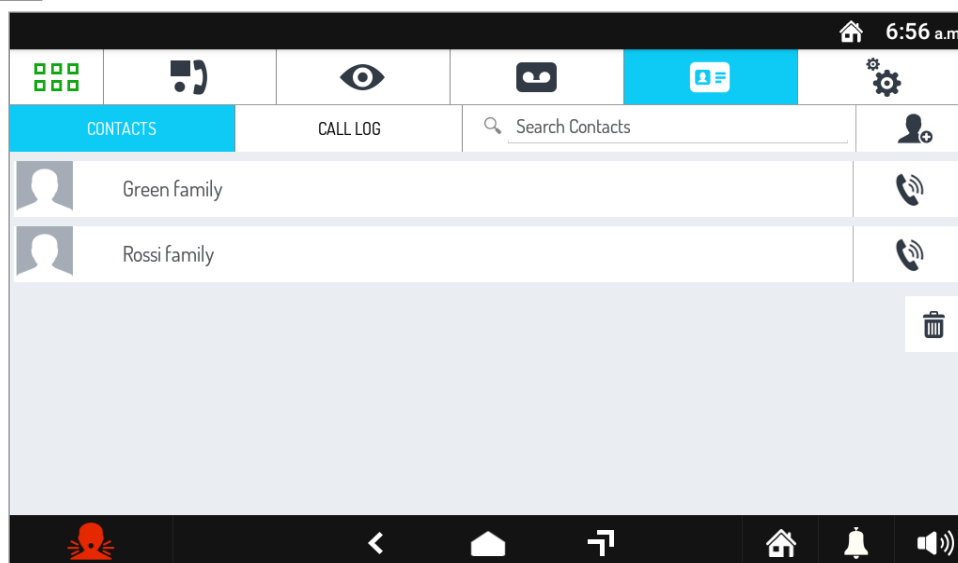
- The address book will open. Tap the **Search Contacts** field at the top right.
- A virtual keypad is displayed on the screen, with which you can type in the name you are searching for. As more characters are typed in, only the names that meet that character sequence are listed. As soon as the searched name comes up, you can select it by tapping it. No need to complete the name before selecting it.
- By tapping the icon **X** in the Search the address book field, you will delete all entered characters and quit the search function.


2.22 HOW TO ADD NEW CONTACTS TO YOUR ADDRESS BOOK


You can add new contacts to your address book in the following manner:

- Access the main page of the Video Door Phone application  .


Tap the icon  .



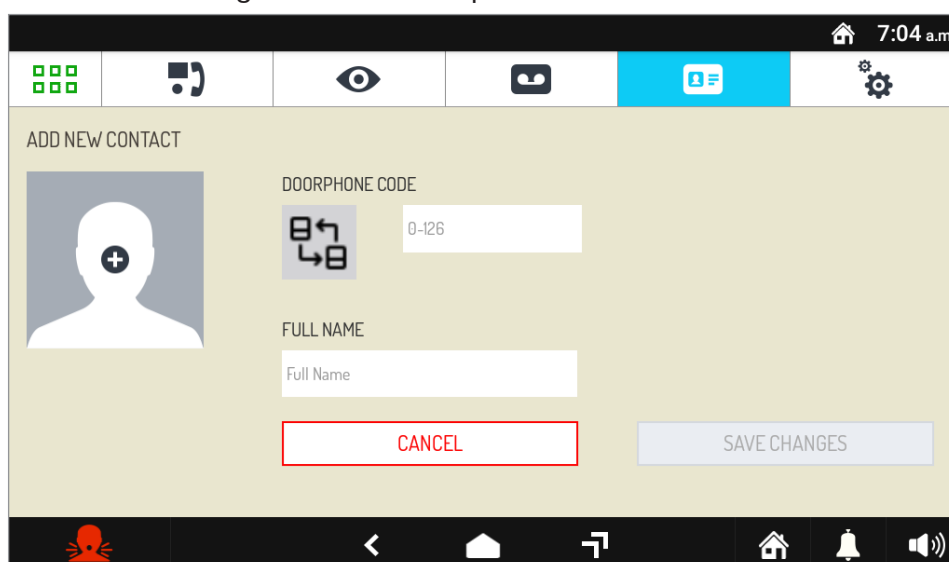

- The Contacts directory is displayed. Press the  icon.
- The request screen for entering a new contact opens.

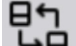

1. Contact type

Select the following icon  to modify the contact type.

-  External contact: call to a video door phone in another apartment but within the same video door phone riser
-  Internal contact: call to a video door phone in the same apartment.

2. Video door phone ID code

Select the text box to insert the video door phone ID code.


- For external contacts, permissible codes range from 0 to 126
- For internal contacts, permissible codes range from 0 to 3


Use the virtual keypad and insert the video door phone ID code.

3. Contact name

Select the text box to insert the contact name.



Use the virtual keypad and insert the contact name.


- The **NEXT** icon appears in the data entry window, used to confirm the data entered and move on to the next field.
- You can also attach an image to your request, by tapping the icon . A pop-up window will open through which you can use an image captured by your video camera or contained in the internal memory.
- Press the key to save the contact in the directory.
- Press the key to cancel and return to the contact page.



Touching the icon  in the bottom left-hand corner takes you back to the address book.


2.23 AUTO-ON FUNCTION

To use the auto-on function, i.e. display the images taken by the cameras of the outdoor call stations or by other cameras of the system, follow the procedure below:

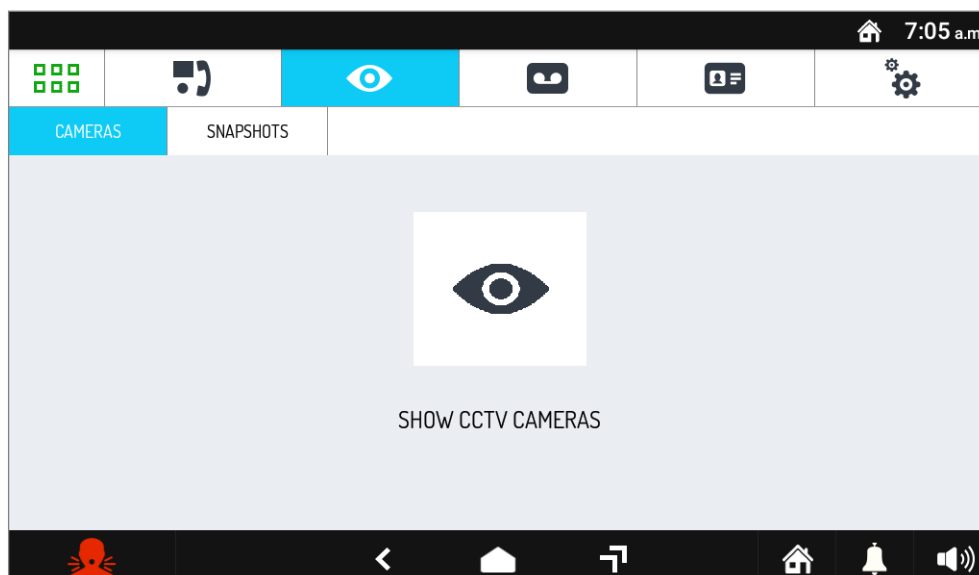- Access the main page of the Video Door Phone application .
- Press the  icon on the upper selection menu.






- Press the icon  above the words “**Show CCTV cameras**” to start the auto-on.
- The display shows the image taken from the call station. The first image displayed is the one coming from the main call station with ID 0, by pressing the key  it is possible to move on to the next call stations or to any control cameras.
- During image viewing all conversation features are active (door and driveway/garage gate opening, storing a snapshot, and so on).

- Press the  icon to interrupt the auto-on. Viewing also stops automatically after 10 minutes.

2.24 HOW TO VIEW SNAPSHOTS

To view the snapshots captured by the video door phone, follow the procedure below:


- Access the main page of the Video Door Phone application .
- Press the  icon.
- Press the **SNAPSHOTS** icon.

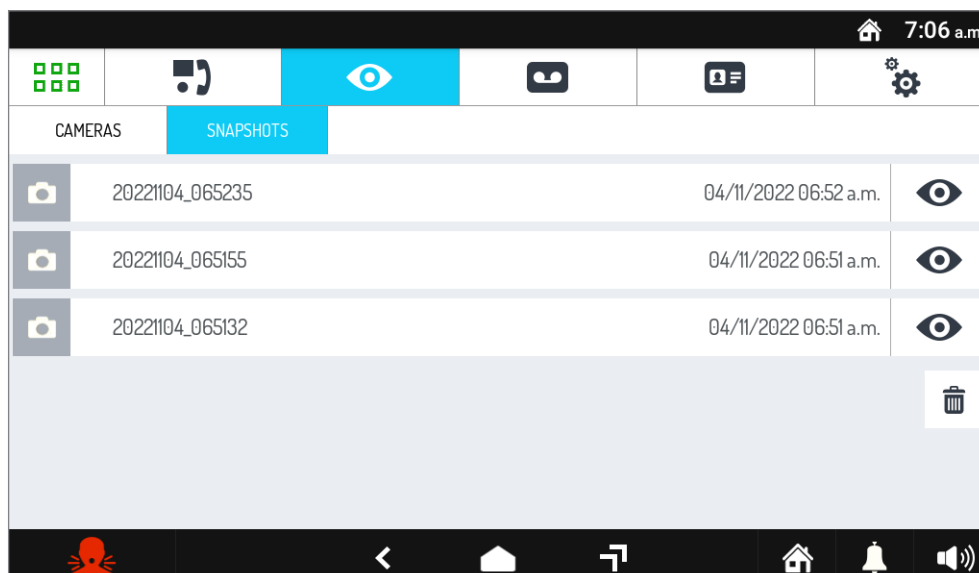

- The list of available snapshots will open. Tap the name of the snapshot you are interested in to see it enlarged in a pop-up window. For each snapshot, a storage date and time are shown. Tap the **X** icon to close the pop-up window.


2.24.1 How to delete one or more snapshots


To delete one or more snapshots:


- Open the list of available snapshots (see previous section)
- Press the .
- Select the snapshot(s) you want to delete by pressing on the relevant tick square. To select them all, press the **SELECT ALL** button.
- Confirm the deletion by pressing the **DELETE** button or cancel the operation by pressing the **CANCEL** button.


3. USE OF THE DEVICE AS TERMINAL FOR: HOME AUTOMATION, ACCESS CONTROL, INTRUSION ALARM CONTROL UNIT AND MULTIMEDIA


3.1 APP FIREFOX


Switch on the screen, if switched off, by touching it anywhere or pressing the Home button. The Homepage is displayed, which corresponds to the main Video Door Phone page , if the default configuration has been maintained.

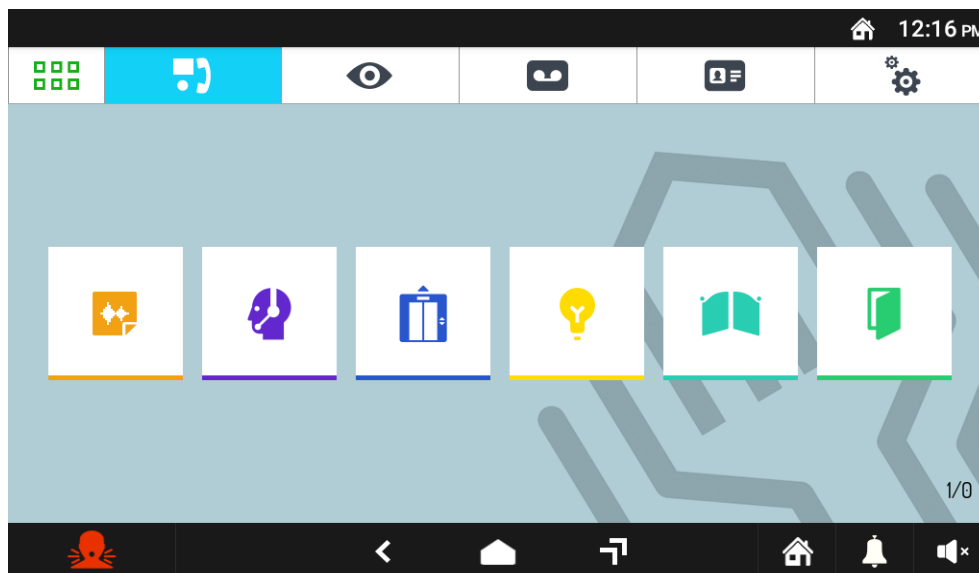

Press the icon  to go directly to the Top Page.

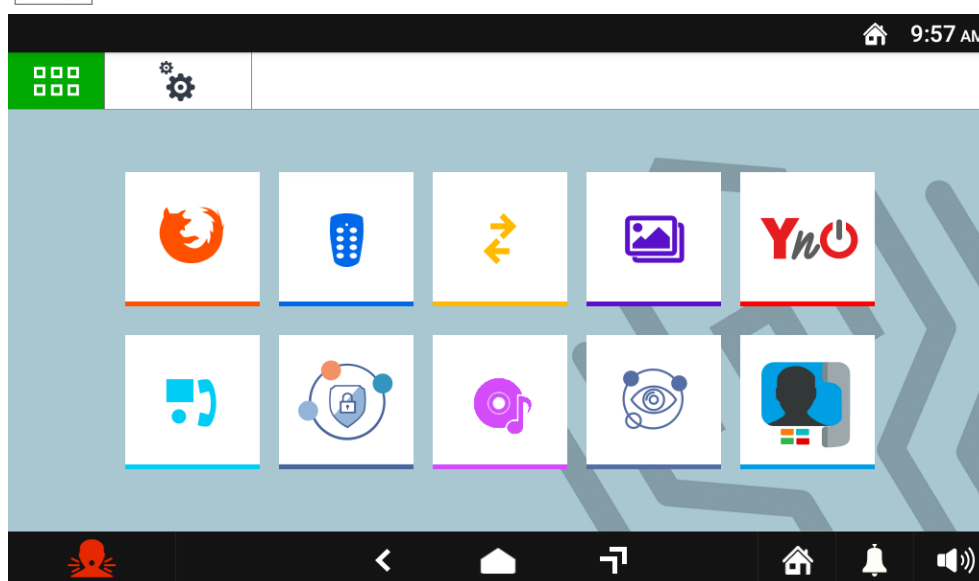

Press the icon . The main page of the Firefox app opens.

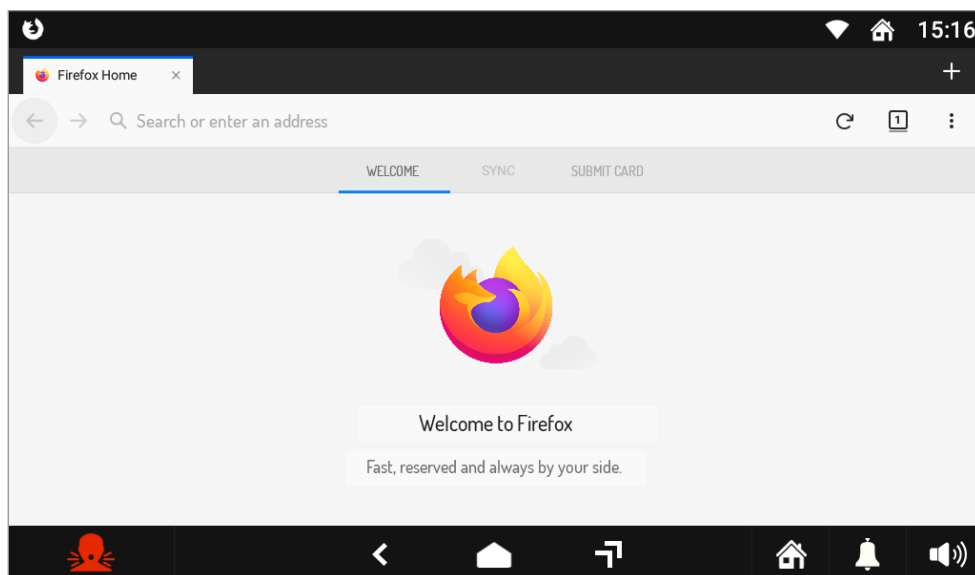



The application allows you to use the Firefox web browser to navigate the Internet.


WARNING! In order to be able to navigate the Internet via the Firefox app, WiFi must have been activated on the video door phone and a network must have been selected to connect to (see section **Activating WiFi on the video door phone** in the [Parameter configuration booklet](#)).

3.2 YOKIS HOME AUTOMATION

Turn on the Video door phone by tapping the screen at any point or by pressing the Home button.

The screen will display the Home Page (the default Home Page is the Video door phone one  but you can change it in the Setup menu).

If the Home Page is not the Yokis Home Automation one, press the icon  in the top left corner of the Home Page to reach the Top Page:

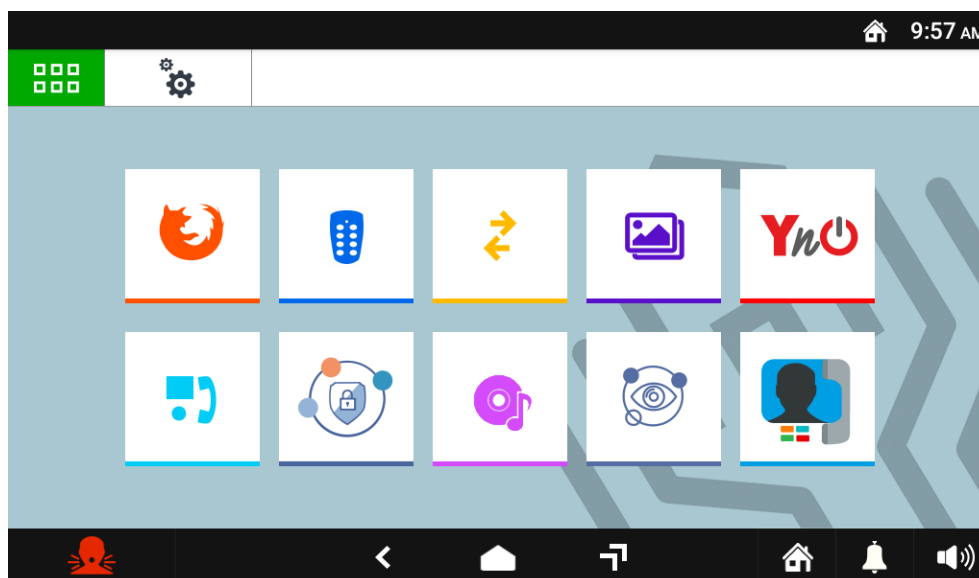

From the Top Page press the button




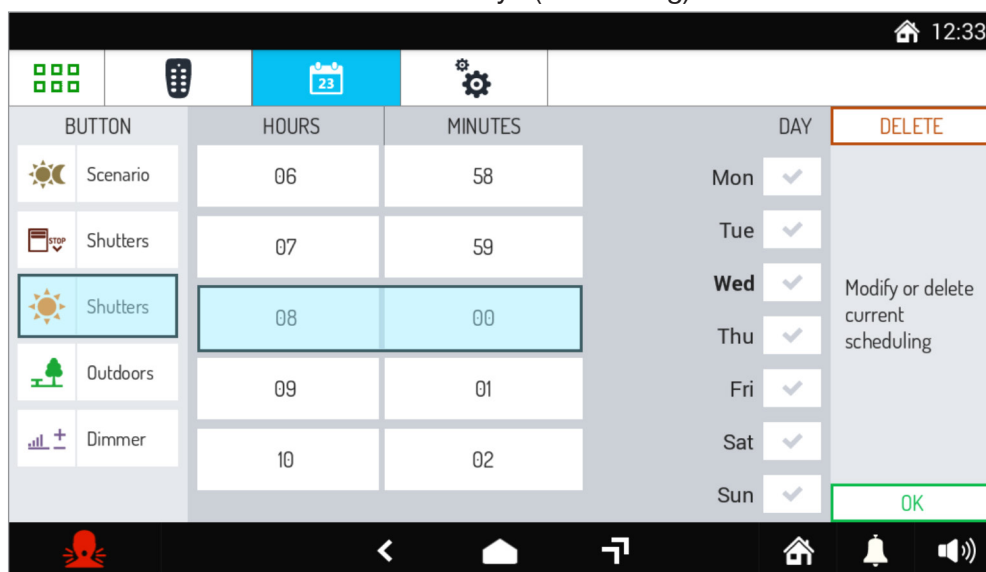
to reach Yokis Home Automation:




From here, select your required control or controls, or access the scheduling page.

To schedule a control for one or more weekly occurrences press .

In the new screen the button **NEW**  can be used to create a new scheduling. The next screen will open where you can set the activation times and days (scheduling):



Press the button  to return to the Home Page.


3.3 MIFARE (Access control Application)


MIFARE is an application that can be used to record any instance of persons accessing or leaving the apartment or external personnel accessing or leaving the office. Traffic is recorded by placing proximity keys next to the left side of the Video door phone.

The application administrator can record the keys and associate them with external staff, as well as delete enabled keys or replace them with others. Each user, swiping his or her key on the Video door phone, will record an access or exit and can also access his or her traffic log.

The administrator can access the logs of all users and delete them if necessary.


Switch on the screen if it is off, by tapping it any point or by pressing the Home button. Page is displayed,

which corresponds to the main page of the video door phone system , if the default configuration has been maintained.

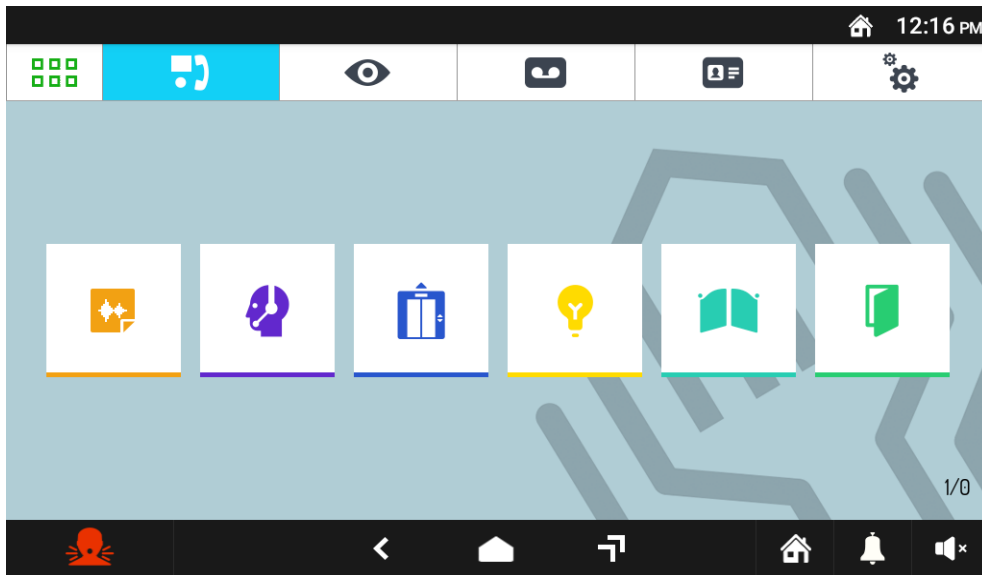


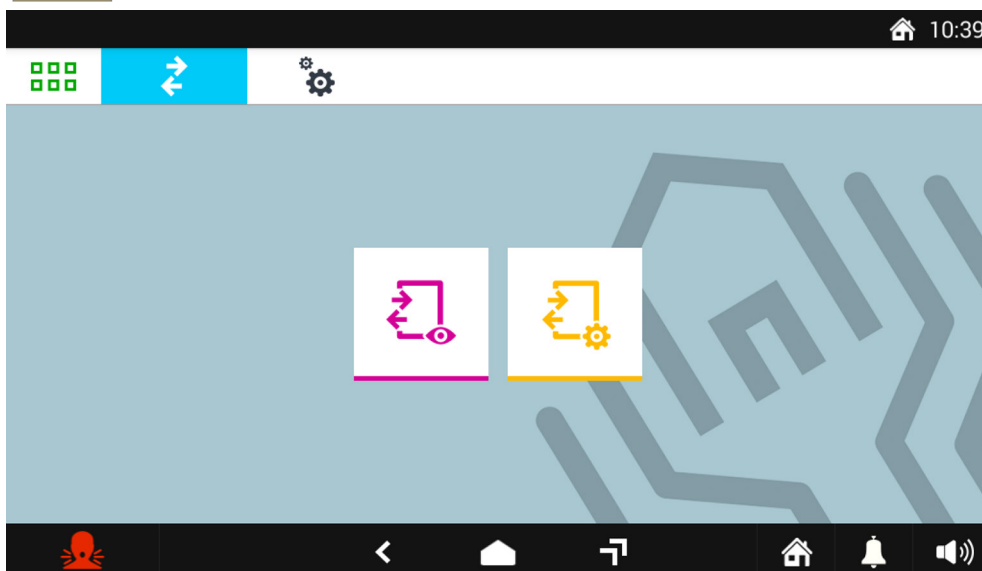
Video Door Phone Home Page (default option)

Press the icon  to directly access the Top Page.

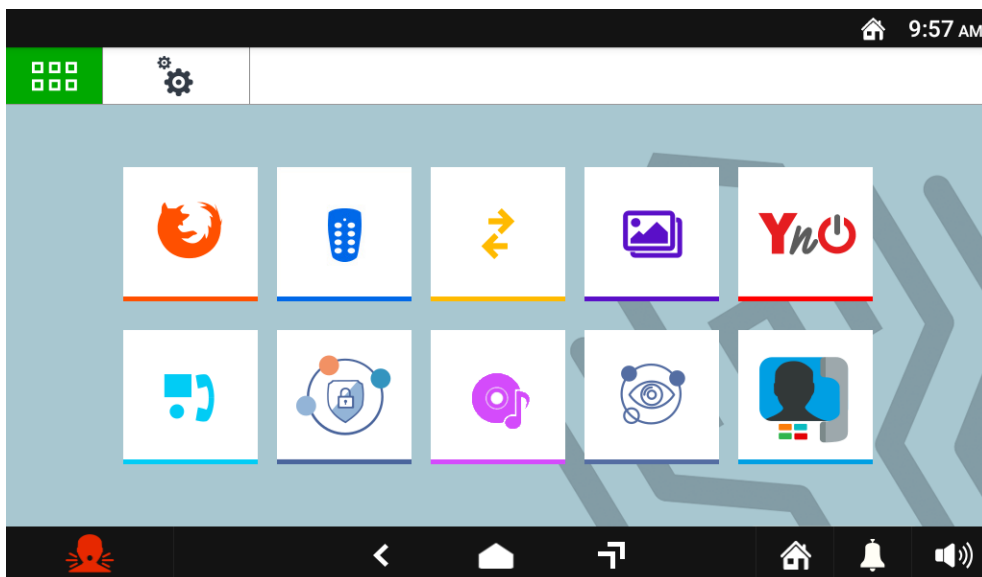

Top Page


Press the icon  . The MIFARE home page will open.




MIFARE home page

3.3.1 How to change the access code for the administrator


To change the administrator access code, follow the procedure below:

- Press the icon  .


- The virtual keypad is displayed on the screen.

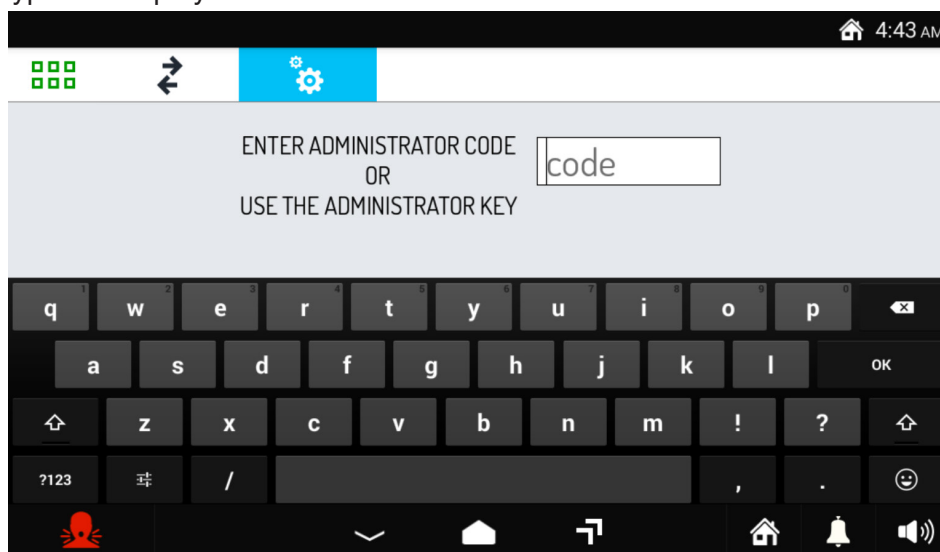

- Enter the default access code “123456” for your first-time authentication. The page containing the main menu is displayed:

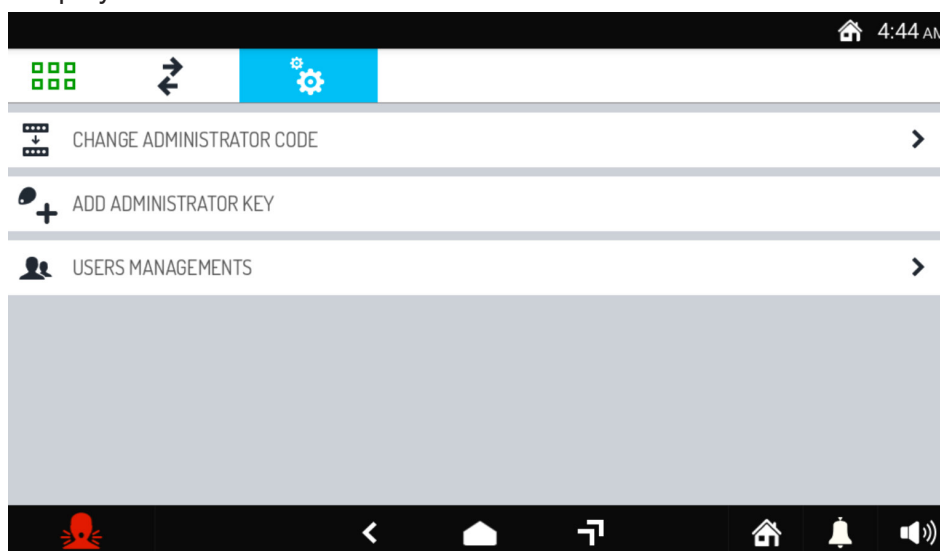

- Press **CHANGE ADMINISTRATOR CODE**. The page for changing the administrator access code opens:

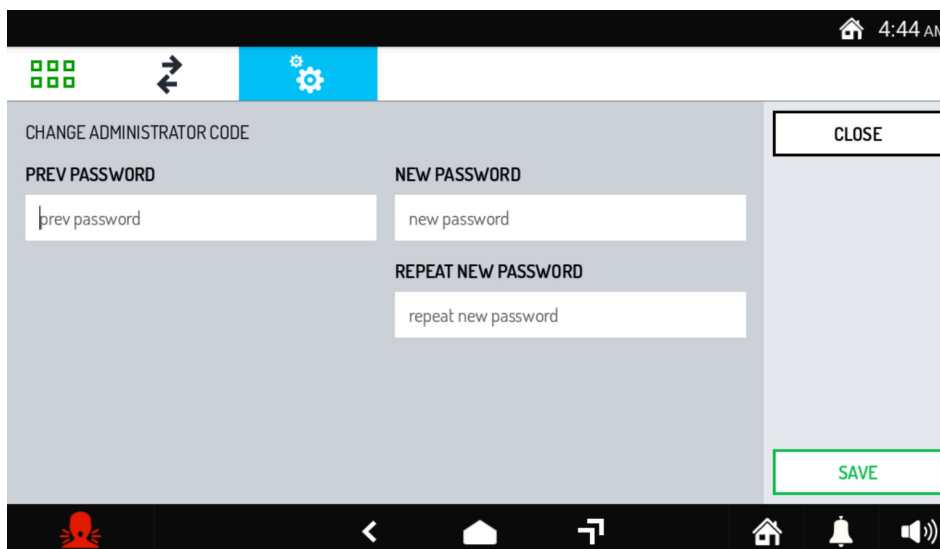


- Enter the code “123456” in the **PREVIOUS PASSWORD** field.
- Enter a new code in the **NEW PASSWORD** field and repeat it in the field below. The code can have a minimum of 4 up to 8 characters.
- Press the **SAVE** button to save the new code, the **CLOSE** button allows closing the page without saving.


3.3.2 How to create, delete, or replace a key for the administrator

To create an administrator key, proceed as follows:


- Press the icon  .
- The virtual keypad is displayed on the screen.

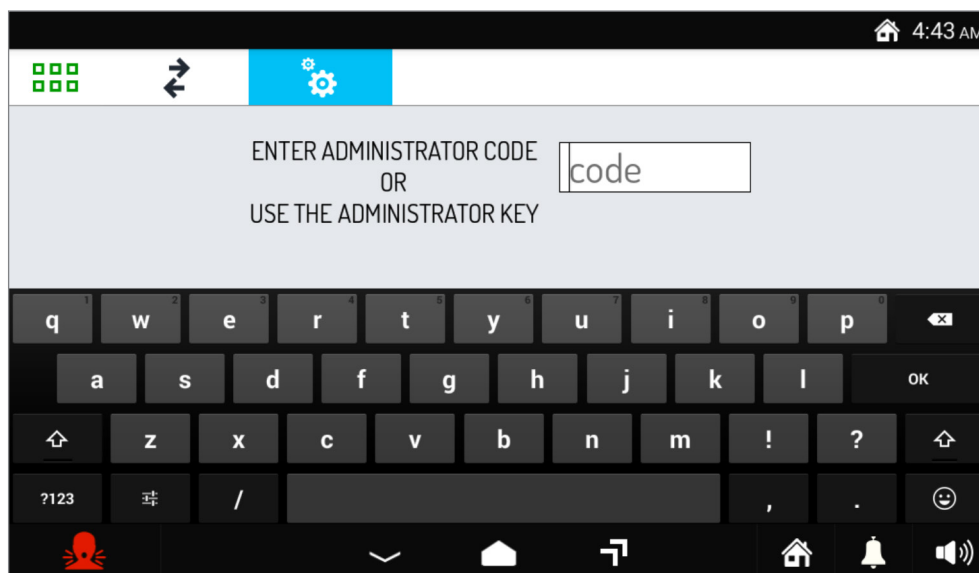

- Enter the administrator access code. The page containing the main menu is displayed.

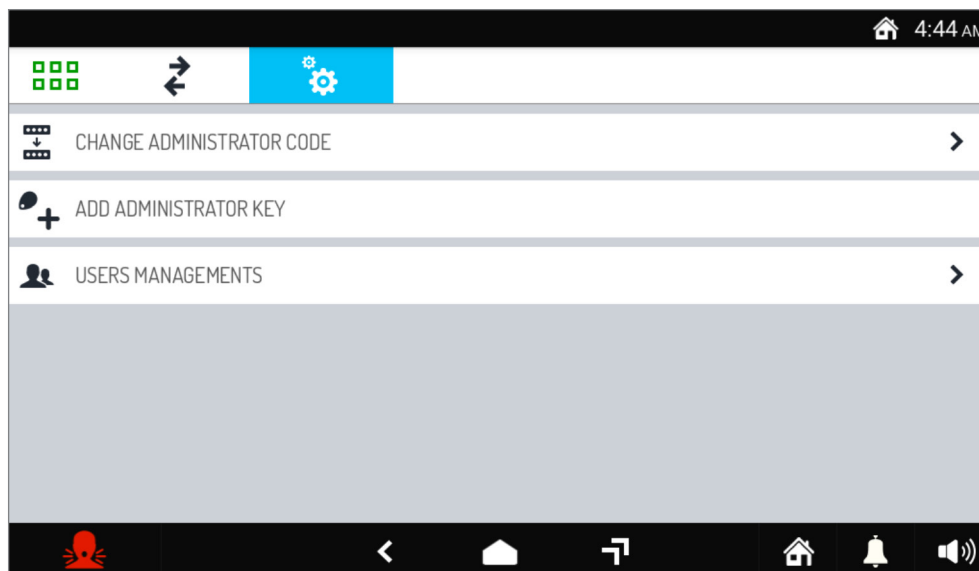

- Press **ADD ADMINISTRATOR KEY**. A pop-up window opens inviting you to pass the key to be acquired:

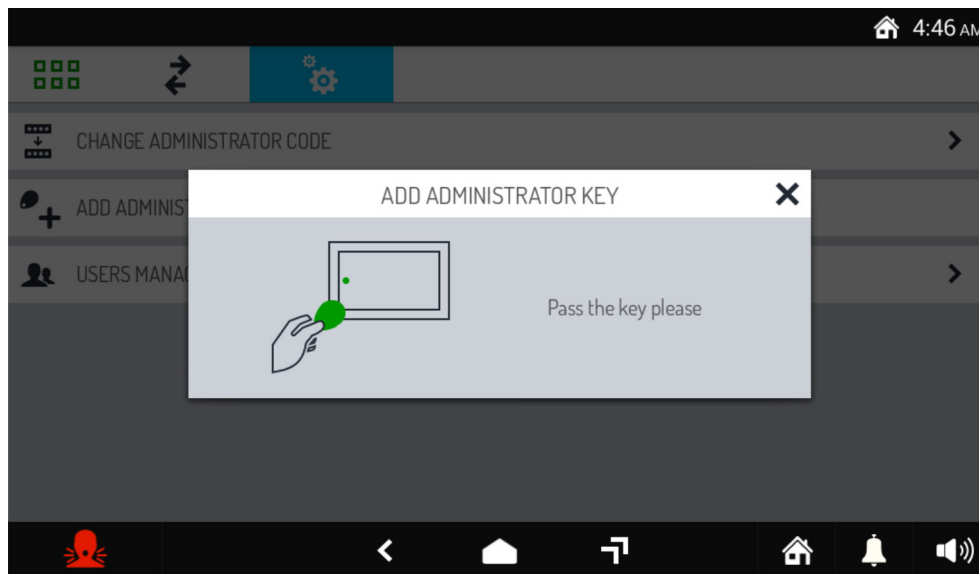

- Pass the key on the left side of the video door phone and then press **CONFIRM** to finish the acquisition operation.

After a key has been added, there will be two new items in the menu: **DELETE ADMINISTRATOR KEY** and **REPLACE ADMINISTRATOR KEY**.

3.3.2.1 How to delete the administrator key

To delete an administrator key, press **DELETE ADMINISTRATOR KEY** menu item. In the pop-up window that opens, confirm the deleting command.

3.3.2.2 How to replace the administrator key

To replace the administrator key, proceed as follows:


- Press the menu item **REPLACE ADMINISTRATOR KEY**.
- In the pop-up window that opens tap the **YES** button.
- Swipe the new administrator key on the left side of the Video door phone and confirm the operation by tapping the **OK** button.

3.3.3 How to manage users


3.3.3.1 How to add a user

To create a new user, proceed as follows:


- Press the icon  .
- The virtual keypad is displayed on the screen.

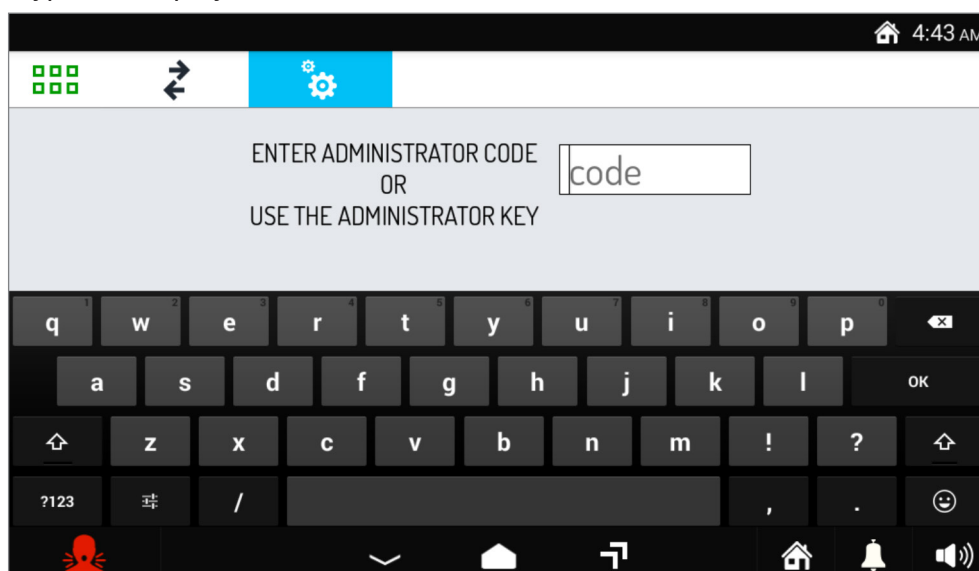

- Enter the administrator access code or pass the administrator key. The main menu page is displayed.

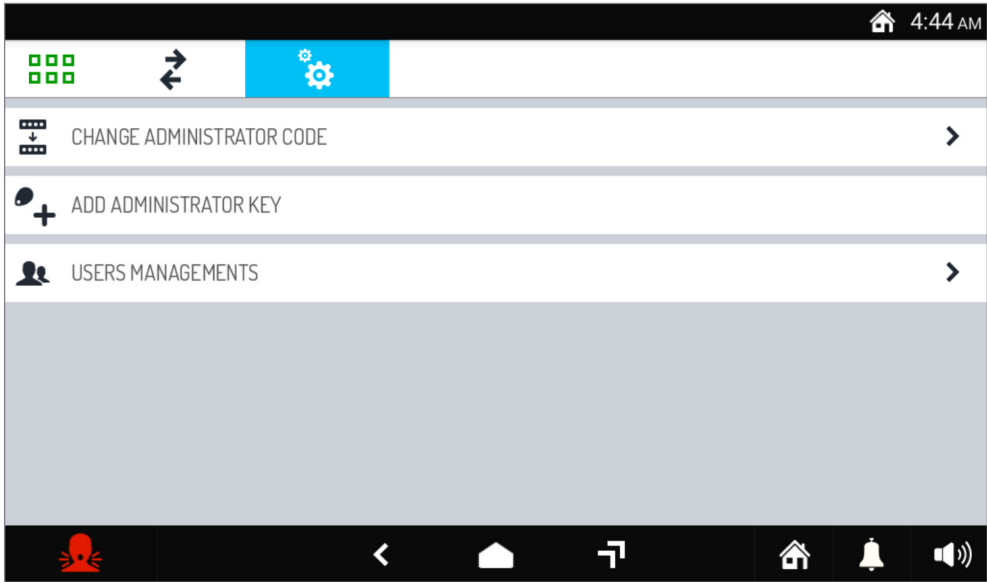


- Press **USERS MANAGERMENTS**. The window listing the stored users is displayed (initially blank).

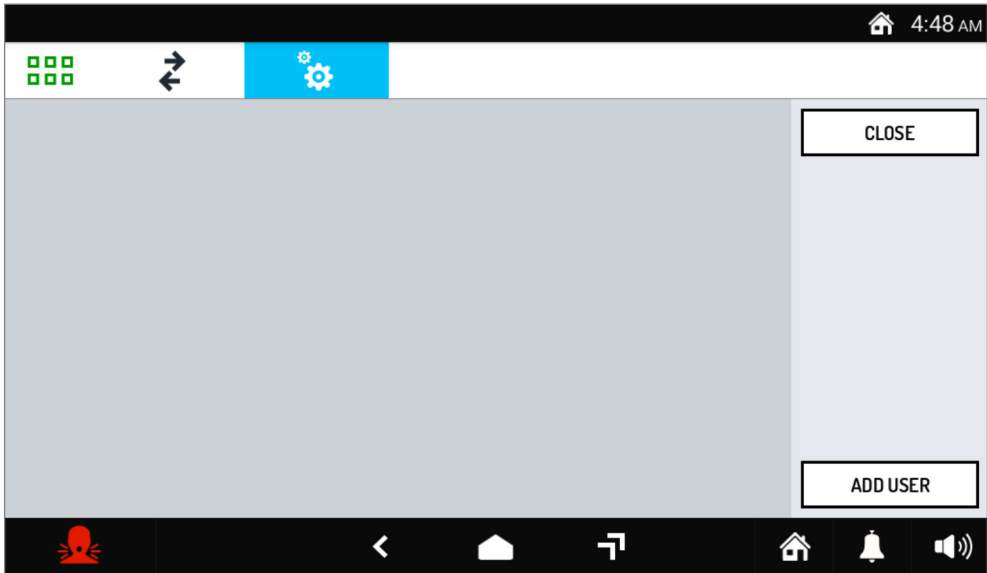


- Press the **ADD USER** button. A new window opens:

A screenshot of the 'USER PROFILE' form. It has the same top navigation bar. The main area is a light gray form with several input fields. On the left is a placeholder for a user profile picture (a white silhouette with a plus icon). To its right are two columns of fields: 'NAME *' and 'DESCRIPTION *' at the top, 'ADDRESS' and 'EMAIL' in the middle, and 'PHONE 1' and 'PHONE 2' at the bottom. Each field has a corresponding label and a small asterisk for required fields. At the bottom right, there's a 'SAVE' button. A 'CLOSE' button is also present in the top right corner of the form area. The bottom black bar with icons is also present.


Fill in the required fields **NAME** and **DESCRIPTION**. The other fields are optional. It is also possible to associate an image to the user that is being entered, press the icon  to display a window pop-up

through which you can use an image captured by the camera or use one contained in the internal memory.

- Press the **SAVE** button to save the entered data, or **CLOSE** to abort the procedure without entering any data.
- Pressing the **SAVE** key opens a pop-up window which invites you to pass the key to be acquired to the video door phone.

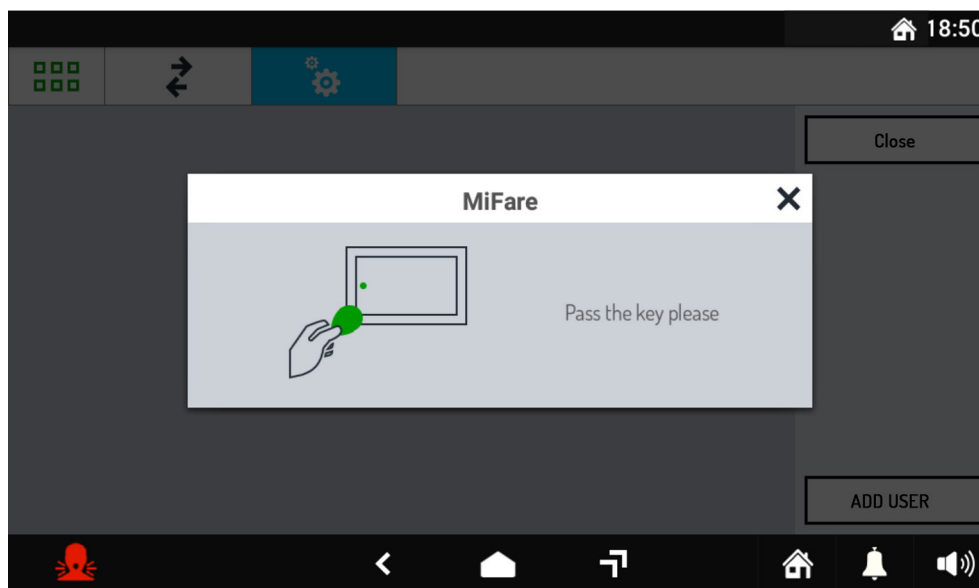


- Pass the key on the left side of the video door phone and then press **CONFIRM** to finish the acquisition operation.
- If the procedure has been completed correctly, the following screen will appear.

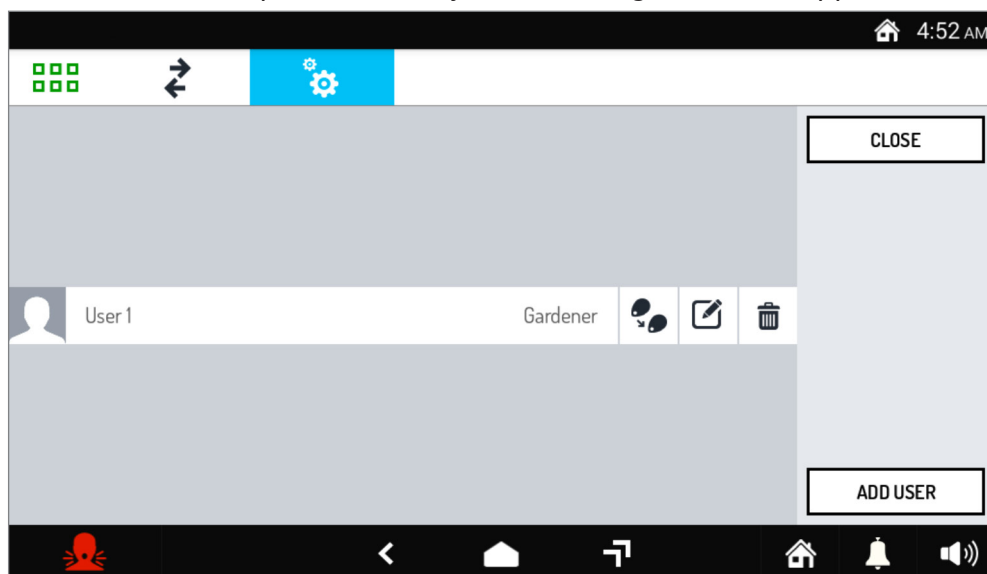


3.3.3.2 How to delete a user or a key or change a user data

To delete a user or a key or change a user data:, proceed as follows:


- Press the icon  .
- The virtual keypad is displayed on the screen.

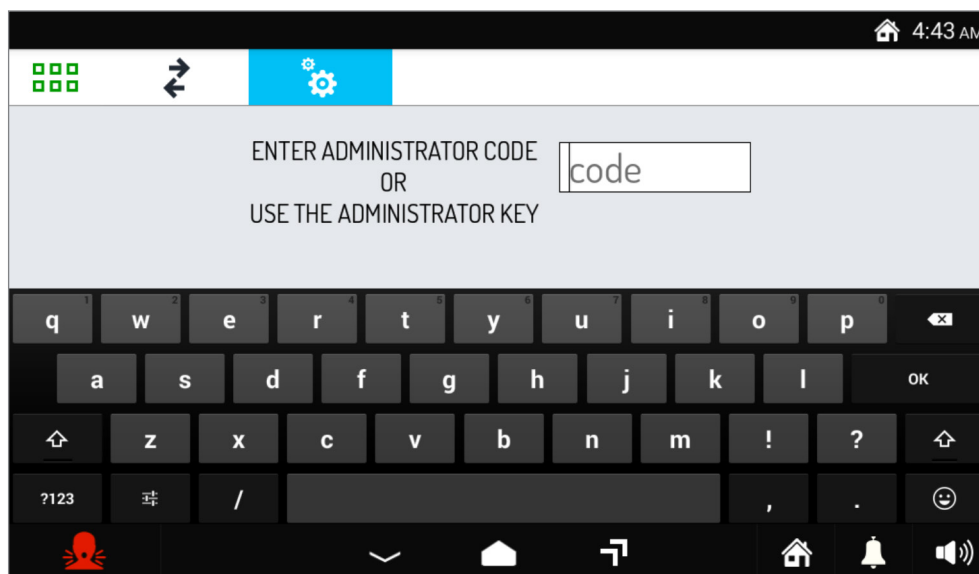

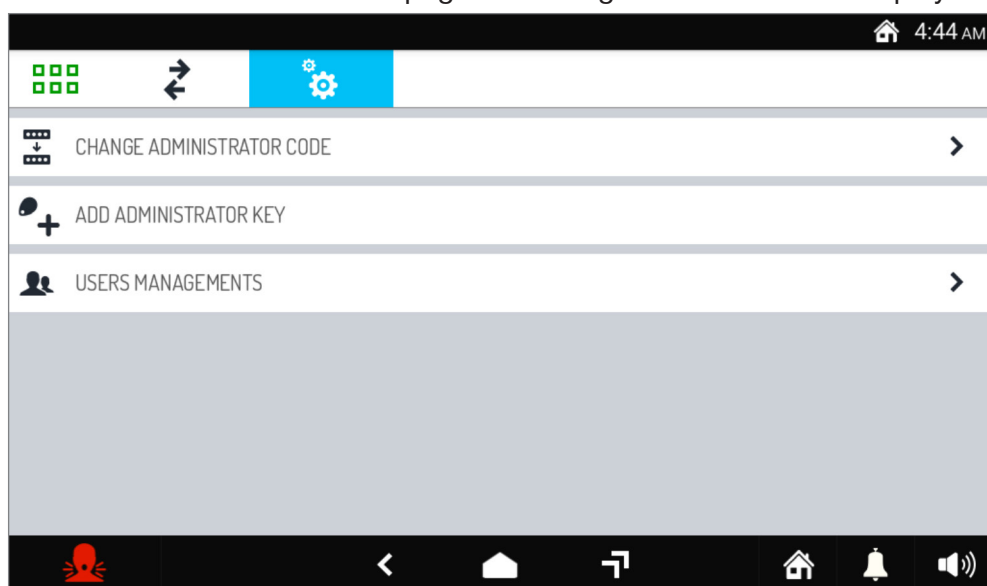


- Enter the administrator access code. The page containing the main menu is displayed.

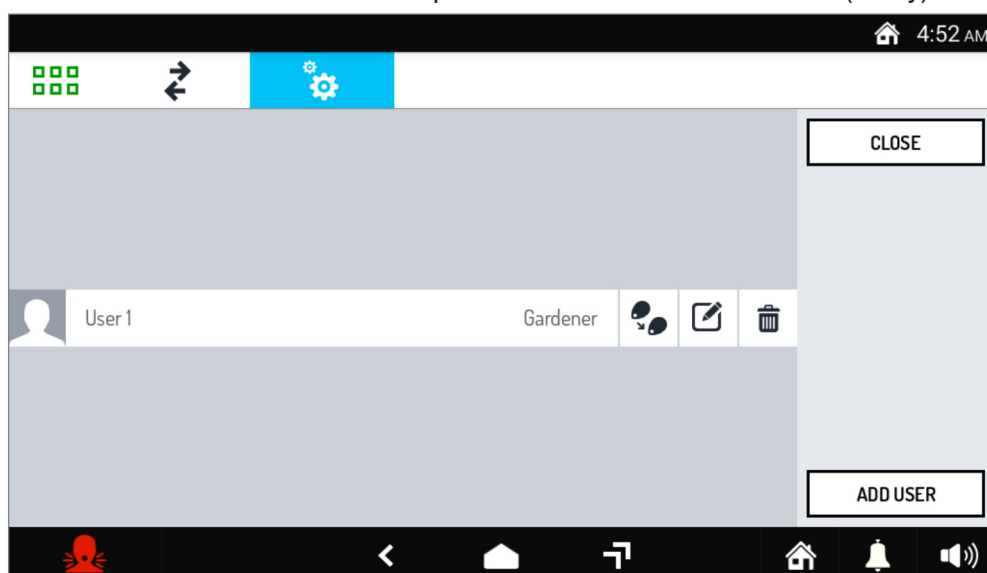


- Press **USERS MANAGEMENT**. A window opens that lists the stored users (if any).



- In the line containing the name of the user:
 - Press the  icon to replace the user key. The procedure is similar to the one used to replace the administrator key.
 - Press the  icon to change the stored data. The window used for creating the user is displayed. Edit the data and press the SAVE button to save.
 - Press the  icon to delete the user.

3.3.4 How to record accesses and exits


To register an access or exit the registered user will have to swipe his or her proximity key on the left side of the video door phone. Even if the video door phone is off, the following screen page will be displayed:

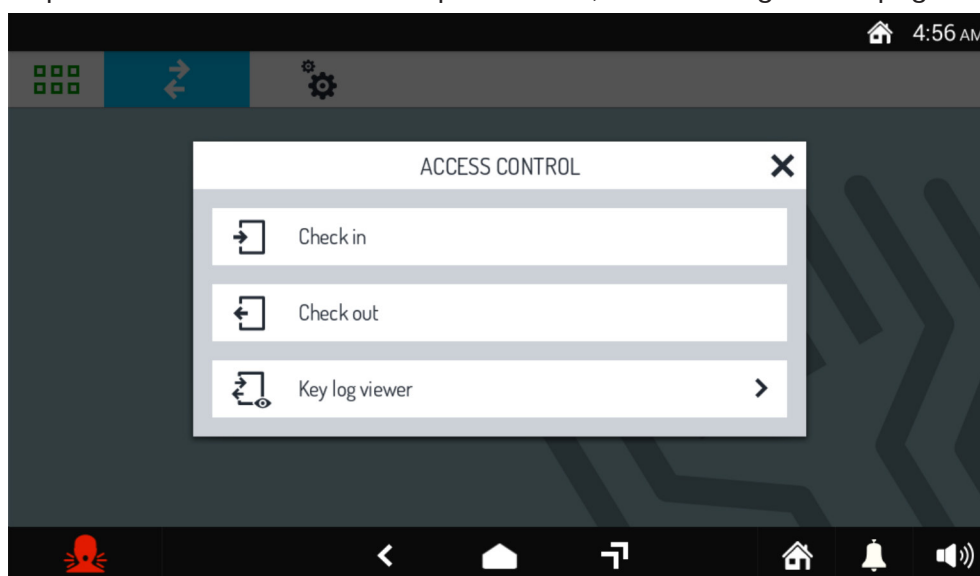


Press the **Access** item to register the access, press on the **Exit** item to register the exit. The **X** button allows closing the window.

3.3.5 How to view a user's log

To view your log, swipe your proximity key on the left side of the video door phone and then tap **Key log viewer** in the pop-up window that will open.


Alternatively, on the main page of the MIFARE application, press the icon  and swipe the proximity key on the left side of the video door phone.

In both cases the following screen will be displayed, where all the recorded accesses and exits are listed:.

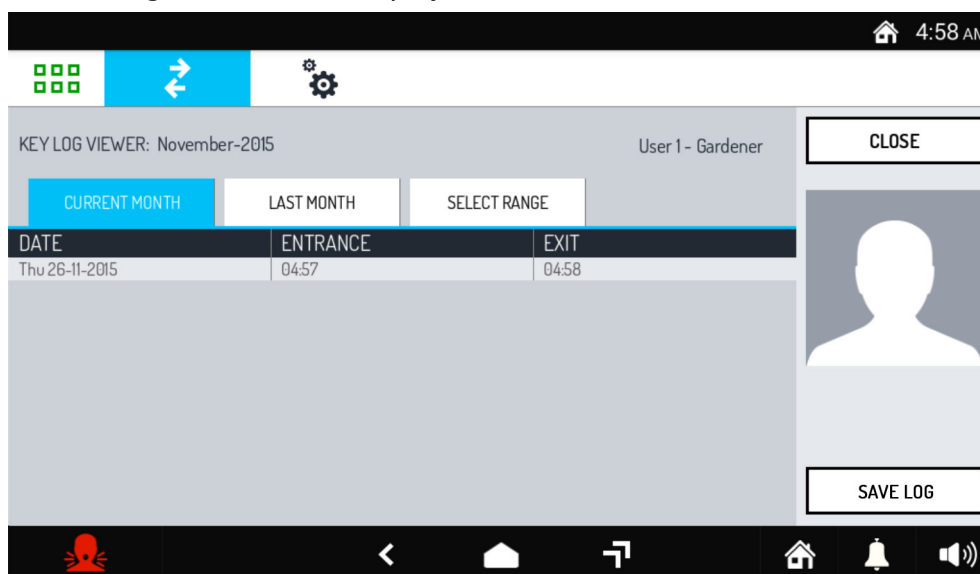

You can see the log of the current month, previous month or any time interval by tapping the tabs **CURRENT MONTH**, **LAST MONTH** or **SELECT RANGE** - respectively (range means a group of several months).

If you chose **SELECT RANGE** the following window appears:

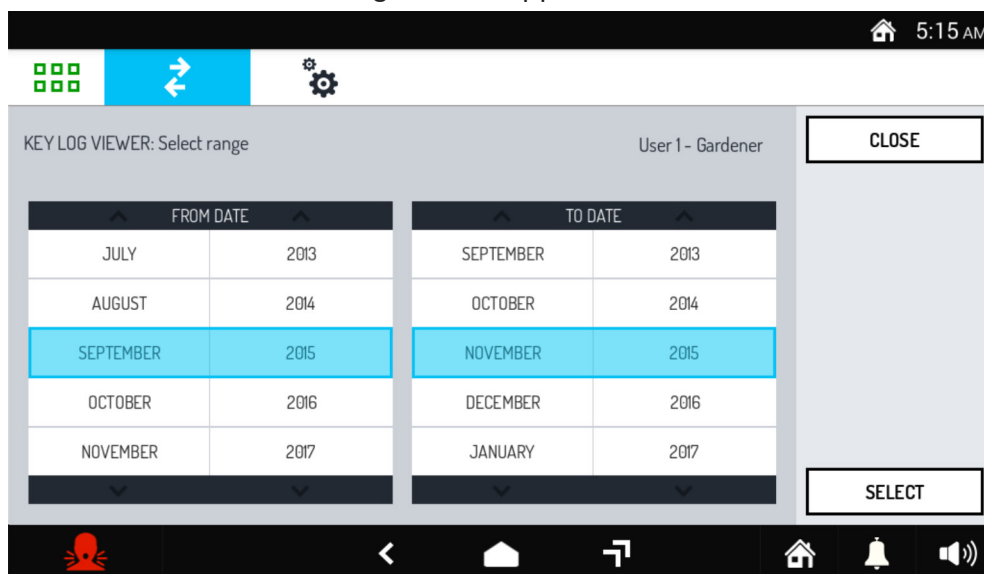


where it is possible to select the start month and the end month. After your selection, tap the button **SELECT** to view the log.


The **SAVE LOG** button can be used to save the log (in text format) in the SD Card in the video door phone, if any.

3.3.6 How to view all logs

It is possible to display the logs of all users, only the administrator can use this function.

To view the logs:

- On the main page of the MIFARE application, press the icon  and enter the administrator access code or pass the administrator key.
- The following selection window will open:

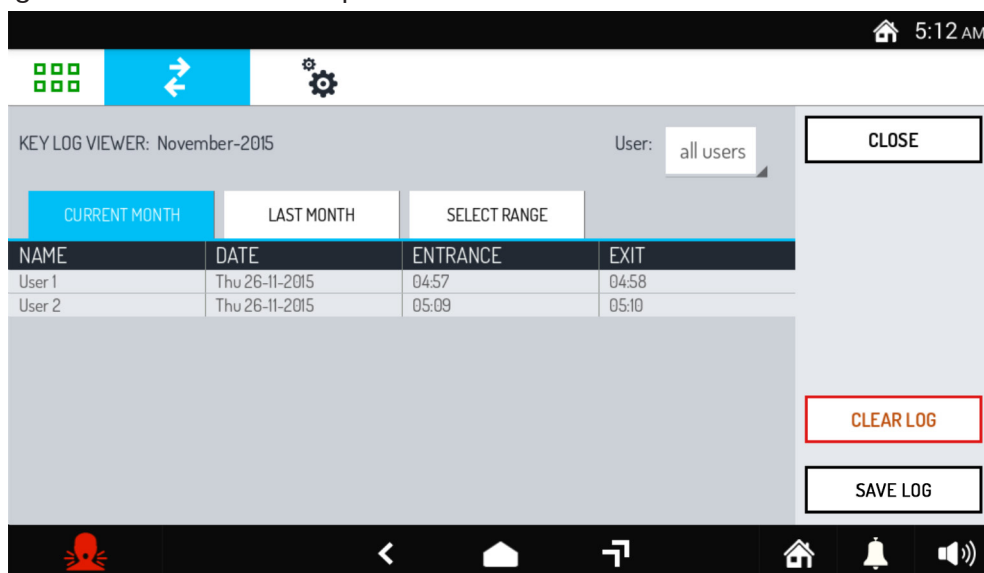


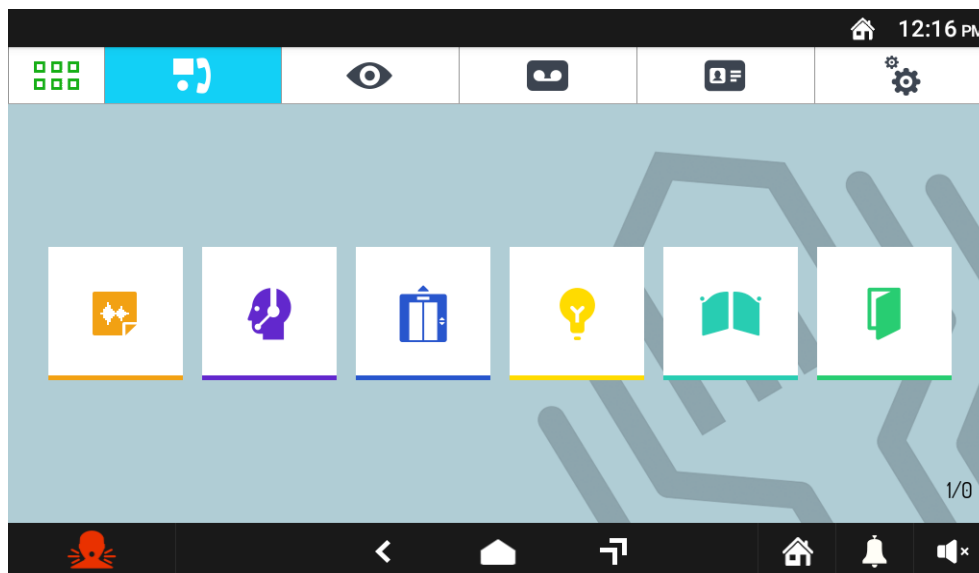
- In the drop-down menu **User** at the top right, choose whether to view the logs for all users or a single user.
- Log tab you wish to display: **CURRENT MONTH**, **PREVIOUS MONTH**, or **SELECT INTERVAL** (an interval is a set of months). The **SELECT INTERVAL** mode is the same as that described in paragraph [How to view a user's log](#).

The **SAVE LOG** button can be used to save the log in the SD Card in the video door phone, if any.

The **CLEAR LOG** button can be used to delete all the logs.


3.4 GALLERY

Switch on the screen if it is off, by tapping it any point or by pressing the Home button. Page is displayed, which corresponds to the main page of the video door phone system  , if the default configuration has been maintained.




Video Door Phone Home Page (default option)

Press the icon  to directly access the Top Page.

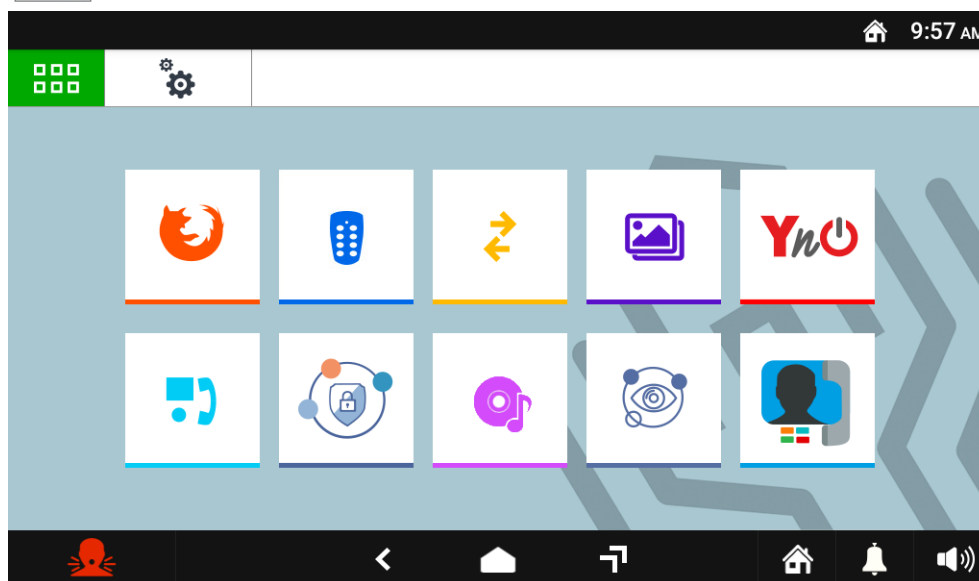

Top Page

Touch the icon  . The video door phone gallery opens.

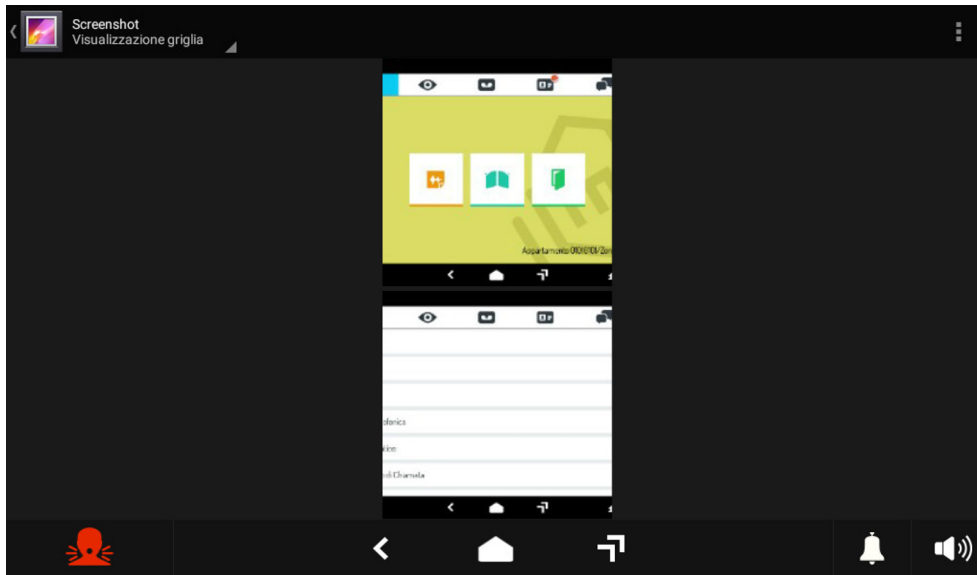


The gallery can be used to play videos or view images. For example, you can view snapshots of external images captured during a call with the door unit or play back the images on the SD card.


Press the button  to return to the Home Page.

3.5 YOKIS YnO APP

The YnO app can be used to manage the Yokis modules installed in the system.


Switch on the screen if it is off, by tapping it any point or by pressing the Home button. Page is displayed,

which corresponds to the main page of the video door phone system , if the default configuration has been maintained.

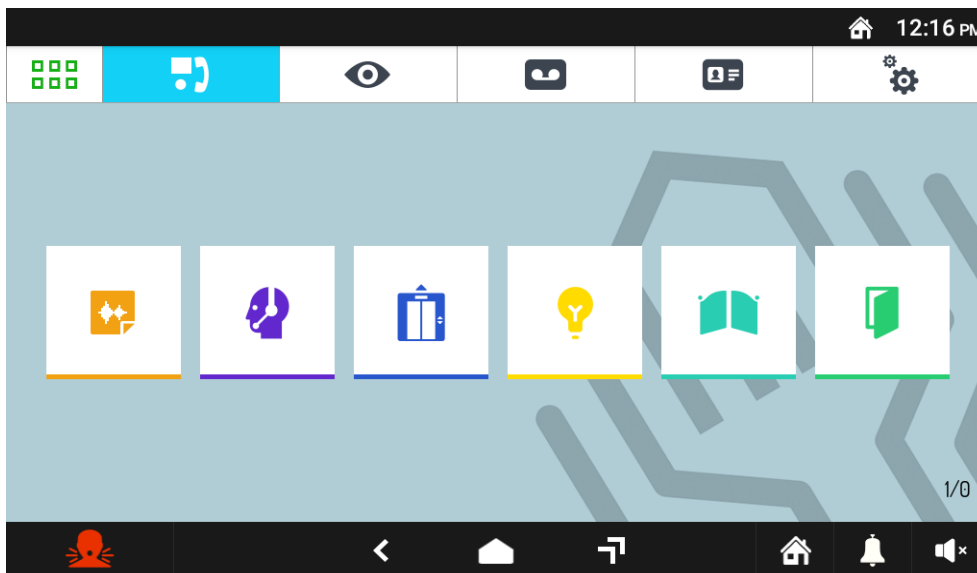


Video Door Phone Home Page (default option)


Press the icon  to directly access the Top Page.

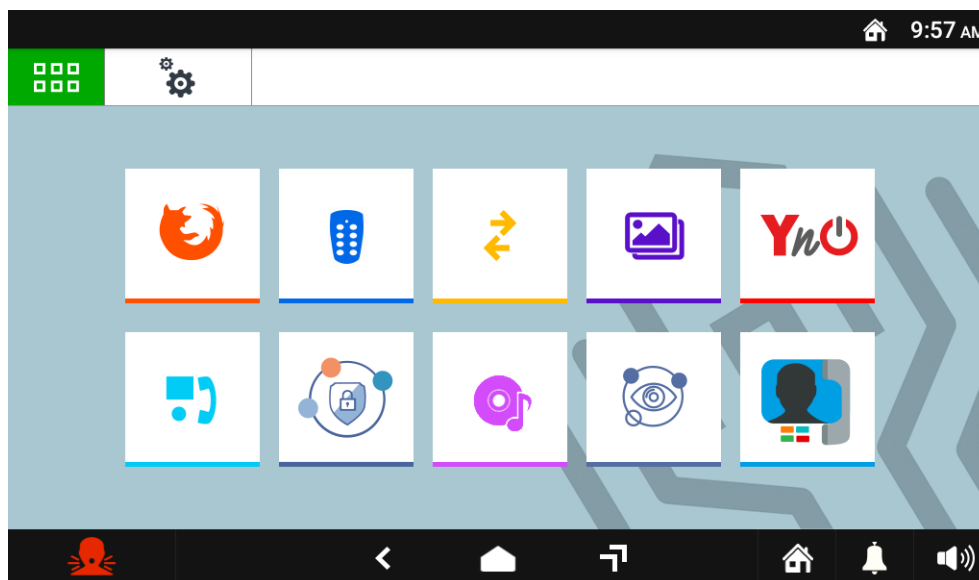


Top Page

Press the icon . The Yokis home automation main page opens.

If automatic account connection is not enabled, you must enter your credentials to log in.

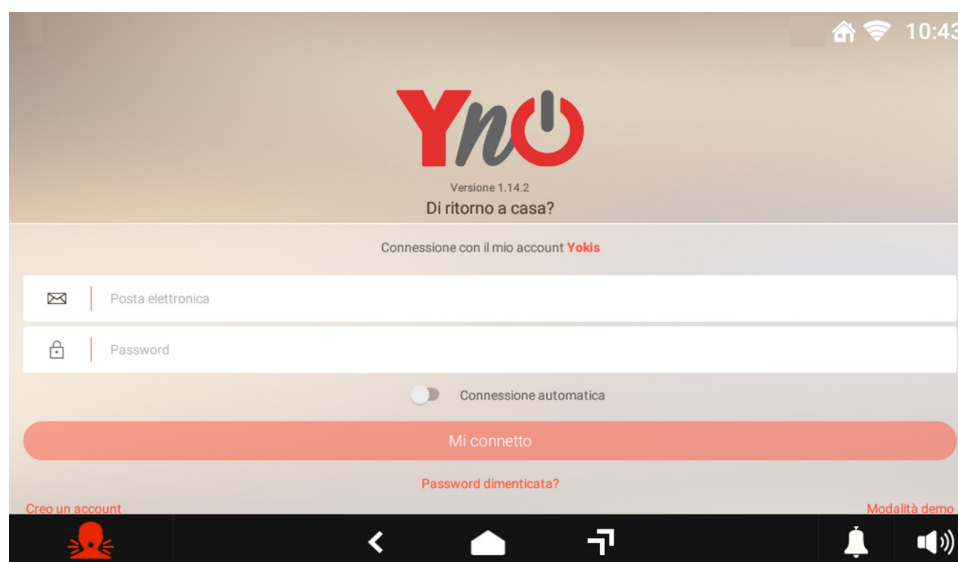


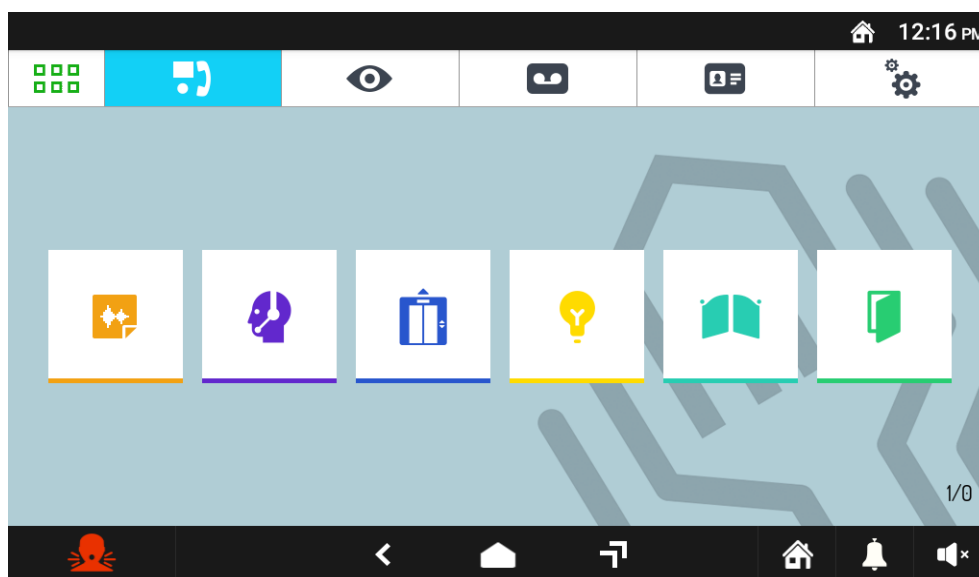
After authentication, you can choose the system and have access to home automation controls.

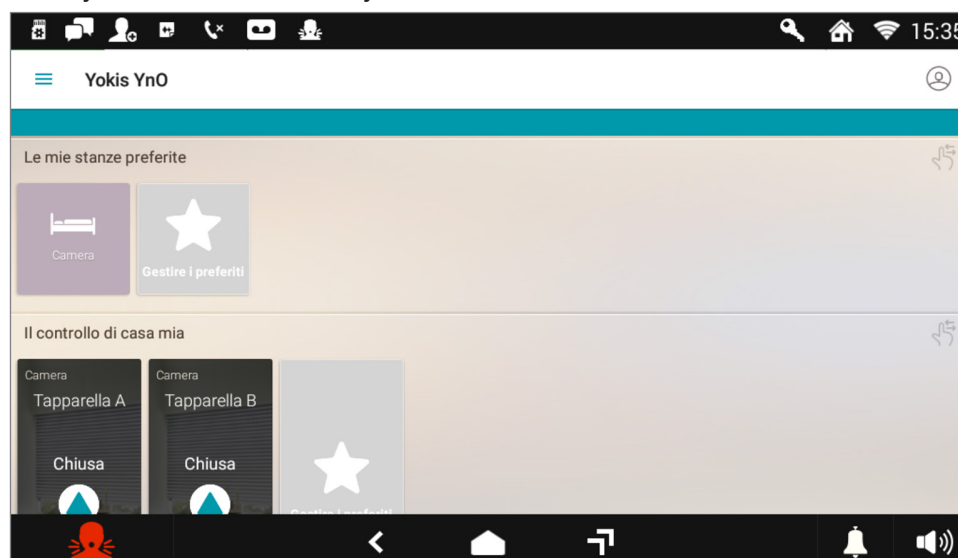

For more details, see the YnO app section at www.yokis.com.


3.6 URMET SECURE APP

Switch on the screen if it is off, by tapping it any point or by pressing the Home button. Page is displayed, which corresponds to the main page of the video door phone system  , if the default configuration has been maintained.




Video Door Phone Home Page (default option)


Press the icon  to directly access the Top Page

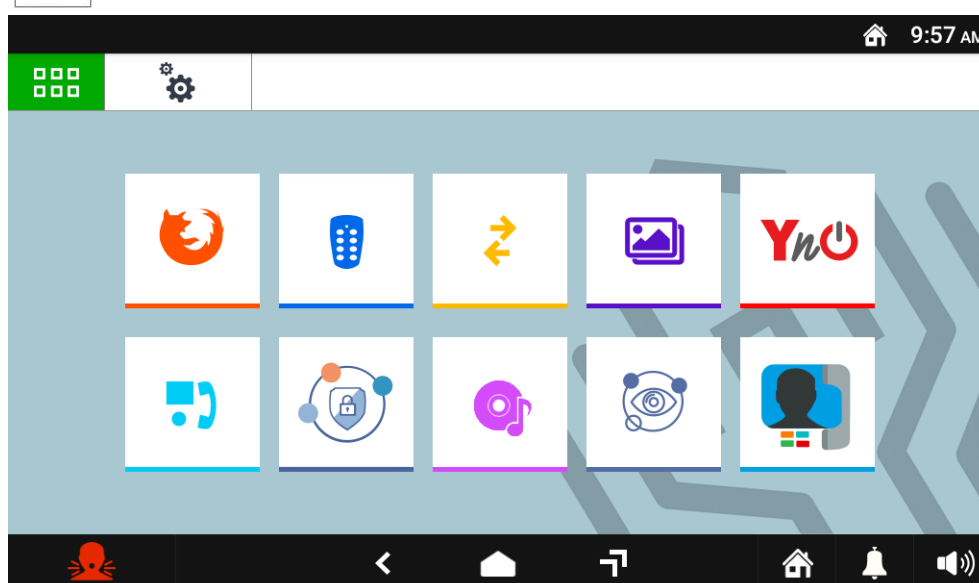

Top Page

Press the icon  . The main page of the Urmec Secure app opens.


If the installer has not entered any data on the existing system, it is necessary to register the account first and then carry out the guided configuration through the Urmec Secure app.

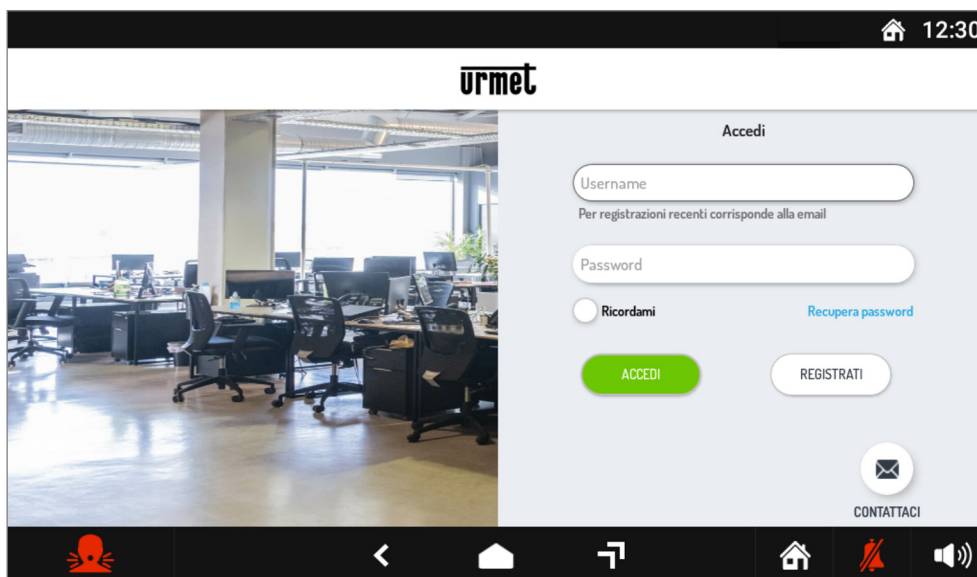


The app allows you to control your burglar alarm system through the video intercom. You can view the status of the system and arm or disarm it either completely or partially.

For more details, visit www.urmet.com.


3.7 MEDIA PLAYER

Switch on the screen if it is off, by tapping it any point or by pressing the Home button. Page is displayed, which corresponds to the main page of the video door phone system  , if the default configuration has been maintained.

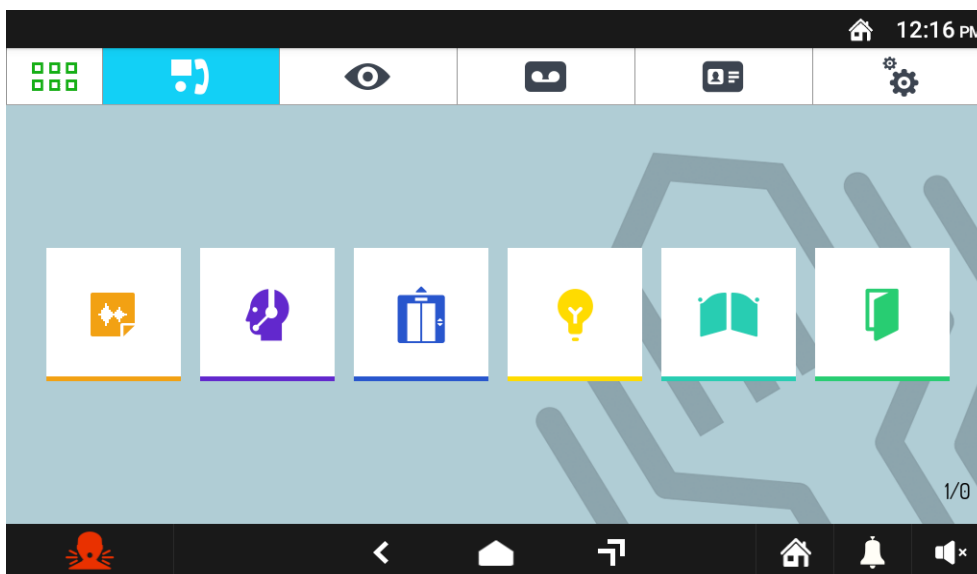


Video Door Phone Home Page (default option)

Press the icon  to directly access the Top Page.

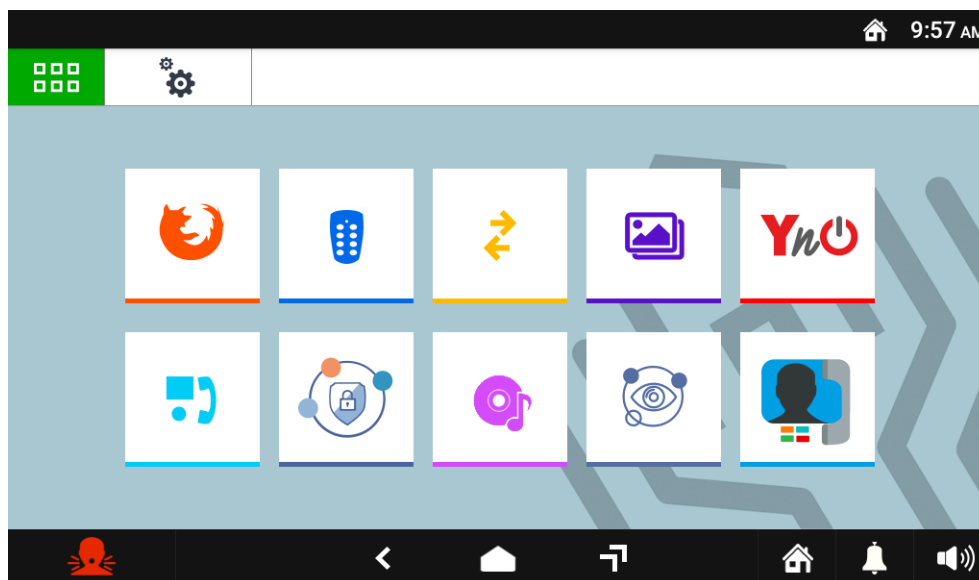

Top Page

Press the icon . The video door phone media player opens.

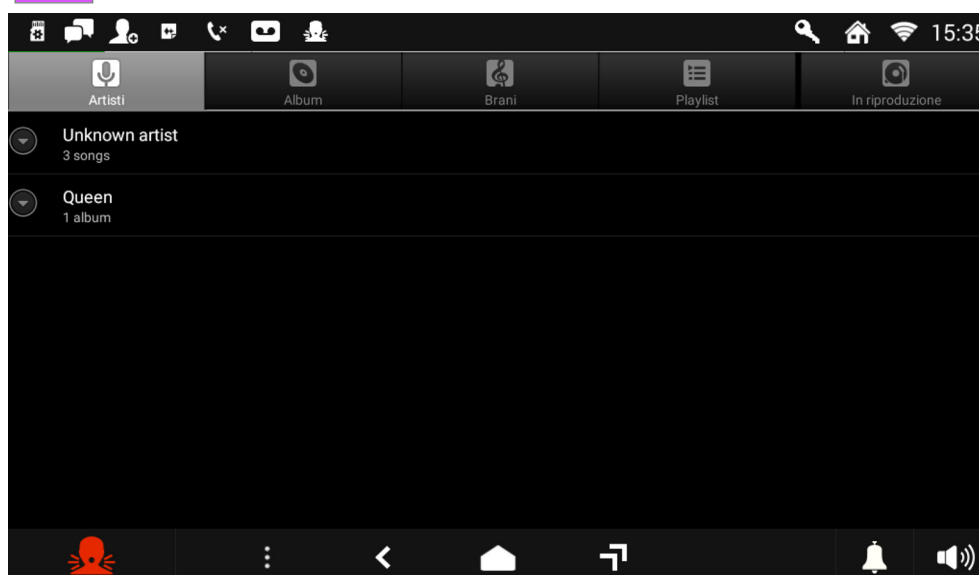

The media player allows you to play audio tracks on the video door phone or play recorded songs on the SD card.


You can split the audio tracks into different categories or create your own playlist.


Press the button  to return to the Home Page.

3.8 iUVS APP

The iUVS app can be used to manage the video surveillance of your home directly from the video door phone. The app can be used to view the images from the cameras in the system in real-time, even with audio transmission.


Switch on the screen if it is off, by tapping it any point or by pressing the Home button. Page is displayed,

which corresponds to the main page of the video door phone system , if the default configuration has been maintained.

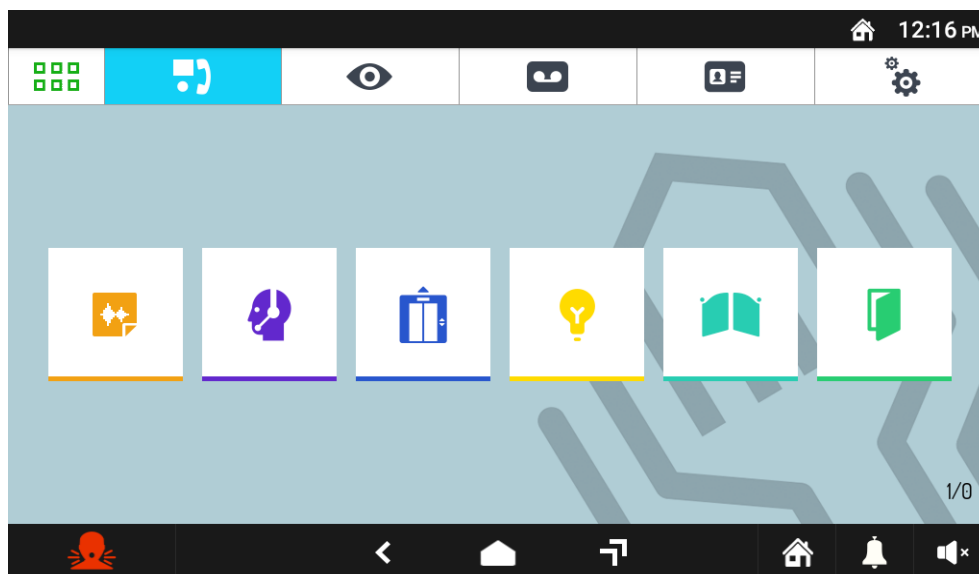


Video Door Phone Home Page (default option)


Press the icon  to directly access the Top Page.

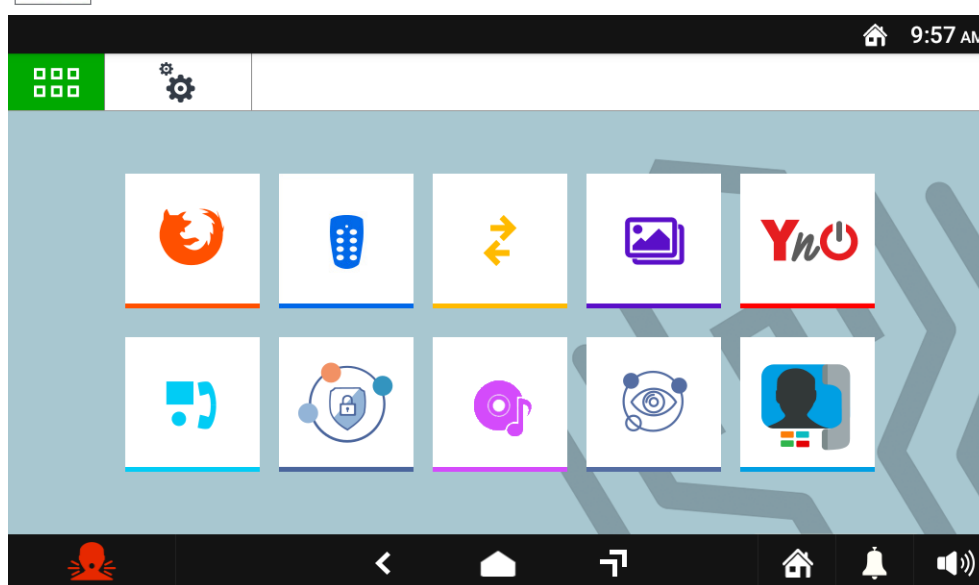


Top Page

Press the icon . The iUVS app opens.

The page for using the video surveillance management controls appears after pressing the icon.

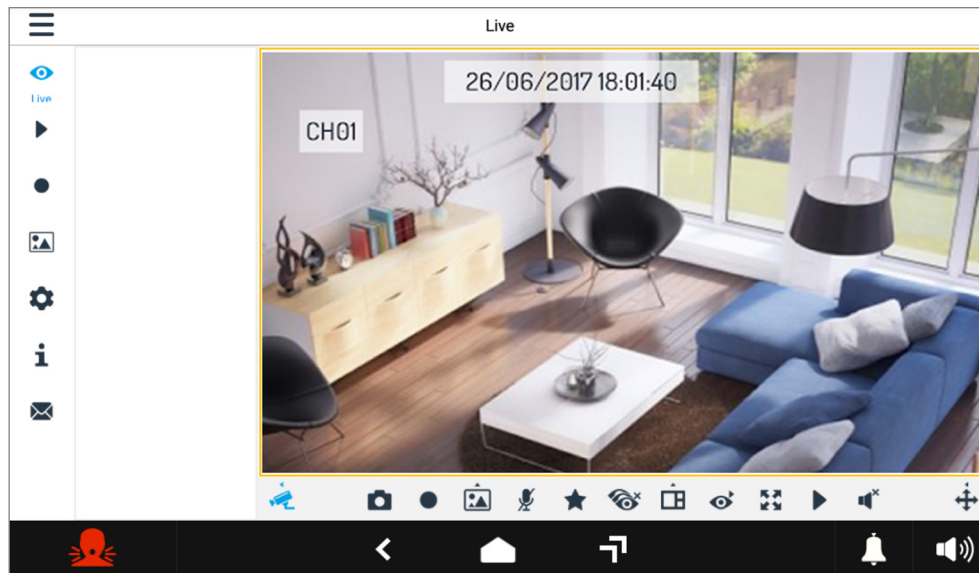

For more details, click on the  icon to consult the guide for using the app.


3.9 CALLME APP


Allows the CallMe application to be used directly on the video door phone. The CallMe application allows the video door phone to be associated with the following call forwarding devices:


- 1720/1 (Pico display)
- 1083/58 and 1083/58A (2Voice)
- 1722/58 and 1722/58A (Kit 1722/81_/83_/85_/86)
- 1723/58 and 1723/58A (Kit 1723/71_/72)
- 9854/58 (COAX and 4+N)


3.9.1 Video door phone Configuration

To use the application, it is first necessary to configure the video door phone. Follow the steps below:


- Connect the video door phone via **WiFi**, connect to the router or and set the network parameters.
- On the Homepage, press the icon  to access the Top Page.

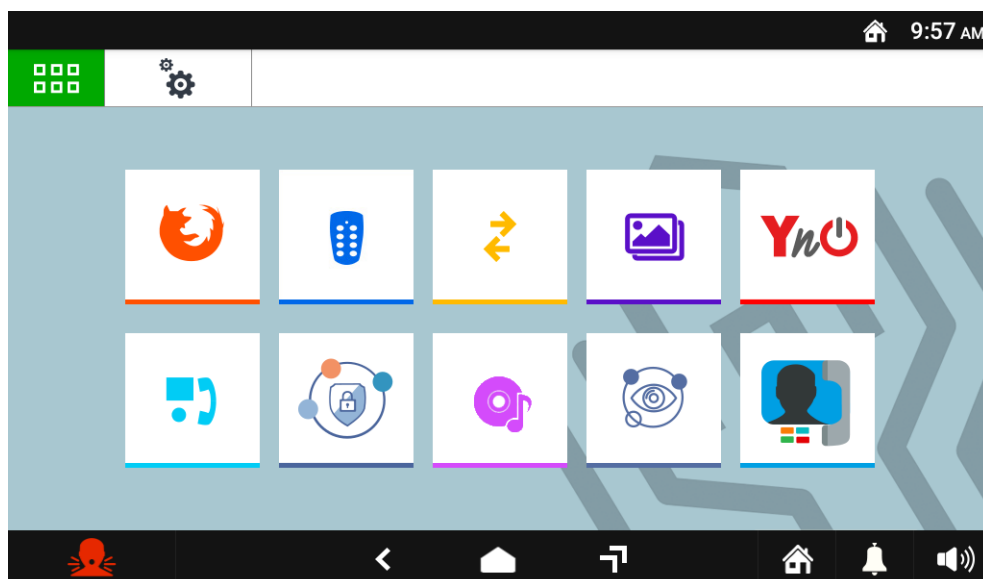


- Press the icon  to access the general configurations page.

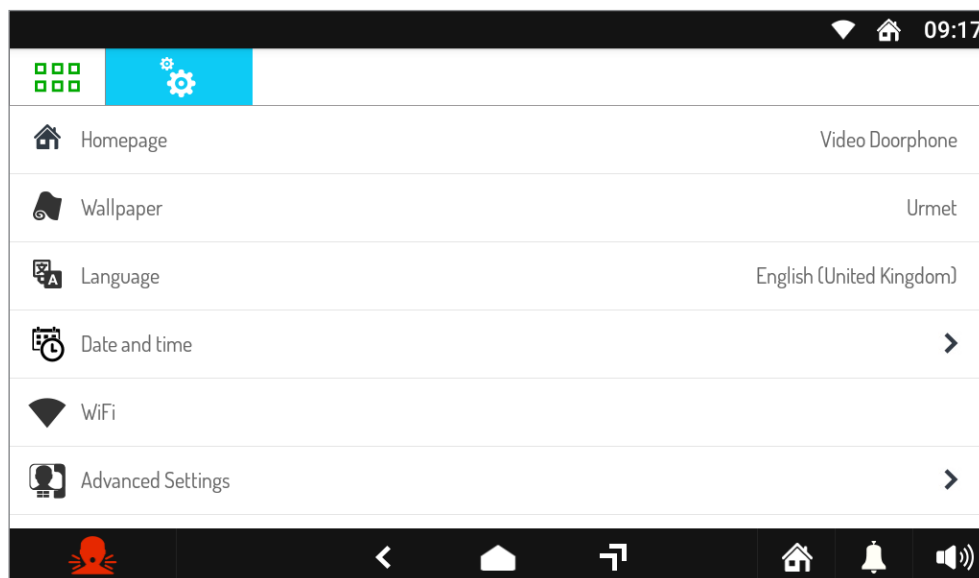


- Press on **WiFi** to display a pop-up window in which you can activate the device's WiFi.

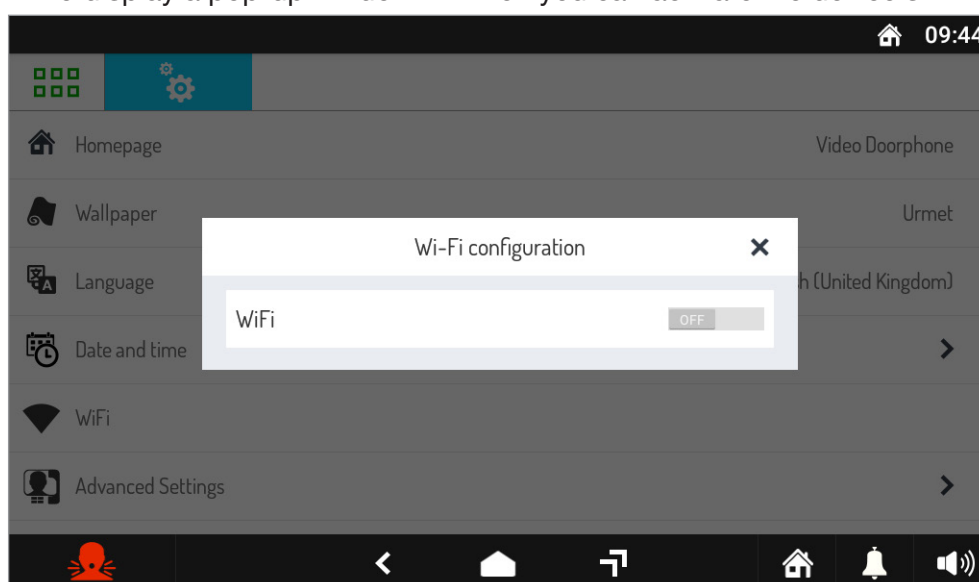


- Press **ON** to activate WiFi, then select the network to connect to.

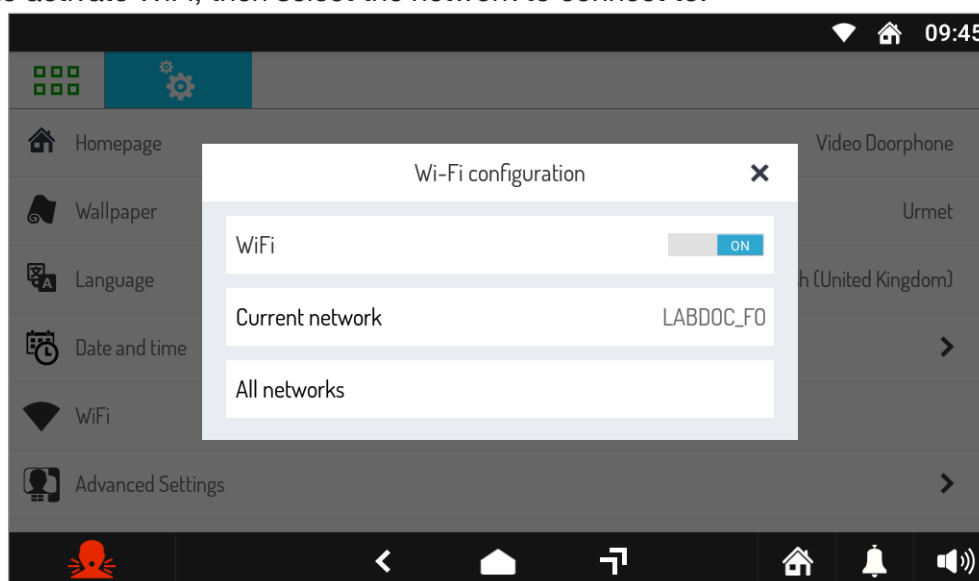


- Press **All Networks** to display the networks detected by the video door phone.

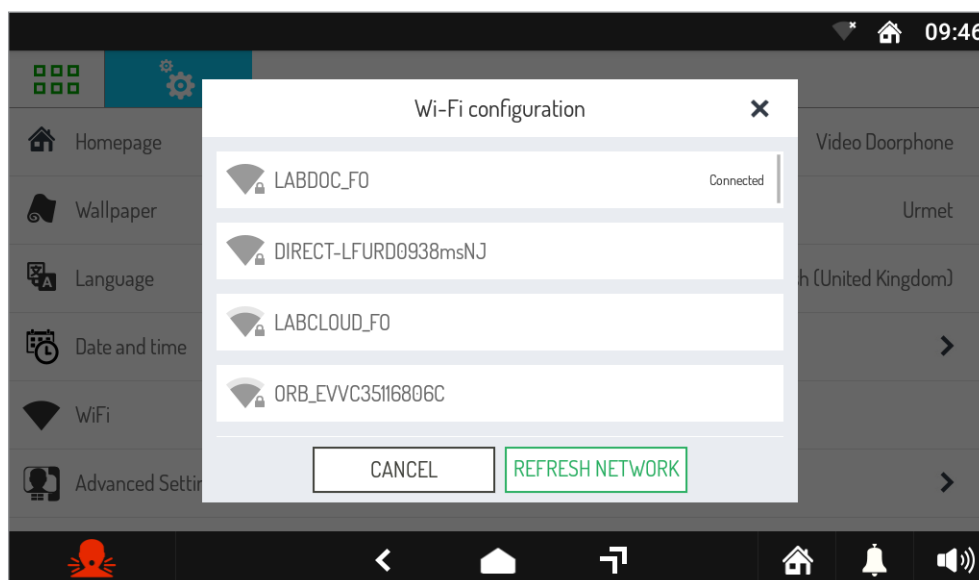

- Select the network you wish to connect to.

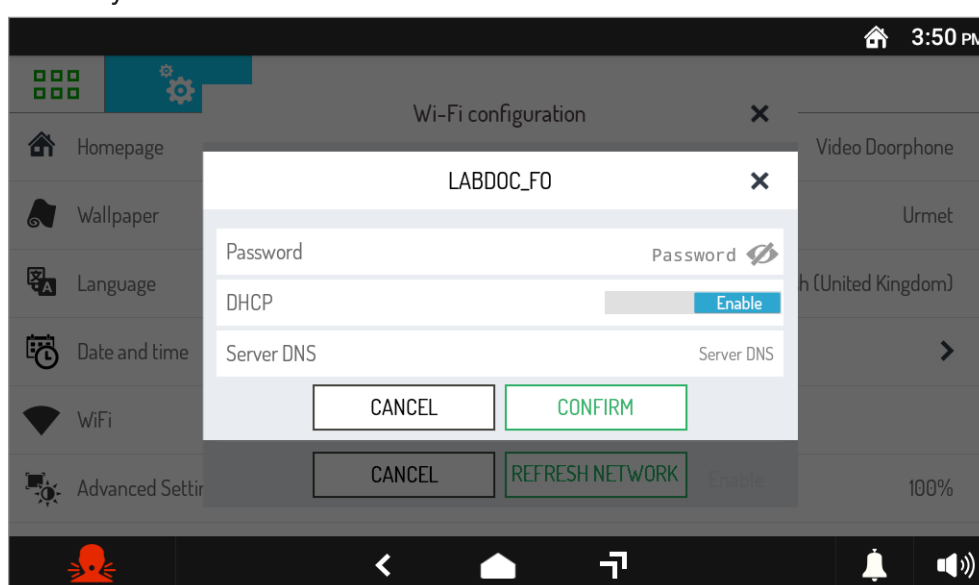


- Enter the password and then press **CONFIRM**.
- If the connection to the network has been made correctly, the following icon will appear in the top right-hand bar  .

3.9.2 Configuration and Use of CallMe App

- Tap the icon or press the centre button, if the video door phone is off, to open the CallMe app.
- Allow the CallMe app to:
 - access pictures, media content and files on the device;
 - record audio;
 - take photos and record videos;
 - making and handling phone calls.

WARNING! If consent is not given for all 4 functions listed above, it will not be possible to use the CallMe app.

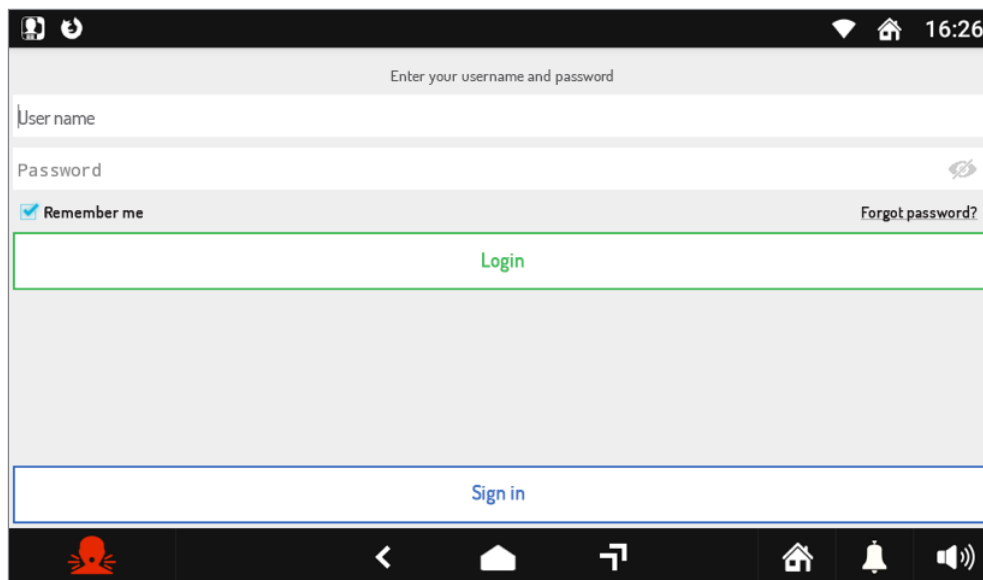

To learn how to use and configure the CallMe App, please consult the CallMe section on Urmet website <https://www.urmet.com/it-it/CallMe>.

3.10 CONFIGURATION OF VIDEO DOOR PHONE PARAMETERS AND VIDEO DOOR PHONE APPLICATION

For all information on how to configure the video door phone and Video Door Phone application parameters, download the “[Parameter configuration booklet](#)” by pressing the relevant link.

DS 1760-031A

URMET S.p.A.
10154 TORINO (ITALY)
VIA BOLOGNA 188/C
Telef. +39 011.24.00.000 (RIC. AUT.)
Fax +39 011.24.00.300 - 323

urmet

LBT 21180

Area tecnica
servizio clienti +39 011.23.39.810
<http://www.urmet.com>
e-mail: info@urmet.com