



DS1051-308

1051/020

IP Alarm System

Installation Guide

Table of Contents

1. INTRODUCTION	4
2. PANEL INFORMATION	4
2.1. IDENTIFYING THE PARTS	4
2.2. THE POWER SUPPLY	1
2.3. SYSTEM REQUIREMENTS	1
3. GETTING STARTED	2
3.1. SYSTEM DEPLOYMENT	2
3.2. HARDWARE INSTALLATION	2
3.3. SOFTWARE INSTALLATION	4
4. CONNECTION TO PANEL WEBPAGE	7
4.1 SELECTION OF THE LANGUAGE	8
5. DEVICE MANAGEMENT	9
5.1. LEARNING	9
5.2. WALK TEST	15
5.3. PSS CONTROL	16
5.4. UPIC CONTROL	17
5.5. SURVEILLANCE	18
5.6. GROUP CONTROL	19
5.7. SOUND/SIREN SETTING	20
6. PROGRAM THE SYSTEM	23
6.1. PANEL CONDITION	23
6.2. PANEL SETTINGS	25
6.3. PIN CODE	29
7. NETWORK SETTINGS	30
7.1. GSM	30
7.2. NETWORK	31
7.3. WIRELESS	32
8. SYSTEM SETTINGS	33
8.1. ADMINISTRATOR SETTING	33
8.2. HOME AUTOMATION	34
8.3. SCENE	39
8.4. REPORTING	40
8.5. SMS REPORTING	42


8.6. MEDIA UPLOAD	43
8.7. XMPP	44
8.8. DATE & TIME	45
8.9. FIRMWARE UPGRADE	46
8.10. RF FIRMWARE UPGRADE	47
8.11. FACTORY RESET	48
8.12. BACKUP & RESTORE	49
8.13. SYSTEM LOG	50
9. EVENT & HISTORY	51
9.1. CAPTURED EVENTS	51
9.2. REPORTED EVENTS	52
9.3. EVENT LOG	53
10. APPENDIX	54
10.1. FAULT EVENT DESCRIPTION	54
10.2. CONTROL PANEL MODE AND RESPONSE TABLE	55

1. Introduction

This manual covers the installation, programming, and control of IP based 1051/020 Home Security Control Panel. 1051/020 is equipped with LCD Display, Keypad, and ZigBee compatibility.

2. Panel Information

2.1. Identifying the parts

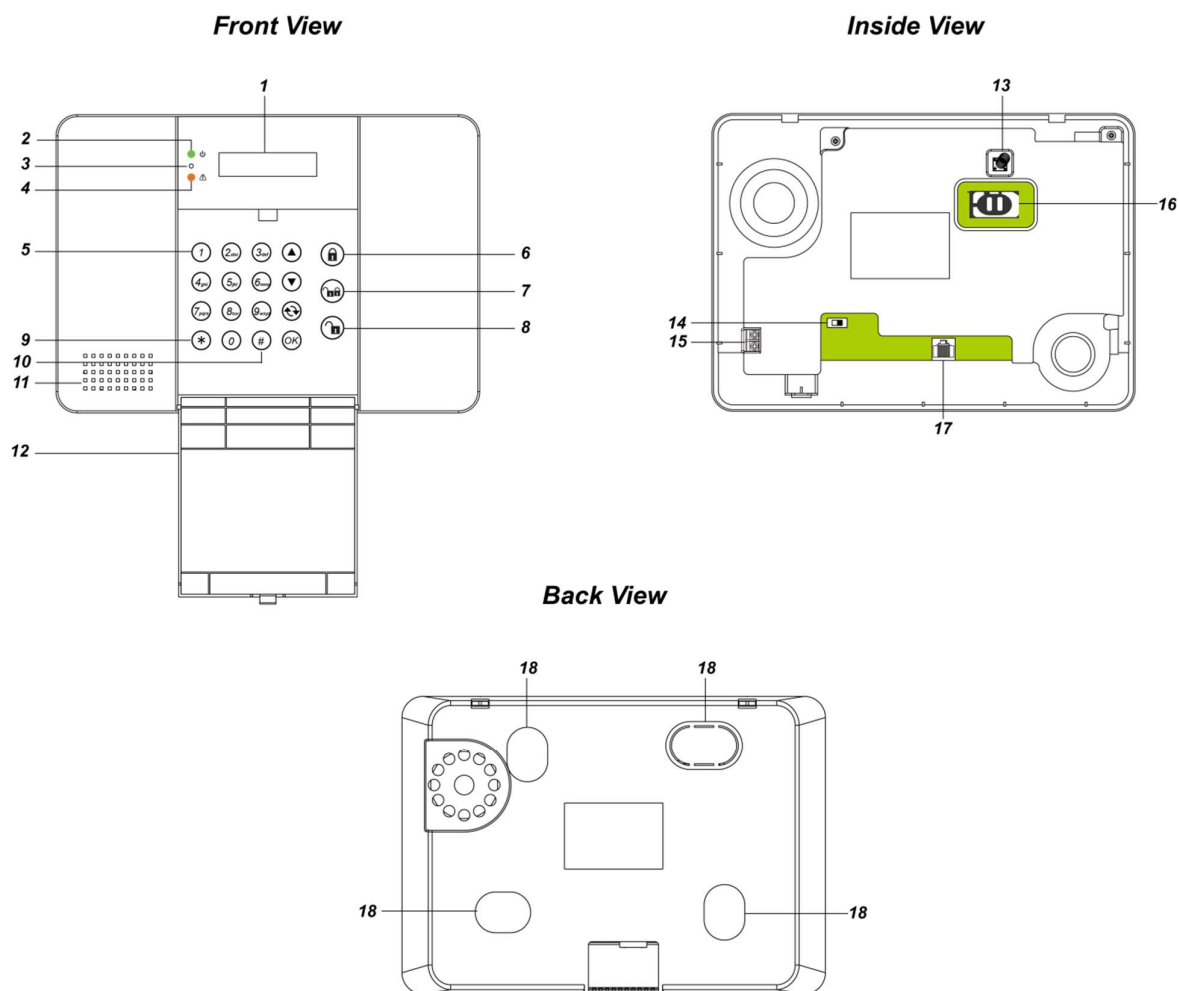

1. Backlit LCD Display

2. Power LED (Green)

ON: AC Power on.

OFF: AC Power failure.

3. Microphone

4. Fault LED (Amber)


ON: Fault exists in system

OFF: System Normal

5. Keypad:

▲ **Key:** Use this key to move the cursor and scroll the display upwards

▼ **Key:** Use this key to move the cursor and scroll the display downwards

 **Key:** Use this key to abort current screen and return to previous screen.

OK Key: Use this key to confirm an action or entered data

- 6. Away Arm Key:** Use this key to Away Arm the system.
- 7. Home Arm Key:** Use this key to Home Arm the system.
- 8. Disarm Key:** Use this key to Disarm the system.
- 9. * Key:** Press and hold for 3 seconds to enter Installer Menu
- 10. # Key:** Press and hold for 3 seconds to enter Programming Menu
- 11. Speaker**
- 12. Flip Open Keypad Cover:** Flip open the cover to use the Keypad
- 13. Tamper Switch**
- 14. Battery Switch**
- 15. Built-in Power Unit Connector**
- 16. SIM Card Base**
- 17. Ethernet Port**
- 18. Wall Mounting Knockouts (Inside)**

2.2. The Power Supply

Built-in Power Unit

Use the Built-in Power Unit to connect to the mains power. A power cord is used to connect the built-in power unit and it is required to connect to a wall outlet.

Rechargeable Battery

- There is a rechargeable battery inside the Control Panel, which serves a backup in case of power failure. During normal operation, the built-in power unit is used to supply power to the Control Panel and at the same time recharge the battery. Slide the Battery Switch to ON to activate and charge the battery. It takes approximately 72 hours to fully charge the battery.
- The battery information is displayed in the Panel section of local area webpage.

2.3. System Requirements

The system requires a TCP/IP network environment for you to connect to the Control Panel for system programming. Hardware requirement for programming the panel vial Local Area Network (LAN) webpage:

- Microsoft Windows 8 or Windows 10 operating system.
- Microsoft Internet Explorer 6.x, or later and Mozilla Firefox 3.0 compatible.
- CPU: Intel Pentium II 266MHz or above
- Memory: 32MB (64MB recommended)
- VGA resolution: 800x600 or above

3. Getting Started

Read this section of the manual to learn how to set up your Control Panel and program System Settings over the Web page.

3.1. System Deployment

Follow guidelines below when planning installation location:

- The Control Panel requires Ethernet connection.
- The Control Panel should be installed at a location that is hidden from outside view.
- Avoid mounting the Control Panel near large metal objects which may affect wireless radio strength.
- The Control Panel should be protected by sensors so that no intruder can reach the Control Panel without first activating a sensor.
- When using **ZigBee routers** to improve ZigBee network coverage, remember to use only ZigBee Router with backup batteries for security sensors. If you use a Router without backup battery for security sensors, the Router will be powered down in case of AC failure, and you security sensors will lose connection with the ZigBee network.

3.2. Hardware Installation

The panel can be fixed on the wall. Follow the instructions below to install the panel.

- Step 1.** Loosen the screw at bottom of the panel (**Figure 1**), Break through the knockouts on the back cover for installation, and the ones on the side for wiring if required. (**Figure 2**)
- Step 2.** Break through the knockouts on the back cover for installation, and the ones on the side for wiring if required. (**Figure 2**)

Figure 1


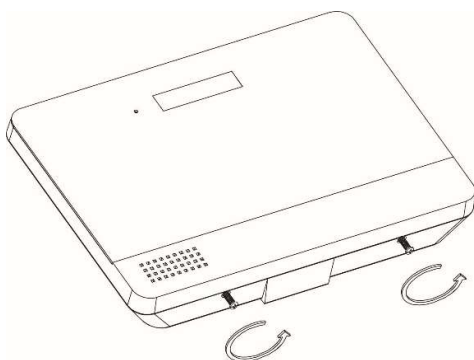


Figure 2

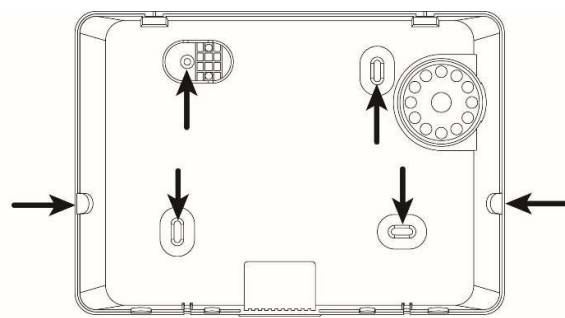

- Step 3.** Use the knockouts as templates to mark locations on the wall for wall mounting (**Figure 4**), insert wall plugs on marked location if fixing into plaster or brick. (**Figure 5**) Screw the back cover onto the wall. (**Figure 6**)

Figure 4

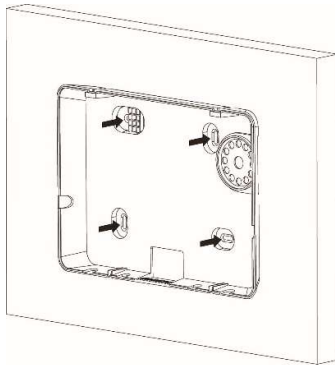


Figure 5


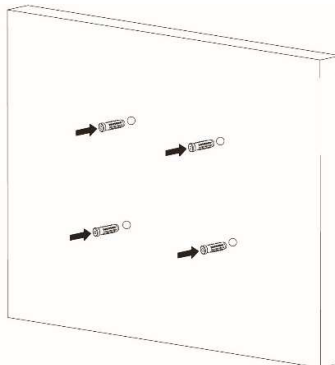


Figure 6

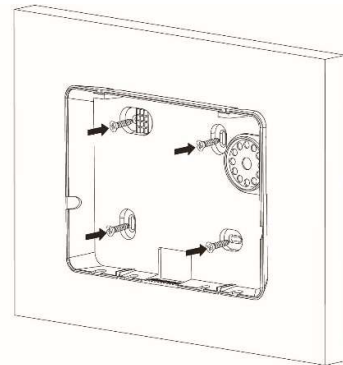


Step 4. Connect the Ethernet cable to the Control Panel. With GSM function, insert a SIM card into the SIM card base. Please make sure the SIM card PIN Code is disabled before inserting the SIM card.

Step 5. Connect a power cord to the built-in power unit connector.

Step 6. Slide Battery Switch to ON position.

Step 7. Hook the Control Panel onto the back cover and secure with screw.

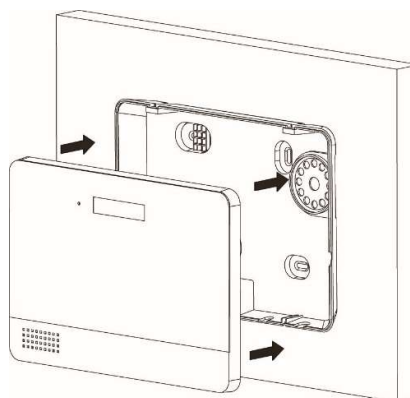

Step 8 To power on the Control Panel, connect the power cord to a wall outlet. Hardware installation is now complete; the Green Power LED will turn ON.


3.3. Software Installation

※ THIS INSTALLATION IS ONLY REQUIRED FOR FIRST TIME USER ※

1. RUNNING THE FINDER SOFTWARE

The Finder software is required for your computer to identify the control panel on the LAN.

Step 1. To download Finder software, open your browser and search on www.urmet.com

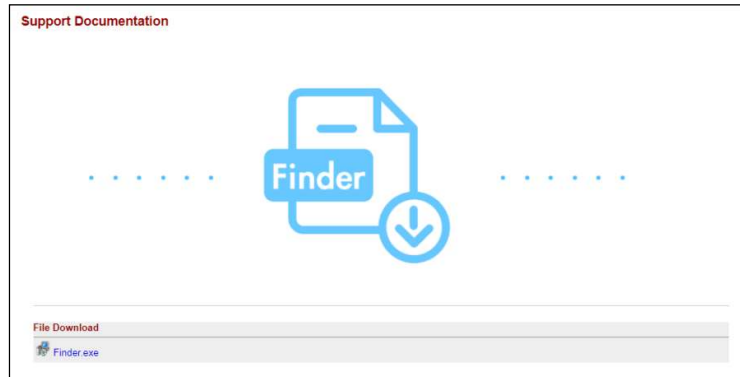

Step 2. After download, install the software and follow on-screen instructions to complete installation.




Step 3. Follow on screen instruction to complete installation


Step 4. Once complete, the Finder icon will be displayed on your desktop.




Step 5. Double click on the “**Finder.exe**” to start the software. Finder will automatically search for control panel on the LAN and display its information. If available, the panel’s LAN IP address, Firmware version and MAC address will be displayed

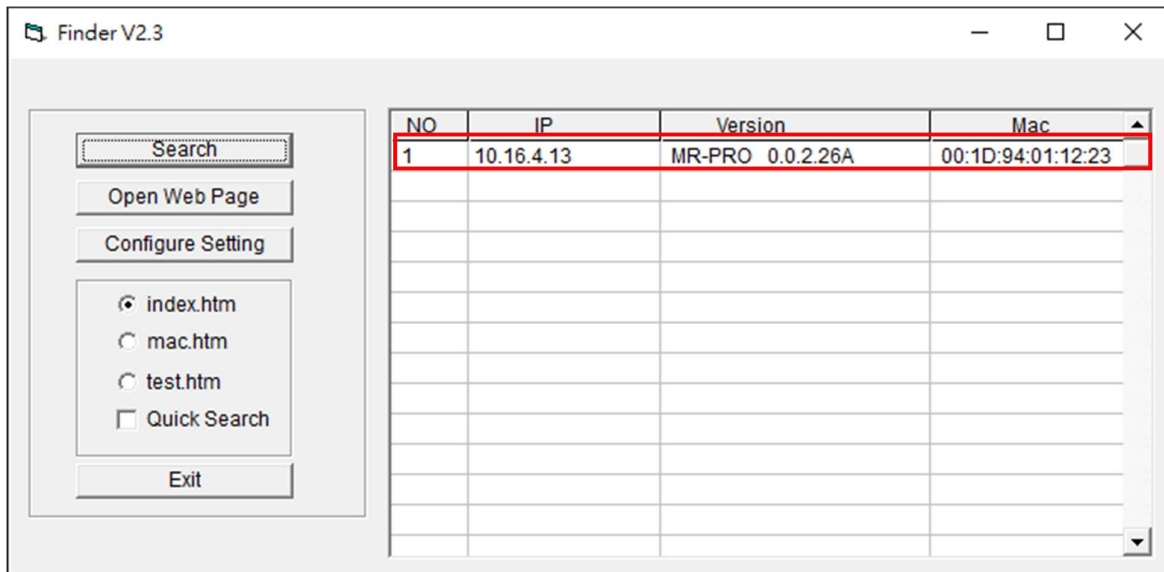

Step 6. If the panel information is not displayed, check panel power and Ethernet connection and click on “**Search**” to update the panel information.

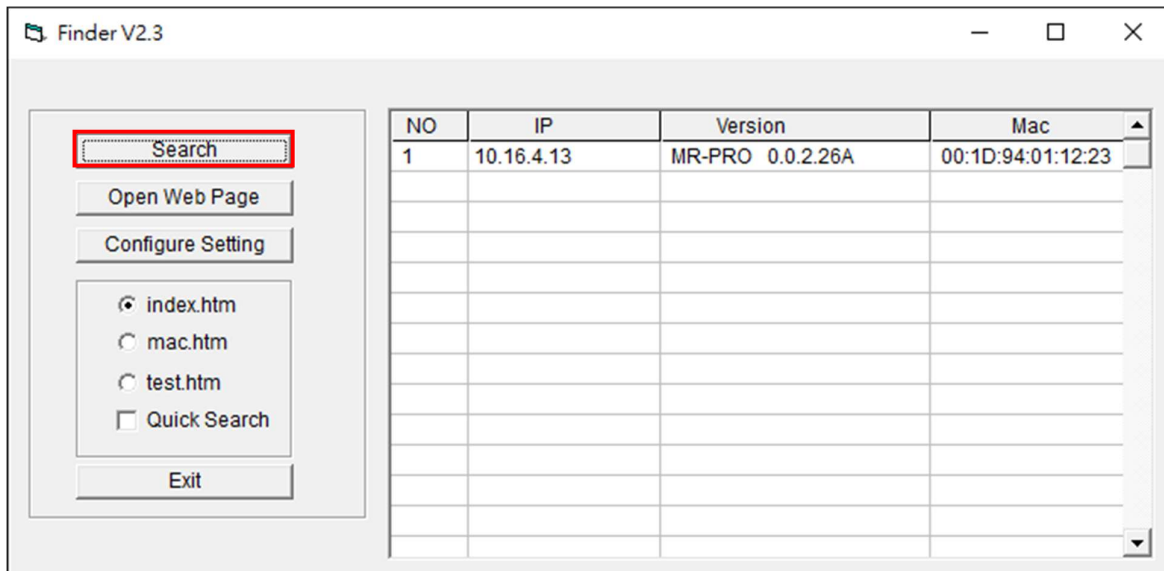

Step 7. (Optional) You can choose to edit the panel’s network setting by clicking on the panel column, then click “Configure Setting”

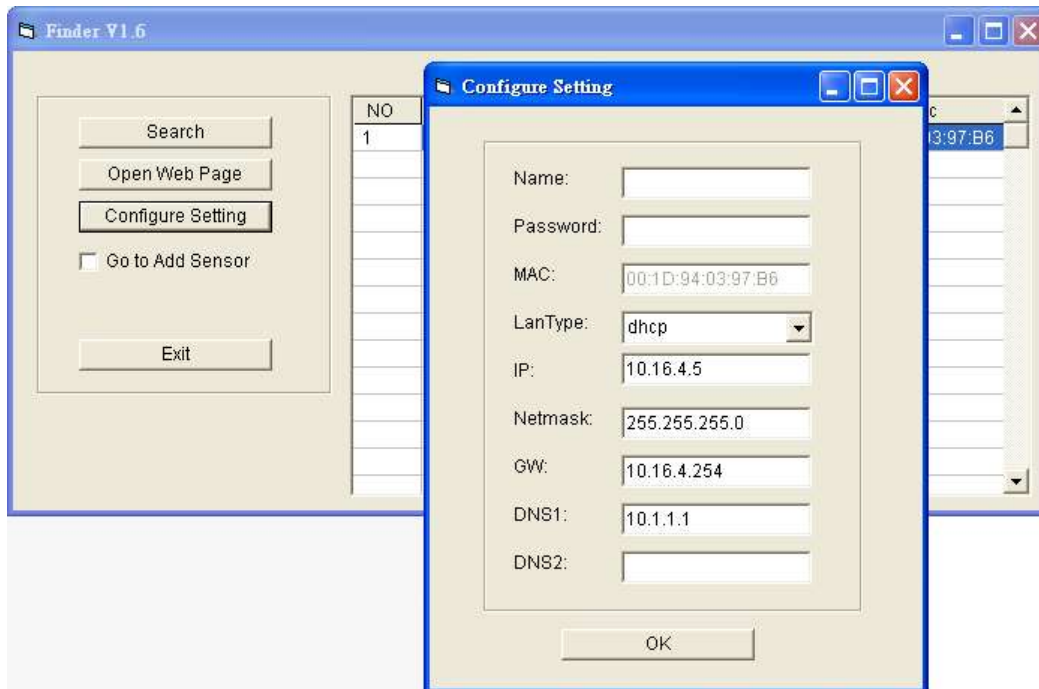

The LanType is default to **DHCP** and does not require manual input of IP/Netmask/Gateway/DNS setting. If you wish to configure these setting manually, change LanType to **Static**.

After finish changing network setting, enter the user name (default: **admin**) and password (default: **cX+HsA*7F1**) then click **OK** to confirm. The user name and password can be changed later in panel configuration webpage

- Step 8.** Click the panel information column and click on “**Open Web Page**”, or double click on the panel column to link to the panel configuration webpage. Your default browser will start automatically to connect to the LAN IP displayed in Finder.

4. Connection to Panel Webpage

For first time setup, webpage connection is only available within 1 hour after the panel is powered on; if the panel has been powered on for more than 1 hour. Webpage access will be disabled. Reboot the panel to enable webpage function again.

Change default password after login to gain unrestricted webpage access.

Step 1. Select the Control Panel in the Finder software and click on “Open Webpage” to connect to panel webpage.

Alternatively, enter the Control Panel IP address displayed in Finder into your browser’s address section and proceed.


Step 2. Enter the User name & Password to proceed

Default user name: **admin**

Default password: **cX+HsA*7F1**

(If wrong user name and password are entered for **5** times, the local webpage login will be disabled for **5** minutes.)

Step 3. You will enter change password page. Enter and repeat a new password (username change is optional), take care that both username and password are case sensitive. Click OK to confirm.

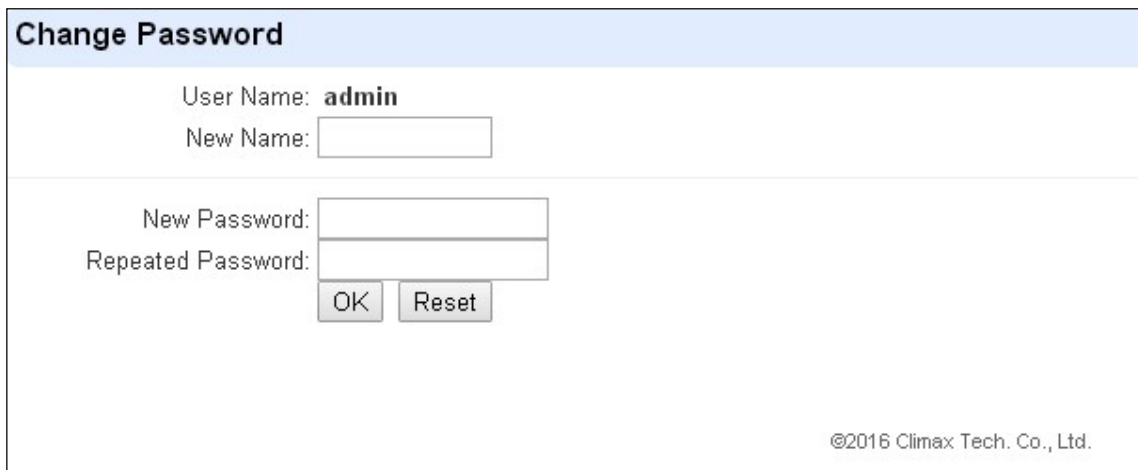

Change Password

User Name: **admin**

New Name:

New Password:

Repeated Password:

©2016 Climax Tech. Co., Ltd.

Step 4. Upon confirming new username and password. You will enter panel Welcome page. The panel will prompt you to re login with new username and password.

Step 5. You will enter panel Welcome page. The Control Panel’s information will be displayed. Click on the pages and folders on the left to access the Control Panel’s various functions

The Welcome page displays current control panel firmware version information according to different panel model and MAC address.

<IMPORTANT NOTE>

☞ If the default login password is not changed, webpage access will be disabled 1 hour after power on. Reboot the panel and changed password to allow unrestricted webpage access.

4.1 Selection of the language

In order to select the English language inside the menus, select the «Impostazioni Centrale» Menu, then the «Lingua» Menu and choose the language.



The refresh the page on the browser.

5. Device Management

The Device Management section allows you to learn in, edit, control and view all available accessory devices that can be included in the 1051/020 Control Panel.

5.1. Learning

Use this function to add new devices into the Control Panel. 1051/020 supports 1 area with max 80 devices.

The following types of accessory devices are supported:

- **RF device:** All RF devices are supported.
- **ZigBee device:** All ZigBee device with ZigBee Home Automation 1.2 profile are supported.


<IMPORTANT NOTE>

☞ The ZigBee module supports up to **40** ZigBee devices by itself. If you wish to include more than 40 ZigBee devices into the Control Panel, you must add extra ZigBee Routers into the Control Panel's ZigBee network to increase the network's maximum device capacity.

- **IP Cameras:** The Control Panel is compatible with Urmet 1051/004 IP Camera. Up to 6 IP Cameras are supported.

5.1.1. Add Sensor

Step 1. Click on “**Learning**” to enter learn page.

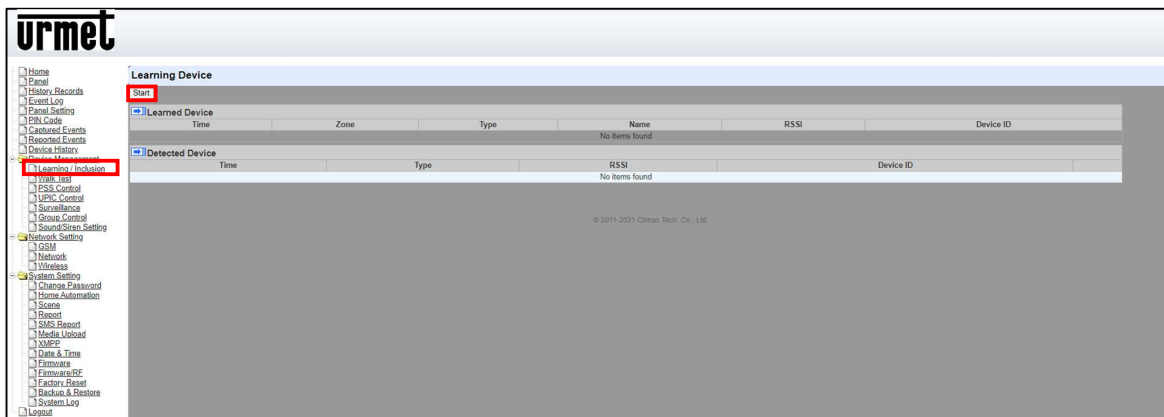

Step 2. Click on “**Start**” to enter learning mode.

Step 3. Press the test or learn button on the each device or any button on the Remote Controller. (Please refer to each sensor's user manual for test or learn button position).

<NOTE>

☞ For IP Camera Urmet 1051/004, press and hold the Privacy button for 10 seconds.

Step 4. When the system received the signal transmitted from device, the screen will display its information for selection.

Step 5. Click “**Add**” to include selected device into panel. If the sensor you wish to learn into already exists in the system, the sensor information will be displayed in the **Learned Device** section. If not, the sensor information will be displayed in the **Detected Device**

section.

<NOTE>

- ☞ For VST-862 F1 devices, press and hold the learn button for 3 seconds for the Control Panel to receive a learn code, and then click “**Add**” within 30 seconds.

Detected Device				
Time	Type	RSSI	Device ID	
02:31:49	Door Contact	8	RF:d291a110	Add

Step 6. If the device is successfully learnt into the system, the added device will be displayed in the “**Learned Device**” section.

Step 7. Repeat Step 3~5 to learn in all device, click Stop to exit learn mode when complete. The system will automatically exit Learn mode if left idle for 5 minutes.

5.1.2. Edit Devices

After finish learning devices, proceed to edit the device setting.

Step 1. Click **Panel** to enter Panel webpage. All learnt in devices will be displayed under **Device List** section.

urmet

Panel Control
Current mode: Disarm

Panel Status

Battery	Tamper	Interference	AC activation	Signal GSM	Background RSSI
Normal	Tamper	Normal	Normal	N/A	1

Test System: ☐ OK

System in maintenance

Fault Status

Fault	Setting
Panel Tamper	<input type="checkbox"/> Clear
SIM Not Inserted	<input type="checkbox"/> Clear
GSM No Signal	<input type="checkbox"/> Clear

OK | Reset

Reload

Device List

Zone	Type	Name	Condition	Battery	Tamper	Bypass	RSSI	Status	
1	Water Sensor					No	N/A		Edit Delete Bypass Identify

Note

No.	Type	Description	
#1			Edit
#2			Edit
#3			Edit
#4			Edit
#5			Edit

Reset Panel

Step 2. To edit the device setting or information, click “**Edit**” at end of device entry.

Zone	Type	Name	Condition	Battery	Tamper	Bypass	RSSI	Status	
1	Door Contact					No	N/A		Edit Delete

Step 3. You will enter Device Edit webpage

The screenshot shows the 'urmet' web interface. On the left is a navigation tree with links: Home, Panel, History Records, Event Log, Panel Setting, PIN Code, Captured Events, Reported Events, Device History, Device Management (expanded), Learning / Inclusion, Walk Test, PSS Control, UPIC Control, Surveillance, Group Control, Sound/Siren Setting, Network Setting (expanded), GSM, Network, Wireless, System Setting, and Logout. The main content area is titled 'Device Edit' and shows details for a 'Water Sensor'. The ID is 'ZB:10bb01 / ZM:00124b000270139a' and the Version is 'WS_00.00.00.07TC'. Under 'Capability', there are fields for Name, Tag, and Zone (set to 1). There are two 'Attribute' checkboxes: 'Permanently Bypass' (unchecked) and '24 HR: Water Alarm' (checked). Below these are several 'Response' dropdown menus: Disarm Response, Full Arm Response, Home Arm 1 Response, Home Arm 2 Response, Home Arm 3 Response, Trigger Response, and Restore Response, all currently set to 'No Response'. An 'Exit' checkbox is checked and labeled 'No Response'. At the bottom are buttons for 'OK', 'Default', 'Reset', and a link for 'Cancel'.

Step 3. Edit your device setting and information according to instruction below. Click “**OK**” to save your new changes when finished. Alternatively, click “**Default**” to reset all parameters to default values or click “**Reset**” to re-enter all the information.

- **Name:** Enter a name for the device.
- **Zone:** Select the Device zone number.
- **Attribute List:**
The attribute list determines panel behaviour when the panel receives trigger signal from the device. There are

General Attribute:

[Permanently Bypass](#)

This function allows user to permanently deactivate (bypass) the selected device.

- If bypassed, then the Control Panel will not respond at all when the sensor is triggered.
- If bypassed, the system can be armed directly regardless the device's fault situation. However, its fault situation will still be monitored, logged and displayed in the webpage.

[Latch report](#)

This function **ONLY** applies to Remote Control or Door Contact with Set/Unset attribute

enabled.

- Latch Report **ON**: When the device is used to change system arm mode, the Control Panel will report the arm/disarm action by the particular device.
- Latch Report **OFF**: When the device is used to change system arm mode, the Control Panel will not report the arm/disarm action by the particular device.

Set/Unset

This function is for Door Contact only. This function allows Door Contact to control system mode.

- **Normal Close**: The system will be armed when the Door Contact is opened, and disarmed when Door Contact is closed.
- **Normal Open**: The system will be armed when the Door Contact is closed, and disarmed when Door Contact is open.

24HR

This function enables the device to activated selected alarm event whenever it is triggered regardless of system mode. System mode response will be disabled if 24HR attribute is enabled.

System Mode Attributes:

The System Mode Attributes determines system behavior under particular arming mode when the sensor is triggered.

No Response

- When a sensor with **No Response** is triggered, the Control Panel will not respond.

Start Entry Delay 1/ Start Entry Delay 2

- When the system is under Full Arm or Home Arm mode, if a sensor with **Start Entry Delay 1/2** attribute is triggered, Control Panel will start an entry countdown period to give enough time to disarm the system.
- When the Control Panel is in the Disarm mode, if a sensor with **Start Entry Delay 1/2** attribute is triggered, the Control Panel will immediately report a burglar interior alarm (**CID code: 132**).
- When the Control Panel is in the Full Arm mode, if a sensor with **Start Entry Delay 1/2** attribute is triggered, the Entry Delay 1/2 timer starts counting down. If no correct pin code is entered during the entry delay timer to disarm the system, the Control Panel will report a burglar perimeter alarm (**CID code:131**) immediately after entry delay timer 1/2 expires.
- When the Control Panel is in the Home Arm 1/2/3 mode, if a sensor with **Start Entry Delay 1/2** attribute is triggered, the Entry Delay 1/2 timer starts counting down. If no correct pin code is entered during the entry delay period to disarm the system, the Control Panel will report a burglar interior alarm (**CID code: 132**) immediately after entry delay timer 1/2 expires.

Chime

- When the system is in Arm/ Home Arm 1/ Home Arm 2/ Home Arm 3 mode, if a sensor set to Chime is triggered, the Control Panel will sound a Door Chime (Ding-Dong Sound).

Burglar Follow

- When the system is in Full Arm or Home Arm mode mode, if a sensor set to **Burglar Follow** is triggered, the Control Panel will report a burglar alarm

immediately.

- When a Start Entry sensor is triggered and the system is under Entry Delay Timer countdown, if a sensor set to **Burglar Follow** is triggered, the Control Panel will wait until the Entry Delay Timer expires before activating a burglar alarm. If the system is disarmed before the timer expires, the Control Panel will not activate alarm.

Burglar Instant

- When the system is under Full arm or Home Arm/ Disarm / Entry Time mode, if a sensor set to **Burglar Instant** is triggered, the Control Panel will report a burglar alarm immediately.

Burglar Outdoor

- When the system is in Full Arm or Home Arm / Disarm / / Entry Time mode, if a sensor set to **Burglar Outdoor** is triggered, the Control Panel will report a burglar outdoor event immediately.

Cross Zone

- See **Appendix – Cross Zone Verification** for detail.

Apply Scene

- This function is only available for Remote Keypad and Remote Control.
- Select a Home Automation Scene number for a Remote Keypad or Remote Control button. When the button is pressed, the Control Panel will execute the actions programming in the Scene accordingly. For more information, please refer to **8.3. Scene**.

Home Automation Attributes:

The Home Automation Attributes allows a device to control Home Automation function.

Trigger Response

- When the device is triggered, the Control Panel will activated selected Home Automation Scene number. Please refer to **8.3. Scene** webpage for detail.

Restore Response

- When the device transmits restore signal after trigger, the Control Panel will activate selected Home Automation Scene number.

Other Attributes:

Permanent Bypass

- When checked, the panel will completely ignore all signal received from this device. A bypassed device will be unable to trigger any response, including alarm or fault from the Control Panel. All other attribute settings will be also be ignored.

Exit (No Response)

- If checked, the panel will ignore trigger signal from this sensor during Exit Time countdown. If deselected, the panel will activated burglar alarm and report immediately when the sensor triggered during Exit Delay Timer.

24HR

- A sensor set to 24HR attribute will ignore Disarm, Full Arm, Home are and Exit response setting. The panel will activate selected alarm when this sensor is

triggered regardless of system mode under any time.

<NOTE>

- Some devices have their own unique functions and will have its own attribute setting which is not listed in this section. Please refer to the device manual for its setting detail.

5.1.3. Delete Devices

Step 1. To delete a sensor, click “Delete” under “Device List”

Device List										
Zone	Type	Name	Condition	Battery	Tamper	Bypass	RSSI	Status		
1	Water Sensor					No	N/A		Edit	Delete

Step 2. A message “Delete success” is displayed and the sensor you choose is deleted successfully.

5.1.4. Identify ZigBee Device

The Identify function is available for ZigBee device only, it can be used to locate ZigBee devices after learning.

For battery powered ZigBee devices, the identify function should be used within 1 minute after pressing device button, or 3 minute after learning in the device. Otherwise due to ZigBee network mechanisms, the device may not be able to receive signal successfully from panel.

AC powered ZigBee devices do not have such limits and you can use Identify function anytime.

Step 1. Click “Identify” under the Device List after the device column entry.

Device List										
Zone	Type	Name	Condition	Battery	Tamper	Bypass	RSSI	Status		
1	Water Sensor					No	N/A		Edit	Delete

Step 2. If the ZigBee device receives signal successfully, the webpage will display a success message and the ZigBee device LED indicator will flash 10 times to confirm.


<NOTE>

- If a timeout message is displayed on webpage, it means the device did not receive signal from Control Panel, please check ZigBee device range from panel and make sure to follow instruction above about Identifying battery powered ZigBee devices.

5.2. Walk Test

This is to test the sensor operation range for installation purpose.

Step 1. Click “**Start**” to enter Walk Test mode.

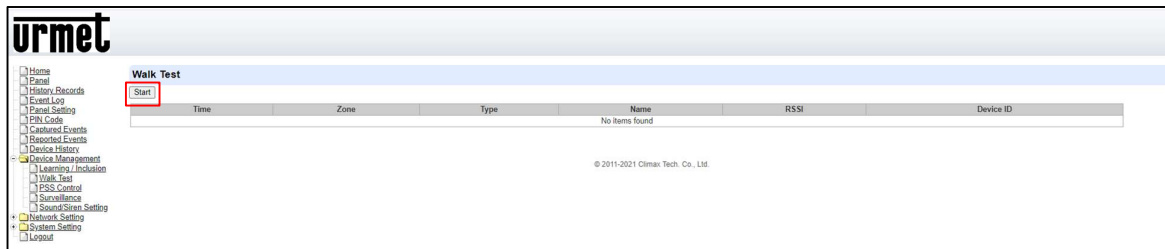

Step 2. Press the test button on the sensor(s) or any button on the Remote Controller or triggering the sensor.

Step 3. When the Control Panel receives a signal, it will show as below and a 2-tone beep will be heard to indicate that it is safe to install the particular sensor in the location.

- **Time:** time information
- **Zone:** device zone
- **Type:** device type
- **Name:** device name
- **Rssi:** the RF signal strength between Control Panel and sensor. The Rssi value here must be higher than the Rssi value of Panel's background noise (please refer to *Panel Condition section for details*). If not, you may still learn in the sensor; however, please relocate the sensor and use Walk test to find a more suitable location.
- **DeviceID:** device's unique identification code.

Step 4. Once all sensors are tested, click on “**Stop**” to exit Walk Test mode. The system will automatically exit Walk Test mode if left idle for 5 minutes.

5.3. PSS Control

This feature is designed to control/edit/delete Power Switches included in the panel.



Zone	Type	Name	Status	
1	Power Switch Meter		Off, 0.0W	Edit Delete Switch On Switch Off Switch Toggle

- Click **Edit** to edit attributes of power switches.
- Click **Delete** to remove power switch from panel.
- Click **Switch On/Switch Off** to turn on/off power switches. Or click **Switch Toggle** to toggle between on/off status. For Power Switch Dimmer, you can also set its power output level with the slide down menu.

5.4. UPIC Control

UPIC Control webpage allows you to control UPIC IR Transmitter included in Control Panel

The screenshot shows the 'urmet' logo at the top left. A sidebar on the left contains a tree menu with categories like Home, Panel, History Records, Event Log, Panel Setting, PIN Code, Captured Events, Reported Events, Device History, Device Management (with sub-items like Learning / Inclusion, Walk Test, PSS Control, UPIC Control, Surveillance, Group Control, Sound/Siren Setting), Network Setting, System Setting, and Logout. The main content area is titled 'UPIC Control'. It features a table with columns 'Zone', 'Type', and 'Name'. The first row shows '1' in the Zone column, 'UPIC' in the Type column, and a dropdown menu set to 'Off' in the Name column. To the right of the dropdown is a 'Setup UPIC' button. Below the table, there are five dropdown menus for different appliance types: 'Air Conditioner' (set to 1), 'TV' (set to 1), 'Home Audio' (set to 1), 'Set-top Box' (set to 1), and 'Others' (set to 1). To the right of these is a 'Setup LEDs' button. Below the table, the text 'UPIC5 LEDs:' is followed by a diagram showing a central blue circle connected to five surrounding blue circles labeled 1, 2, 3, 4, and 5.

- **Transmit IR Signal**

Depending on the UPIC model number, select the function to be performed in the drop down menu, then click “Setup UPIC” for the UPIC to transmit IR Signal.

- **UPIC5 LED Setup (UPIC5 only)**

UPIC5 has 6 IR LEDs, a central one and 5 surrounding ones. The central LED will always transmit IR signal when activated; besides the central LED, one of the 5 surrounding LEDs can be selected to activate upon IR signal transmission to increase the IR signal coverage.

Step 1: Refer to the diagram on the webpage and UPIC5 manual to determine which LED should be used for signal transmission to each particular home appliance.

Step 2: Select the LED number from the drop down menu for each appliance type, then click “Setup LED” to confirm. Please refer to UPIC5 manual for more information.

<EXAMPLE>

- ☞ If “Air Conditioner” is set to LED 1, UPIC5 will transmit all Air Condition functions with both Central LED and LED1.
- ☞ If “TV” is set to LED 5, UPIC5 will transmit all Air Condition functions with both Central LED and LED5.

5.5. Surveillance

The PIR Camera/Video Cameras and IP Cameras are listed under **Surveillance** for separate control.



Zone	Type	Name	
2	IR Camera		Edit Delete Request Media Request Media (No Flash)
9	IP Camera		Edit Delete Request Media View Setting

- Click **Edit** to edit camera attributes.
- Click **Delete** to remove device from panel.
- Click **Request Media** to capture a picture or vide
 - PIR camera: A picture will be captured upon request
 - PIR Video Camera: A 10-second video will be recorded upon request
 - IP Camera: The IP Camera will record a video according to its video length setting (Please refer to IP Camera manual for detail.)
 - For PIR Camera/Video Camera, you can choose to take the picture/video without activating the camera's flash.

Picture and video captured by PIR Camera and PIR Video Camera will be stored under the **Captured Event** webpage. Video Recorded by IP Camera will be stored in the IP Camera, please refer to IP Camera manual to view the video

- For IP Camera, click "View" or "Setting" to access IP Camera webpage for video streaming or setting configuration. A new webpage will open and you will be required to enter the username and password for the IP Camera to access streaming or setting.

5.6. Group Control

This feature is designed for you to edit a name of group, switch on or off a group of Power Switches. You can also assign Power Switches to groups you desire.

5.6.1. Group Control/Edit

Step 1. Specify a new name for a group.

Group	Name	Switch On	Switch Off	Switch Toggle	Dimmer
1		Switch On Empty ▼	Switch 100% ▼	Switch Off Switch Toggle	
2		Switch On Empty ▼	Switch 100% ▼	Switch Off Switch Toggle	
3		Switch On Empty ▼	Switch 100% ▼	Switch Off Switch Toggle	
4		Switch On Empty ▼	Switch 100% ▼	Switch Off Switch Toggle	
5		Switch On Empty ▼	Switch 100% ▼	Switch Off Switch Toggle	
6		Switch On Empty ▼	Switch 100% ▼	Switch Off Switch Toggle	
7		Switch On Empty ▼	Switch 100% ▼	Switch Off Switch Toggle	
8		Switch On Empty ▼	Switch 100% ▼	Switch Off Switch Toggle	

OK Reset

Device List

Zone	Type	Name	Group 1	Group 2	Group 3	Group 4	Group 5	Group 6	Group 7	Group 8
No items found										

OK Reset

Step 2. Click **Switch On/Switch Off** to turn on/off one group of power switches.

Click the drop down menu (empty, 1 min~30 min) to set up the interval between switching on and automatically switching off a group of power switches.

Click the drop down menu (0%, 10%~100%) to control the level of Dimmer.

Click **Switch Toggle** to toggle between on/off status.

5.6.2 Device Edit/Delete

Step 1. Check on the groups you wish to assign the Power Switch. This is a multiple-choice field and you can assign one Power Switch to multiple groups. Whenever one of the assigned groups receives request to turn on/off, all Power Switches belonging to the group will be activated accordingly.

Zone	Type	Name	Group 1	Group 2	Group 3	Group 4	Group 5	Group 6	Group 7	Group 8
1	Power Switch Meter		<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>


Edit Delete

OK Reset

Step 2. Click **Edit** to edit attributes of an added power switch or power switch meter or **Delete** to delete this device.

5.7. Sound/Siren Setting

The Sound/Siren Setting page includes setting Siren configuration function.

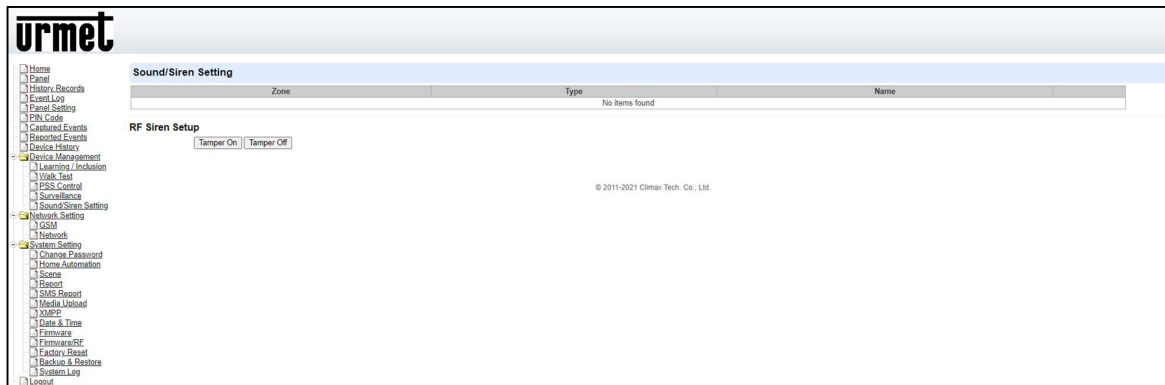

5.7.1. Device Edit/Delete

Click **Edit** to edit the Siren's attribute, volume and voice settings, or **Delete** to delete the Siren.

Zone	Type	Name	
4	Siren		Edit Delete

After clicking **Edit**, you will be directed to the Device Edit page:

urmet

Device Edit

Siren

ID: RF:0ddecab0

Version:

Capability:

Name:

Zone: 4

Attribute: ☐ Permanently Bypass

Volume: Alarm sound: High

Volume: Full arm confirm beep: Middle

Volume: Home arm confirm beep: Middle

Volume: Disarm confirm beep: Middle

Volume: Exit beeps of full arm: Middle

Volume: Exit beeps of home arm: Middle

Volume: Entry beeps of full arm: Middle

Volume: Entry beeps of home arm: Middle

Volume: Door chime: Middle

Volume: Doorbell: Middle

Volume: Fault beep: Middle

Volume: Pre-alarm (outdoor IR warning beeps): Middle

☒ Burglar trigger in home arm

☒ Burglar trigger in full arm

☒ Strobe activation

☒ Confirm flash

☒ Exit flash

☒ Entry flash

☒ Trigger flash

☐ Alarm-in-memory sound

☐ Fault sound

OK Default Reset Or Cancel

<NOTE>

The Device Edit page is only available for the newest BX/Siren series and BX series

without DIP Switch.

Edit your Siren setting and information accordingly to instruction below. Click “**OK**” to save your new changes when finished. Alternatively, click “**Default**” to reset all parameters to default values or click “**Reset**” to re-enter all the information.

- **Name:** Enter a name for the Siren.
- **Zone:** Select the Siren zone number.

Attribute:

- **Permanently Bypass:** If checked, the Control Panel will completely ignore all signal received from the Siren. A bypassed Siren will not be able to trigger any response, including alarm or fault from the Control Panel. All other attribute settings will also be ignored.

Volume:

- **Alarm Sound:** set the volume of the alarm sound of the Siren when alarming.
- **Full arm confirm beep:** set the volume of the confirm beep sound of the Siren when Control Panel is put into Full Arm Mode.
- **Home arm confirm beep:** set the volume of the confirm beep sound of the Siren when Control Panel is put into Home Arm Mode.
- **Disarm confirm beep:** set the volume of the confirm beep sound of the Siren when Control Panel is put into Disarm Mode.
- **Exit beeps of full arm:** set exit countdown beep volume under Full Arm Mode.
- **Exit beeps of home arm:** set exit countdown beep volume under Home Arm Mode.
- **Entry beeps of full arm:** set entry countdown beep volume under Full Arm Mode.
- **Entry beeps of home arm:** set entry countdown beep volume under Home Arm Mode.
- **Door Chime:** set the volume of the Door Chime sound (Ding-Dong Sound).

Voice:

*(The following functions are only available for **SRV** devices):*

- **Fault beep:** set the volume of the voice played when system is force armed under fault conditions.
- **Pre-alarm (outdoor IR warning beeps):** set the volume of the voice played when an outdoor burglar sensor(Door Contact, IR) is triggered.


Behavior

*(The following functions are only available for **RF modules**):*

- **Burglar trigger in home arm:** Enable or Disable whether Siren is activated when an alarm is triggered under Home Arm.
- **Burglar trigger in full arm:** Enable or Disable whether Siren is activated when an alarm is triggered under Full Arm.
- **Strobe activation:** Enable or Disable Siren LED strobe activation.
- **Confirm flash:** Enable or Disable Siren LED flash when system Armed/Disarmed.
- **Exit flash:** Enable or Disable Siren LED flash during an exit countdown period.
- **Entry flash:** Enable or Disable Siren LED flash during an entry countdown period.

- **Trigger flash:** Enable or Disable the flashing from the Siren LED when alarming.
- **Alarm-in-memory sound:** Enable or Disable Alarm in Memory sound.
- **Fault sound:** Enable or Disable system fault sounds.

5.7.2. RF Siren Setup

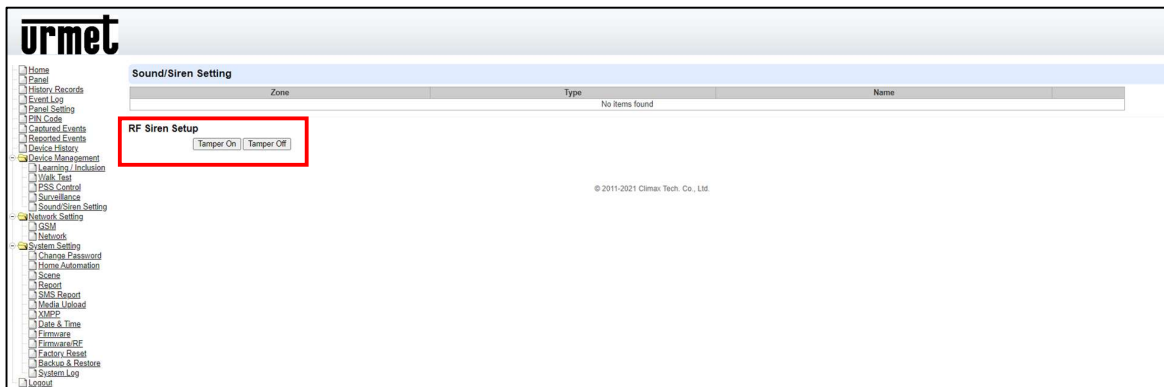

➤ Tamper On/Off

You can enable/disable all RF Sirens tamper protection with this function. Select to turn on or off the sirens tamper function.

<NOTE>

- ☞ When turned off, if siren tamper will be enabled again automatically after one hour if not turn on manually during the one hour period.

6. Program the System

After the initial set-up, you can then program your system by clicking on the left menu to set them individually.

6.1. Panel Condition

In the **Panel** Section, user can arm, disarm or partially arm the system. Besides, it displays the current **Panel Status & Device Information**.

urmet

Panel Control
Current mode: Disarm

Panel Status

Battery	Tamper	Interference	AC activation	Signal GSM	Background RSSI
Battery Missing/Dead	Tamper	Normal	Normal	N/A	3

Test System [OK]
System in maintenance

Fault Status

Fault	Setting
Panel Tamper	<input type="checkbox"/> Clear
SIM Not Inserted	<input type="checkbox"/> Clear
GSM No Signal	<input type="checkbox"/> Clear
Panel Battery Missing/Dead	<input type="checkbox"/> Clear

[OK] [Reset]

Reload

Device List

Zone	Type	Name	Condition	Battery	Tamper	Bypass	RSSI	Status
No items found								

Note

No.	Type	Description	Edit
#1			Edit
#2			Edit
#3			Edit
#4			Edit
#5			Edit

[Reset Panel]

Panel Status

The Control Panel will update the panel status periodically. However, in order to show the current status, you must reload the screen to refresh the display.

- **Battery:** When battery is running low, a “low battery” message will be displayed to inform you to recharge the battery.
- **Tamper:** (reserved)
- **Interference:** This is for you to check whether the Control Panel is purposely interfered. The jamming period detected will be accumulated, and when the total period exceeds 30 seconds within 1 minute, a “Jamming” message will be shown and reported to the Central Monitoring Station accordingly.
- **AC activation:** To check whether AC power is connected. If not, it will show “AC Failure”.
- **Background RSSI:** Rssi value is for you to check the RF environment around the Control Panel. It ranges from 0 to 9, where 0 refers to the weakest and 9 refers to the strongest background noise. Therefore, the lower the Rssi value, the better the environment.

Test System

The function is designed to send a command to sever over the polling or XMPP protocol.

Fault Status

The fault events that exist in the alarm system is displayed under this section. When fault event exists in system, the control panel Fault LED will light up to indicate fault status under Disarm or Home Arm mode (The Fault LED will not light up under Arm mode).

When fault event exists, and you attempt to arm the system, the arming action will be prohibited

and the panel will display fault information on the webpage. If you still want to arm the system, perform the arming action again to force arm.

You can check the “Clear” box in the setting column then click “OK” to ignore the fault event.

Cleared fault event will not cause the Fault LED to light up, nor prohibit arming.

Device List

1. The Control Panel will update the device information periodically. However, in order to show the current status, you must **reload** the screen to refresh the display.

- **Zone:** device zone
- **Type:** device type
- **Name:** device title
- **Status:** device's current status, such as tamper status, battery status, out of order condition or DC open. If PSM is added into the system, the data of PSM, such as On/Off status, voltage, electric current and watt, will be displayed.

2. Under **Device**, you could further **edit** or **delete** an added device. Beside, you can reset Panel settings or clear the system faults by pressing **Reset Panel**.

Zone	Type	Name	Condition	Battery	Tamper	Bypass	RSSI	Status	
2	UPIC					No	Strong, 7		Edit Delete
3	IR					No	Strong, 8		Edit Delete
6	Keypad					No	Strong, 6		Edit Delete

- After pressing **Reset Panel**, the Control Panel will restart in 60 seconds and all configured values will be kept without any change.

Note

Note			
No.	Type	Description	
#1			Edit
#2			Edit
#3			Edit
#4			Edit
#5			Edit

The function is designed for installer to make a note for each control panel. The note you make here can be delivered to a server over XMPP or polling protocol.

6.2. Panel Settings

Program the **Panel**, **Time** and **Sound Settings** at your discretion.

The screenshot displays the 'urmet' web interface. On the left is a navigation tree with categories like Home, Panel, History Records, Event Log, Panel Setting, PIN Code, Captured Events, Reported Events, Device History, Device Management, Network Setting, System Setting, and Logout. The main content area is divided into four sections: Panel Setting, Area Setting, Time Setting, and Sound Setting. Each section contains various configuration options with dropdown menus or radio buttons. The 'Panel Setting' section includes AC Fail Report, AC Fail Suspend, Jamming Report, Auto Check-in Interval, Auto Check-in Offset Period, IR Camera Resolution of Alarm Images, Outdoor IR Camera in Grayscale, Internal Siren, and Bypass. The 'Area Setting' section includes Final Door, Arm Fault Type, Tamper Alarm, and Supervision Check. The 'Time Setting' section includes Supervision Timer, Entry Delay 1 for Full Arm, Entry Delay 2 for Full Arm, Exit Delay for Full Arm, Entry Delay 1 for Home Arm, Entry Delay 2 for Home Arm, Exit Delay for Home Arm, Alarm Length, Cross Zone Timer, and Fire Verification Timer. The 'Sound Setting' section includes Door Chime Setting, Entry Delay Sound for Full Arm, Exit Delay Sound for Full Arm, Entry Delay Sound for Home Arm, Exit Delay Sound for Home Arm, Confirm Sound, Warning beep, and Entry/Exit Only Final Beeps. Each section has 'OK' and 'Reset' buttons at the bottom.

urmet

Panel Setting

AC Fail Report
AC Fail Suspend
Jamming Report
Auto Check-in Interval
Auto Check-in Offset Period
IR Camera Resolution of Alarm Images
Outdoor IR Camera in Grayscale
Internal Siren
Bypass

Area Setting

Final Door
Arm Fault Type
Tamper Alarm
Supervision Check

Time Setting

Supervision Timer
Entry Delay 1 for Full Arm
Entry Delay 2 for Full Arm
Exit Delay for Full Arm
Entry Delay 1 for Home Arm
Entry Delay 2 for Home Arm
Exit Delay for Home Arm
Alarm Length
Cross Zone Timer
Fire Verification Timer

Sound Setting

Door Chime Setting ☐ Off ☒ Low ☐ High
Entry Delay Sound for Full Arm ☐ Off ☒ Low ☐ High
Exit Delay Sound for Full Arm ☐ Off ☒ Low ☐ High
Entry Delay Sound for Home Arm ☐ Off ☒ Low ☐ High
Exit Delay Sound for Home Arm ☐ Off ☒ Low ☐ High
Confirm Sound ☐ Off ☒ Low ☐ High
Warning beep ☐ Off ☒ Low ☐ High
Entry/Exit Only Final Beeps

Panel Setting

- **AC Fail Report:** When an AC power failure is detected, your Control Panel will report to the Central Monitoring Station according to the duration set under AC Fail Report. If 5 minutes is set, the event will be automatically reported to the CMS after 5 minutes. Your Control Panel will start to use its battery power instead of the mains power until the fault even is cleared.
- **AC Fail Suspend:** After an AC power failure event is reported, the Control Panel will convert to sleep mode to conserve battery power. During this period, both GSM and

Ethernet port will be powered off, while the RF module will keep working. If 5 seconds is set, both GSM and Ethernet port will be powered off after 5 seconds. In order to send messages to the CMS, the Control Panel will power on its GSM and Ethernet temporarily.

- **Jamming Report:** Jamming period is specified as background RSSI level detected exceeding the threshold for a period of time. The jamming period detected will be accumulated.

3 options **Disable**, **1 minute** and **2 minutes** are provided. If **1 minute** is set, once the total jamming period exceeds 30 seconds within 1 minute, a "Jamming" message will be reported to the Central Monitoring Station. If **2 minutes** is set, once the total jamming period exceeds 60 seconds within 2 minutes, a "Jamming" message will be reported to the Central Monitoring Station. If **Disable** is set, the control panel will not send a jamming report to the Central Monitoring Station if a jamming fault is detected.

- **Auto Check-in:** this is to select whether the Control Panel needs to send check-in reporting to the Central Station automatically and to select the period of time between check-in reports. Options available are **Disable**, **1 hour**, **2 hours**, **3 hours... up to 4 Weeks**.
- **Auto Check-in Offset Period:** This is to set the time delay before the first **Auto Check-In** report is made. After power is supplied or re-supplied to the Control Panel, a test report will be sent to the Central Monitoring Station (CMS) based on the Offset Period. This is used to test whether the CMS is able to receive the report from the Panel accurately.

After this test report is sent, the Control Panel will then send reports at regular interval based on the setting of the Auto Check-in Report.

For example, if **Offset Period** is set to 2 Hours, and **Auto Check-in Report** is set to 12 hours, the Control Panel will transmit an event code 602 to the CMS after 2 hours, and then report 602 event code periodically at a regular intervals of 12 hours.

- **IR Camera Resolution of Alarm Images:** This is to select the resolution and number of pictures taken by PIR Camera when the camera detects a movement in armed mode. Options available are **320x240x3 images (Default)**, **320x240x6 images** and **640x320x3 images**.
- **Outdoor IR Camera in Greyscale:** This is to select whether pictures from Outdoor PIR Camera should be taken in greyscale instead of color pictures. Options available are: **Disable** (Color Picture) and **Enable** (Greyscale picture)
- **Internal Siren:** If disabled, the built-in siren will not sound alarm when an alarm is triggered.
- **Bypass:** You can select IP (LAN+WIFI), GSM or GSM+IP to bypass the connection fault of the Control Panel.

Area Setting

- **Final Door:** If set to **On**: When the system is Away Armed and under exit timer countdown, if a opened Door Contact set to Entry attribute is closed, the system will automatically arm the system even if the exit delay timer has not expired yet.
- **Arm Fault Type:** Select how the system should respond when it is being armed under fault condition.
 - ✓ Confirm: The panel will first display a "Mode Change Fault" message and emit 2 beeps. Arming again within 10 seconds will force arm the system.
 - ✓ Direct Confirm: The system will be force armed directly without displaying fault

message and report an event.

- **Tamper Alarm:** Select whether the siren should sound alarm when the tamper is triggered.
 - ✓ Full Arm: when tamper is triggered under Full arm mode, Control Panel raises a local alarm and sends report to the monitoring center. While under Home Arm or Disarm modes no alarm will be activated, nor report sent.
 - ✓ Always: Control Panel raises a local alarm and send report for tamper-trigger in all modes.
- **Supervision Check:** Select to enable or disable system supervision function. When **ON** is selected, the Control Panel will monitor the accessory devices according to the supervision signal received.

Time Setting

- **Supervision Timer:** The Control Panel monitors accessory devices according to the supervision signal transmitted regularly from the device. User this option to set a time period for receiving supervision signals. If the Control Panel fails to receive supervision signal from a device within this duration, it will consider the device out of order and report the event accordingly.
- **Entry Delay 1 for Full Arm:** Set Entry Delay Timer 1 for full arm mode. When a sensor set to Start Entry Delay 1 is triggered under Full Arm mode, the control panel will begin Entry Delay Timer countdown according to duration set with this option

If the Control Panel is disarmed before the Entry Delay Timer expires, the panel returns to Disarm mode and no alarm is activated. If the Control Panel is not disarmed before the Entry Delay Timer expires, the alarm will be activated and the panel will send report.
- **Entry Delay 2 for Full Arm:** Set Entry Delay Timer 2 for full arm mode. When a sensor set to Start Entry Delay 2 is triggered under Full Arm mode, the control panel will begin Entry Delay Timer countdown according to duration set with this option

If the Control Panel is disarmed before the Entry Delay Timer expires, the panel returns to Disarm mode and no alarm is activated. If the Control Panel is not disarmed before the Entry Delay Timer expires, the alarm will be activated and the panel will send report.
- **Exit Delay for Full Arm:** Set the Exit Delay Timer when entering Full Arm mode. When the user changes system mode to Full Arm, the panel will begin Exit Delay Timer Countdown and enter Full Arm mode when the timer expires. The user must leave area protected by sensors before the timer expires, otherwise an alarm will be activated with the sensor is triggered.
- **Entry Delay 1 for Home Arm:** Set Entry Delay Timer 1 for Home Arm mode. When a sensor set to Start Entry Delay 1 is triggered under Home Arm mode, the control panel will begin Entry Delay Timer countdown according to duration set with this option

If the Control Panel is disarmed before the Entry Delay Timer expires, the panel returns to Disarm mode and no alarm is activated. If the Control Panel is not disarmed before the Entry Delay Timer expires, the alarm will be activated and the panel will send report.
- **Entry Delay 2 for Home Arm:** Set Entry Delay Timer 2 for Home Arm mode. When a sensor set to Start Entry Delay 2 is triggered under Home Arm mode, the control panel will begin Entry Delay Timer countdown according to duration set with this option

If the Control Panel is disarmed before the Entry Delay Timer expires, the panel returns to Disarm mode and no alarm is activated. If the Control Panel is not disarmed before the Entry Delay Timer expires, the alarm will be activated and the panel will send report.
- **Exit Delay for Home Arm:** Set Exit Delay Timer for Home Arm mode. When the user changes system mode to Home Arm, the panel will begin Exit Delay Timer Countdown and enter Home Arm mode when the timer expires. The user must leave area protected

by sensors before the timer expires, otherwise an alarm will be activated with the sensor is triggered (Default as 10 seconds).

- **Alarm Length:** Set the duration the external siren should sound when an alarm is activated.
- **Cross Zone Timer:** Please refer to the section **Cross Zone Timer** for details
- **Fire Verification Time:** Please refer to the section **Fire Verification Timer** for details.

Sound Setting

- **Door Chime Setting:** this function is available only when the attribute of Door Contact (DC) and/or PIR detector (IR) is set as **Door Chime**.
The Control Panel sounds a Door Chime (Ding-Dong Sound) while the DC and/or IR is activated in Disarm / Full / Home / Entry mode.
- **Entry Delay Sound for Full Arm:** this is for you to decide whether the Control Panel sounds count-down beeps and volume of beep during the entry delay time in the full arm mode.
- **Exit Delay Sound for Full Arm:** this is for you to decide whether the Control Panel sounds count-down beeps and volume of beep during the exit delay timer in the full arm mode.
- **Entry Delay Sound for Home Arm:** this is for you to decide whether the Control Panel sounds count-down beeps and volume of beep during the entry delay time in the home arm mode.
- **Exit Delay Sound for Home Arm:** this is for you to decide whether the Control Panel sounds count-down beeps and volume of beep during the exit delay timer in the home arm mode.
- **Confirm Sound:** this is for you to decide whether to turn off/or adjust Control Panel beeping sounds when changing Arm/Home Arm/Disarm mode.
- **Warning beep:** this is for you to decide whether the Control Panel will sound a warning beep whenever a fault condition has been detected and displayed. The warning beep will be silenced after the Fault message has been read by the user. When a new fault condition is detected, it will then again emit a warning beep every 30 sec.
- **Entry/ Exit Only Final Beeps:** This is for you to determine when the Control Panel should start warning beep during Entry or Exit countdown timer. For example, if the setting is set to 5 seconds, the Control Panel will only start warning beep during the last 5 seconds of Entry or Exit countdown timer. When set to Disable, the Control Panel will sound warning beep during the entire Entry or Exit countdown timer.

6.3. PIN Code

The User PIN Codes are used to access the alarm system. The control panel has 30 User PIN Codes available for setting. Each consists of 4-6 digits (numeric number 0~9), no disallowed PIN code. User PIN code #1 is always activated factory default.

No.	User Code	User Name	Latch	Delete
1.		user	<input checked="" type="checkbox"/>	<input type="checkbox"/>
2.			<input type="checkbox"/>	<input type="checkbox"/>
3.			<input type="checkbox"/>	<input type="checkbox"/>
4.			<input type="checkbox"/>	<input type="checkbox"/>
5.			<input type="checkbox"/>	<input type="checkbox"/>
6.			<input type="checkbox"/>	<input type="checkbox"/>
7.			<input type="checkbox"/>	<input type="checkbox"/>
8.			<input type="checkbox"/>	<input type="checkbox"/>
9.			<input type="checkbox"/>	<input type="checkbox"/>
10.			<input type="checkbox"/>	<input type="checkbox"/>
11.			<input type="checkbox"/>	<input type="checkbox"/>
12.			<input type="checkbox"/>	<input type="checkbox"/>
13.			<input type="checkbox"/>	<input type="checkbox"/>
14.			<input type="checkbox"/>	<input type="checkbox"/>
15.			<input type="checkbox"/>	<input type="checkbox"/>
16.			<input type="checkbox"/>	<input type="checkbox"/>
17.			<input type="checkbox"/>	<input type="checkbox"/>
18.			<input type="checkbox"/>	<input type="checkbox"/>
19.			<input type="checkbox"/>	<input type="checkbox"/>
20.			<input type="checkbox"/>	<input type="checkbox"/>
21.			<input type="checkbox"/>	<input type="checkbox"/>
22.			<input type="checkbox"/>	<input type="checkbox"/>
23.			<input type="checkbox"/>	<input type="checkbox"/>
24.			<input type="checkbox"/>	<input type="checkbox"/>
25.			<input type="checkbox"/>	<input type="checkbox"/>
26.			<input type="checkbox"/>	<input type="checkbox"/>
27.			<input type="checkbox"/>	<input type="checkbox"/>
28.			<input type="checkbox"/>	<input type="checkbox"/>
29.			<input type="checkbox"/>	<input type="checkbox"/>
30.			<input type="checkbox"/>	<input type="checkbox"/>

User Code Setting

- **User Code:** An installer is not allowed to create or change a user PIN code.
- **User Name:** Enter a user name for easy recognition of system events. Up to 17 alphanumeric characters are allowed for each user name.
- **Latch:**
 - ☒ Latch → **Latch Report ON** = Whenever the User PIN Code is used to change system mode, the panel will report the event.
 - ☐ Latch → **Latch Report OFF** = When the User PIN Code is used to change system mode, the panel will not report the event.
- **Delete:** Check the box if you want to delete selected user. User#1 in each area cannot be deleted.

After finish all setting, click **OK** to confirm change.

7. Network Settings

7.1. GSM

urmet

Home
Panel
History Records
Event Log
Panel Setting
PIN Code
Captured Events
Reported Events
Device History
Device Management
Learning / Inclusion
Walk Test
PSS Control
Surveillance
Sound/Siren Setting
Network Setting
GSM
Network
System Setting
Change Password
Home Automation
Scene
Report
SMS Report
Media Upload
XMPP
Date & Time
Firmware
Firmware/RF
Factory Reset
Backup & Restore
System Log
Logout

GSM
Status: Insert SIM, IMEI: 867962049787958, IMSI:
Time Limit
Max connection time for IP network: 1 hr
OK Reset

GPRS
APN
User
Password
OK Reset
[Send SMS...](#)
GSM Reset

GPRS

In order to allow GPRS to serve as a back-up IP Reporting method, this section will need to be programmed before reporting.

- **APN (Access Point) Name**

It is the name of an access point for GPRS. Please inquire your service provider for an APN. When APN is set, the system becomes valid for internet connection.

- **User (GPRS)**

It is the Log-in name to input before accessing the GPRS feature. Please inquire your service provider.

- **Password (GPRS)**

It is the User Password to input before accessing the GPRS feature. Please inquire your service provider.

7.2. Network

This is for you to program the Network for IP connection.

urmet

Network

☒ Obtain an IP address automatically (DHCP)
☐ Use the following IP address

IP Address: 192 . 168 . 0 . 1
Subnet Mask: 255 . 255 . 255 . 0
Default Gateway: 192 . 168 . 0 . 254
Default DNS 1: 192 . 168 . 0 . 100
Default DNS 2: 192 . 168 . 0 . 101
DNS Flush Period: Disable ▼
OK Reset

- **Obtain an IP address automatically (DHCP)**

If DHCP is selected, the Network will obtain an IP address automatically with a valid Network DHCP Server. Therefore, manual settings are not required.

This is only to be chosen if your Network environment supports DHCP. It will automatically generate all information.

- **Use following IP address**

You can also enter the Network information manually for IP Address, Subnet Mask, Default Gateway, Default DNS 1 and Default DNS 2.


Please make sure that you have obtained all required values according to your Network environment. Please contact your network administrator and/or internet service provider for more information.

- **DNS Flush Period**

You can set the system to clear current DNS resolution records for all entered URL settings (Reporting, Upload, XMPP...etc.) after a set time period. The system will then resolve the Domain Name again and acquire new IP address for the URL settings. This function is disabled by default.

7.3. Wireless

Use “Wireless” webpage to setup the panel's WiFi setting



- Home
- Panel
- History Records
- Event Log
- Panel Setting
- PIN Code
- Captured Events
- Reported Events
- Device History
- Device Management
 - Learning / Inclusion
 - Walk Test
 - PSS Control
 - UPIC Control
 - Surveillance
 - Group Control
 - Sound/Siren Setting
- Network Setting
 - GSM
 - Network
 - Wireless**
- System Setting
- Logout

Wireless Setting

SSID:

Authentication Mode: Open

Pre-shared Key:

Encryption Type: None

Key Index: 0

Key:

Status: , Signal: Scan WiFi AP...

☐ Obtain an IP address automatically (DHCP)
☐ Use the following IP address

IP Address

Subnet Mask

Default Gateway

Default DNS 1

Default DNS 2

OK Reset

There are 2 ways you can connect to the wireless network.

1. Search for WiFi AP: Click “**Scan WiFi AP**” to search for available wireless network. Select the available Wireless APs from the list by clicking “**Set**” after AP info column and enter the required information (pre-shared key, etc.) and click the “**OK**” button.

Wireless Setting

SSID:

Authentication Mode: WPA pre-shared key

Pre-shared Key:

Encryption Type: None

Scan WiFi AP...

WiFi APs ☒

SSID	MAC	Authentication	Encryption	Signal Level	Channel	
Climax_Office_ASUS	40:16:7E:B8:86:40	WPA2PSK	AES	72/100	6	Set
TPLINK	F8:1A:67:FD:7E:2A	OPEN	NONE	66/100	6	Set

2. Enter the Wireless information manually and click “**OK**” to connect.


8. System Settings

8.1. Administrator Setting

For setting new Administrator Log-in Name and Password. Please note both User Name and Password are **case sensitive**.

Step 1. Enter the preferred **User Name**.

Step 2. Enter the preferred **Password** in the “New Password” field and repeat the same Password in the **Repeat Password** field.

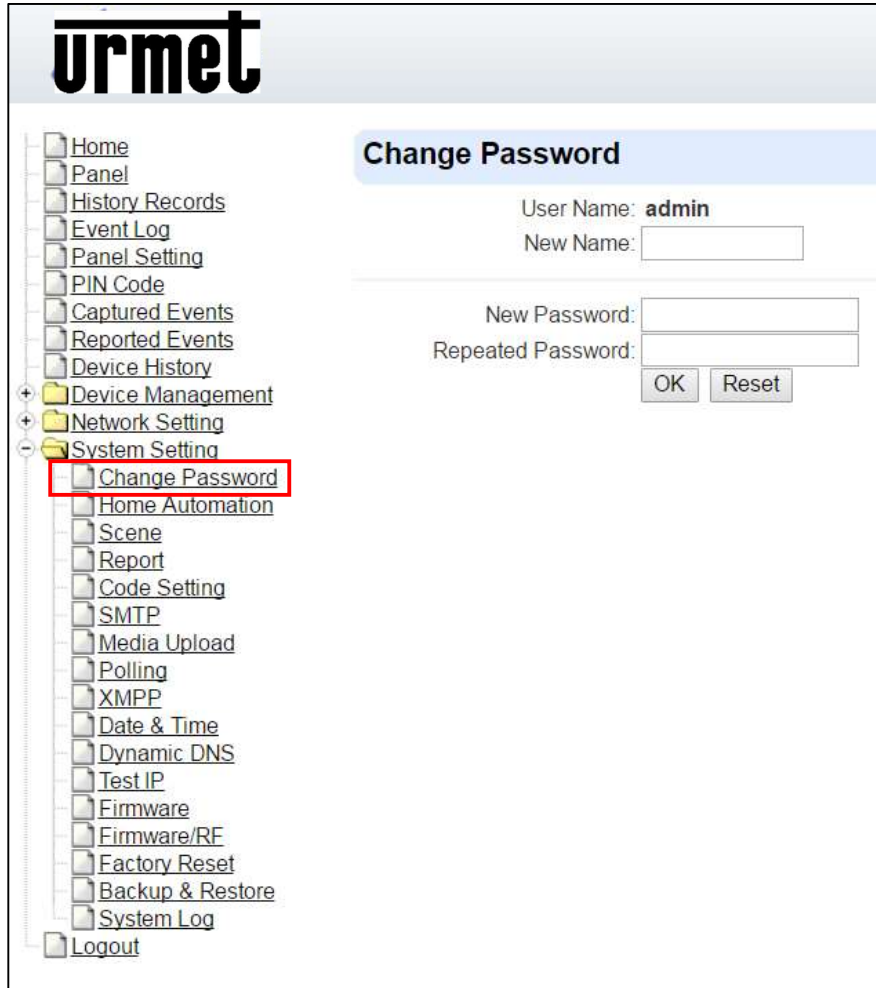

The screenshot displays the 'urmet' web interface. On the left is a vertical navigation menu with various system settings options. The 'System Setting' folder is expanded, and the 'Change Password' option is highlighted with a red rectangular box. The main content area on the right is titled 'Change Password' and contains the following fields and buttons:

- User Name:** admin
- New Name:**
- New Password:**
- Repeated Password:**
- OK** button
- Reset** button

8.2. Home Automation


It is used to set Home Automation rules to control sensors and home appliances. You can set up to 100 rules.

Step 1. Click on **Edit**.

Step 2. Set a rule condition.

Step 3. Set a rule schedule.

Step 4. Select the corresponding action rules in the **Execution** field.

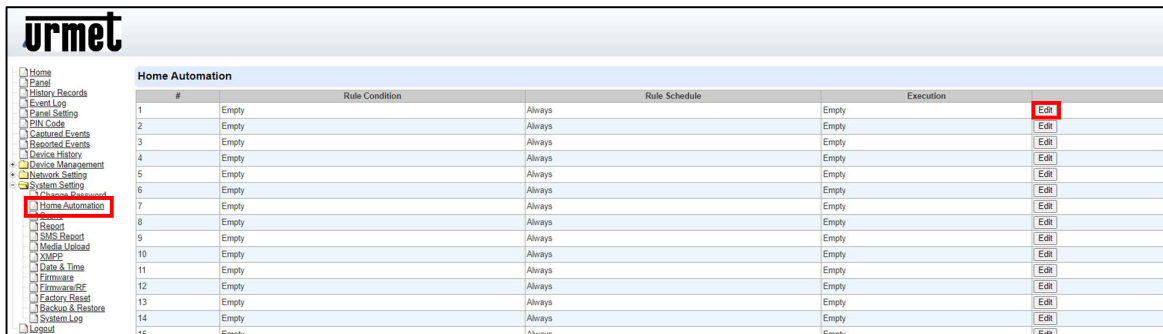

The screenshot shows the 'urmet' Home Automation interface. On the left is a sidebar menu with various system settings. The main area displays a table titled 'Home Automation' with columns for Rule ID, Rule Condition, Rule Schedule, and Execution. The 'Execution' column has an 'Edit' button highlighted in red for each rule.

#	Rule Condition	Rule Schedule	Execution
1	Empty	Always	Empty Edit
2	Empty	Always	Empty Edit
3	Empty	Always	Empty Edit
4	Empty	Always	Empty Edit
5	Empty	Always	Empty Edit
6	Empty	Always	Empty Edit
7	Empty	Always	Empty Edit
8	Empty	Always	Empty Edit
9	Empty	Always	Empty Edit
10	Empty	Always	Empty Edit
11	Empty	Always	Empty Edit
12	Empty	Always	Empty Edit
13	Empty	Always	Empty Edit
14	Empty	Always	Empty Edit
15	Empty	Always	Empty Edit

● Rule Condition

The rule condition determines under which circumstances the rule should be activated.

☞ **Empty** : When set as **Empty**, the system will follow the schedule time and execution rule to respond accordingly.

☞ **Trigger Alarm** : When set as **Trigger Alarm**, if the specified alarm event (Burglar/Some/Medical/Water/Silent Panic/Panic/Emergency/Fire /CO Alarm) is triggered, the rule will be activated according to rule schedule and execution setting.

Trigger Alarm

Burglar Alarm

☞ **Mode Change** : When set as **Mode Change**, when the system enters specified mode, the rule will be activated according to rule schedule and execution setting.

Mode Change

Disarm

☞ **Mode Change and Exit Timer Stopped** : When set as **Mode Change and Exit Timer Stopped**, when the system changes mode to and Exit Delay Timer expires, , the rule will be activated according to rule schedule and execution setting.

Mode Change And Exit Timer Stopped

Full Arm


☞ **Mode Start Entry Timer** : When set as **Mode Start Entry Timer**, when the system begins to countdown Entry Delay, the rule will be activated according to rule schedule and execution setting.

Mode Start Entry Timer


Full Arm

☞ **Temperature Below** : When set as **Temperature Below**, if the temperature detected by specified temperature sensor drops below set threshold, the rule will be activated


according to rule schedule and execution setting.

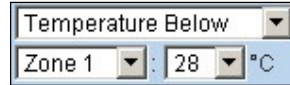A configuration box for the 'Temperature Below' rule. It has a dropdown menu set to 'Temperature Below'. Below it, there is a 'Zone 1' dropdown, followed by a colon, a numeric input field containing '28', and a unit dropdown set to '°C'.


- ☞ **Temperature Above** : When set as **Temperature Below**, if the temperature detected by specified temperature sensor exceeds set threshold, the rule will be activated according to rule schedule and execution setting.

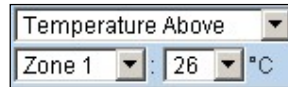A configuration box for the 'Temperature Above' rule. It has a dropdown menu set to 'Temperature Above'. Below it, there is a 'Zone 1' dropdown, followed by a colon, a numeric input field containing '26', and a unit dropdown set to '°C'.


- ☞ **Temperature Between** : When set as **Temperature Between**, if the temperature detected by specified temperature sensor falls within the range specified, the rule will be activated according to rule schedule and execution setting.

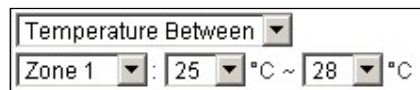A configuration box for the 'Temperature Between' rule. It has a dropdown menu set to 'Temperature Between'. Below it, there is a 'Zone 1' dropdown, followed by a colon, a numeric input field containing '25', a unit dropdown set to '°C', a tilde '~' symbol, another numeric input field containing '28', and a final unit dropdown set to '°C'.


- ☞ **High Power Consumption** : When set as **Power Consumption Above**, if the power output watt from a specific Power Switch exceeds, the rule will be activated according to rule schedule and execution setting.

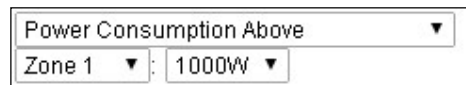A configuration box for the 'Power Consumption Above' rule. It has a dropdown menu set to 'Power Consumption Above'. Below it, there is a 'Zone 1' dropdown, followed by a colon, a numeric input field containing '1000W', and a unit dropdown set to 'W'.

- ☞ **Humidity Above** : When set as **Humidity Above**, if the humidity reading from specified room sensor rises above the level specified, the rule will be activated according to rule schedule and execution setting.

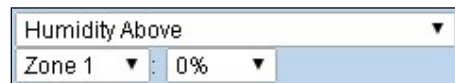A configuration box for the 'Humidity Above' rule. It has a dropdown menu set to 'Humidity Above'. Below it, there is a 'Zone 1' dropdown, followed by a colon, a numeric input field containing '0%', and a unit dropdown set to '%'.

- ☞ **Humidity Below** : When set as **Humidity Below**, if the humidity reading from specified room sensor falls below the level specified, the rule will be activated according to rule schedule and execution setting.

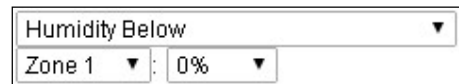A configuration box for the 'Humidity Below' rule. It has a dropdown menu set to 'Humidity Below'. Below it, there is a 'Zone 1' dropdown, followed by a colon, a numeric input field containing '0%', and a unit dropdown set to '%'.

- ☞ **LUX Between** : When set as **LUX Between**, if the lux reading from specified light sensor falls below the level specified, the rule will be activated according to rule schedule and execution setting.

A configuration box for the 'LUX Between' rule. It has a dropdown menu set to 'LUX Between'. Below it, there is a 'Zone 1' dropdown, followed by a colon, a numeric input field containing '0', a tilde '~' symbol, another numeric input field containing '0', and a unit dropdown set to 'lux'.

- ☞ **Random** : The **Random** condition must be used along with Rule Schedule setting. Set a percentage from 1 to 10%. When the panel time reaches programmed Rule Schedule time. The Panel will activate rule according to set chance.

Example: If set as 10%, whenever the panel reaches programmed Rule Schedule time, there will be a 10% chance the rule is activated.

A configuration box for the 'Random' rule. It has a dropdown menu set to 'Random'. Below it, there is a '1%' dropdown menu.

- **Rule Schedule**

☞ **Always** : When set as **Always**, the rule can be activated anytime.

☞ **Once** : When set as **Once**, the system will follow the rule condition and execute rule according to the exact date and time specified..

☞ **Every Month** : When set as **Every Month**, the system will follow the rule condition and execute rule according to date and time specified every month.

☞ **Every Week** : When set as **Every Week**, the system will follow the rule condition and execute rule according to day of the week and time specified every week.

☞ **Every Day** : When set as **Every Day**, the system will follow the the rule condition and execute rule according to time specified every day

- **Execution**

Execution is the actual action performed by Control Panel when both Rule Condition and Rule Schedule requirements are met

☞ **Zone Switch Off**: Turn on the Power Switch at specified zone.

☞ **Zone Switch On** : Turn on the Power Switch at specified zone.

☞ **Zone Switch On For** : Turn on the Power Switch at specified zone for a set duration.

☞ **Zone Switch Level**: Change the power output level for Dimmer at specified zone.

☞ **Zone Switch Toggle** : Toggle on/off the Power Switch at specified zone.


 A UI element with two dropdown menus. The top dropdown is labeled "Zone Switch Toggle" and the bottom dropdown is labeled "Zone 1".


☞ **Group Switch Off** : Turn off all Power Switches assigned to specified group.


 A UI element with two dropdown menus. The top dropdown is labeled "Group Switch Off" and the bottom dropdown is labeled "Group 1".


☞ **Group Switch On** : Turn on all Power Switches assigned to specified group.


 A UI element with two dropdown menus. The top dropdown is labeled "Group Switch On" and the bottom dropdown is labeled "Group 1".

☞ **Group Switch On For** : Turn on all Power Switches assigned to specified group for a set duration.

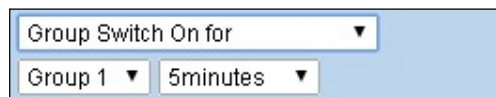
 A UI element with two dropdown menus. The top dropdown is labeled "Group Switch On for" and the bottom dropdown is labeled "Group 1" with a value of "5minutes" displayed next to it.

☞ **Group Switch Level** : Change the power output level of Dimmer to a specified group.

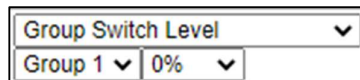
 A UI element with two dropdown menus. The top dropdown is labeled "Group Switch Level" and the bottom dropdown is labeled "Group 1" with a value of "0%" displayed next to it.


☞ **Group Switch Toggle** : Toggle on/off the Power Switch to a specified group.


 A UI element with two dropdown menus. The top dropdown is labeled "Group Switch Toggle" and the bottom dropdown is labeled "Group 1".


☞ **Mode Change** : The system will change to the mode as you specified.


 A UI element with two dropdown menus. The top dropdown is labeled "Mode Change" and the bottom dropdown is labeled "Full Arm".


☞ **Request Image** : The PIR Camera in specified zone will take a picture.

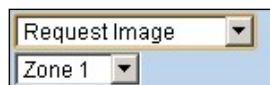
 A UI element with two dropdown menus. The top dropdown is labeled "Request Image" and the bottom dropdown is labeled "Zone 1".

☞ **Request Image (All)** : All PIR Cameras in the system will take a picture.

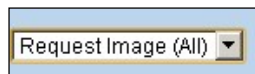
 A UI element with a single dropdown menu labeled "Request Image (All)".


☞ **Request Image (No Flash)** : The PIR Camera in specified zone will take a picture without activating its LED flash.

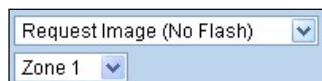
 A UI element with two dropdown menus. The top dropdown is labeled "Request Image (No Flash)" and the bottom dropdown is labeled "Zone 1".


☞ **Request Image (All, No Flash)** : All PIR Cameras in the system will take a picture without activating LED Flash.


 A UI element with a single dropdown menu labeled "Request Image (All, No Flash)".

☞ **Request Video** : The PIR Video Camera or IP Camera in specified zone will record a video.

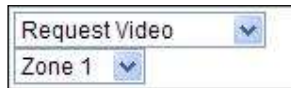
 A UI element for 'Request Video (All)'. It consists of a dropdown menu with 'Request Video' selected and a 'Zone 1' dropdown menu below it.

- ☞ **Request Video (All)**: All PIR Video Cameras and IP Cameras in the system will record a video.

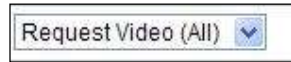
 A UI element for 'Request Video (All)'. It consists of a dropdown menu with 'Request Video (All)' selected.

- ☞ **Setup UPIC**: The UPIC and specified zone will transmit Off/Heat/Cool command to the air conditioner as programmed.


 A UI element for 'Setup UPIC'. It consists of a dropdown menu with 'Setup UPIC' selected, a 'Zone 1' dropdown menu, and an 'Off' dropdown menu.

- ☞ **Hue Control**: Adjust the hue and saturation of the Philips Hue at sepecified zone as programmed.



 A UI element for 'Hue Control'. It consists of a dropdown menu with 'Hue Control' selected, a 'Zone 1' dropdown menu, and two numeric input fields, both containing '0'.

Hue Saturation

- ☞ **Trigger Alarm**: Choose to activate one of the following alarms: High Temperature Alarm, Low Temperature Alarm, High Power Consumption Alarm, High Humidity Alarm and Low Humidity Alarm


 A UI element for 'Trigger Alarm'. It consists of a dropdown menu with 'Trigger Alarm' selected, a 'Zone 1' dropdown menu, and a 'High Temperature Alarm' dropdown menu.


- ☞ **Apply Scene**: the system will execute preprogrammed Scene number. Please refer to **8.3. Scene** for detail.

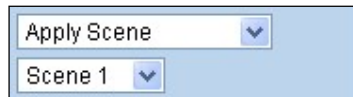
 A UI element for 'Apply Scene'. It consists of a dropdown menu with 'Apply Scene' selected and a 'Scene 1' dropdown menu below it.

8.3. Scene


The Scene setting allows you to customize a series of actions with your devices, such as Power Switch control, image/video request, mode change and trigger alarm. The programmed scene can be set to activated when a device is triggered. (See **5.1.3. Edit Devices**), or when a Home Automation Rule is executed. (See **8.2. Home Automation**) For example, you can set a scene to control multiple lightings, then set your Remote Controller to activate the scene when the button is pressed, or set a Home Automation Rule to activate the scene.

Step 1. Click on **Edit**.

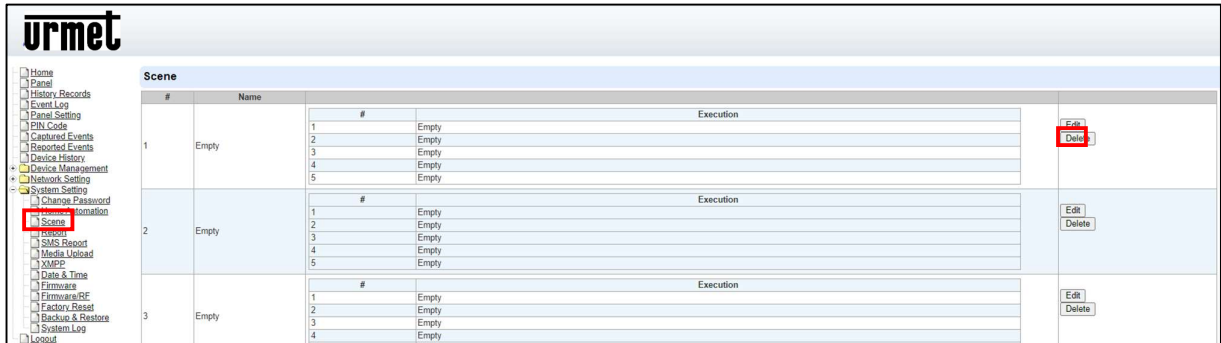

Scene															
#	Name	Execution													
1	Empty	<table><tr><td>#</td><td>Empty</td></tr><tr><td>1</td><td>Empty</td></tr><tr><td>2</td><td>Empty</td></tr><tr><td>3</td><td>Empty</td></tr><tr><td>4</td><td>Empty</td></tr><tr><td>5</td><td>Empty</td></tr></table>	#	Empty	1	Empty	2	Empty	3	Empty	4	Empty	5	Empty	<div>Edit Delete</div>
#	Empty														
1	Empty														
2	Empty														
3	Empty														
4	Empty														
5	Empty														
2	Empty	<table><tr><td>#</td><td>Empty</td></tr><tr><td>1</td><td>Empty</td></tr><tr><td>2</td><td>Empty</td></tr><tr><td>3</td><td>Empty</td></tr><tr><td>4</td><td>Empty</td></tr><tr><td>5</td><td>Empty</td></tr></table>	#	Empty	1	Empty	2	Empty	3	Empty	4	Empty	5	Empty	<div>Edit Delete</div>
#	Empty														
1	Empty														
2	Empty														
3	Empty														
4	Empty														
5	Empty														
3	Empty	<table><tr><td>#</td><td>Empty</td></tr><tr><td>1</td><td>Empty</td></tr><tr><td>2</td><td>Empty</td></tr><tr><td>3</td><td>Empty</td></tr><tr><td>4</td><td>Empty</td></tr><tr><td>5</td><td>Empty</td></tr></table>	#	Empty	1	Empty	2	Empty	3	Empty	4	Empty	5	Empty	<div>Edit Delete</div>
#	Empty														
1	Empty														
2	Empty														
3	Empty														
4	Empty														
5	Empty														

Step 2. Enter a name for the scene.

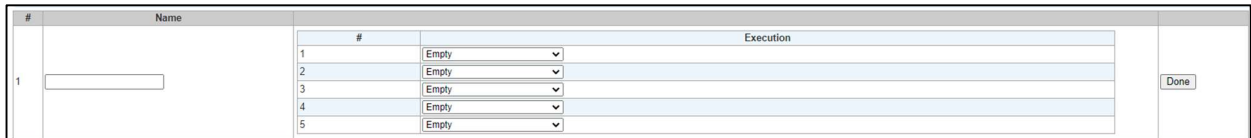

#	Name	Execution													
1		<table><tr><td>#</td><td>Empty</td></tr><tr><td>1</td><td>Empty</td></tr><tr><td>2</td><td>Empty</td></tr><tr><td>3</td><td>Empty</td></tr><tr><td>4</td><td>Empty</td></tr><tr><td>5</td><td>Empty</td></tr></table>	#	Empty	1	Empty	2	Empty	3	Empty	4	Empty	5	Empty	<div>Done</div>
#	Empty														
1	Empty														
2	Empty														
3	Empty														
4	Empty														
5	Empty														

Step 3. Select an action to be executed when the scene is activated. Refer to the Rule Execution section in **8.2. Home Automation** for detail.

Step 4. Repeat Step 2-3 to setup the execution you wanted. As many as 5 executions can be included in one scene.

Step 5. Click **Done**.

Step 6. Click **OK** at bottom of webpage to confirm the new scene setting.

8.4. Reporting

This is used for installer to program/ set all requirements for reporting purposes.

#	Reporting URL	Level	Group 1	Group 2	Group 3	Group 4	Group 5
1		All events	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
2		All events	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
3		All events	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
4		All events	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
5		All events	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
6		All events	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
7		All events	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
8		All events	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
9		All events	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
10		All events	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
11		All events	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
12		All events	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
13		All events	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
14		All events	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
15		All events	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
16		All events	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
17		All events	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
18		All events	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
19		All events	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
20		All events	Essential	Essential	Essential	Essential	Essential
		99 Priority	99 Priority	99 Priority	99 Priority	99 Priority	99 Priority

Notes:
1. Report via IP (Ethernet or GPRS) in CID format, ex: ip://ACCT@server:port/CID
2. Report via IP (Ethernet or GPRS) in SIA format, ex: ip://ACCT@server:port/SIA
3. Report via IP (Ethernet or GPRS) in Maribus format, ex: ip://ACCT@server:port/MAN
4. Report via E-mail, ex: mailto: user@example.com

OK Cancel

- **Reporting URL**

This is used for installer to program report destinations.

- 1 CID protocol via IP**

Format: ip://(Account Number)@(server ip):(port)/CID

Example: ip://1234@54.183.182.247:8080/CID

- 2 SIA DC-09 protocol via IP**

Format: ip://(Account Number)@(server ip):(port)/SIA

Example: ip://1234@54.183.182.247:8080/SIA

- 3 SIA DC-09 protocol via IP with AES encryption**

Format: ip://(Account Number)@(server ip):(port)/SIA/KEY/(128,196 or 256 bits Key)

Example:

ip://1234@54.183.182.247:8080/SIA/KEY/4A46321737F890F654D632103F86B4F3

- 4 SIA DC-09 protocol using CID event code via IP**

Format: ip://(Account Number)@(server ip):(port)/CID_SIA

Example: ip://1234@54.183.182.247:8080/CID_SIA

- 5 SIA DC-09 protocol using CID event code via IP, with HEX encryption.**

Format: ip://(Account Number)@(server ip):(port)/CID_SIA/KEY/(HEX)

Example:

ip://1234@54.183.182.247:8080/CID_SIA/KEY/4A46321737F890F654D632103F86B4F3

- 6 CSV protocol via IP**

Format: ip://(Account Number)@(server ip):(port)/CSV

Example: ip://1234@54.183.182.247:8080/CSV

- 7 CSV protocol via IP including username and password**

Format: ip://(Account Number)@(server ip):(port)/CSV/User/Password

Example: ip://1234@54.183.182.247:8080/CSV/abcd/1357

- 8 Email**

Format: mailto:user@example.com

Example: <mailto:john@gmail.com>

- **Level**

Select a reporting condition:

All events: The system will report all events to this destination.

Alarm (w/o mode change) event: The system will only report alarm (w/o mode change) event to this destination.

Alarm (with mode change) event: The system will only report alarm (with mode change).

Status events: The system will only report status event(non-alarm events) to this destination.

- **Group**

Select a group for your report destination The system will make report according to the following principle:

- ☞ Group with higher priority will be reported first: Ex: Group 1 → Group 2 → Group 3....
- ☞ If reporting to the first destination in a group fails, the system will move on to the next report destination in the group.
- ☞ If reporting to one of the report destinations in a group is successful, the system will consider reporting to this group successful and stop reporting to rest of the destinations in the group. It will then move on to report to the next group.
- ☞ If reporting to all destinations in a group fails, the system will retry report to group according to retry times set below. If reporting is still unsuccessful after retries, the system will move on to report the the next group according to Essential/Optional setting below.
- ☞ After completing a round of reporting (From Group 1 → Group 2 →Group5), If there is any group set as Essential which has not received report successfully, the system will restart the reporting cycle to retry reporting until every group set as Essential is reported successfully.

- **Essential/Optional**

Essential: the system will report to all groups set as **Essential**. The system will never give up trying to report to any group set as Essential until at least one of the destinations in every Essential group successfully receives the report. Group 1 is always set as **Essential** and cannot be changed.

Optional: The system will only report to group set as **Optional** when reporting to its previous group fails. For example: if Group 3 is set is optional, the Control Panel will only report to Group 3 if reporting to Group 2 fails.

- **1 Retry/ 3 Retry/ 5 Retry/ 10 Retry/ 99 Retry:**

If reporting to all destinations in a group fails, the system will retry reporting to the group according to the retries times set here.

<NOTE>

- ☞ When the panel is registered into Urmet's Home Portal Server, URL1 will be filled in with Home Portal Server report information. Do not change the information once registration is complete or reporting to Home Portal Server may encounter error.
- ☞ After registering the panel in Home Portal Server, if you wish to set more reporting destination, the new report destination should be set to different group than URL1 otherwise it may not be able to receive report successfully

8.5. SMS Reporting

This is used for installer to program/ set SMS report details

	Reporting URL	Level
1		All events
2		All events
3		All events
4		All events
5		All events

Note: 1. Report via SMS in CID format. ex: sms://ACCT@telephone
2. Report via SMS text. ex: sms://ACCT@telephone/TEXT

OK Reset

© 2011-2021 Climax Tech. Co., Ltd.

- **Reporting URL**

This is used for installer to program SMS report destinations.

- 1 SMS in CID format**

Format: sms://ACCT@telephone

Example: sms://1234@0987654321

- 2 SMS text**

Format: sms://ACCT@telephone/TEXT

- 3 Voice Report**

Format: voice://Tel number

Example: voice://1234567890

- **Level**

Select a reporting condition:

All events: The system will report all events to this destination.


Alarm (w/o mode change) event: The system will only report alarm (w/o mode change) event to this destination.

Alarm (with mode change) event: The system will only report alarm (with mode change) event to this destination.

Status event: The system will only report status event (non-alarm event) to this destination.

8.6. Media Upload

The system can deliver captured images and video clips captured by PIR Cameras and PIR Video Camera to cell phone, email or ftp.

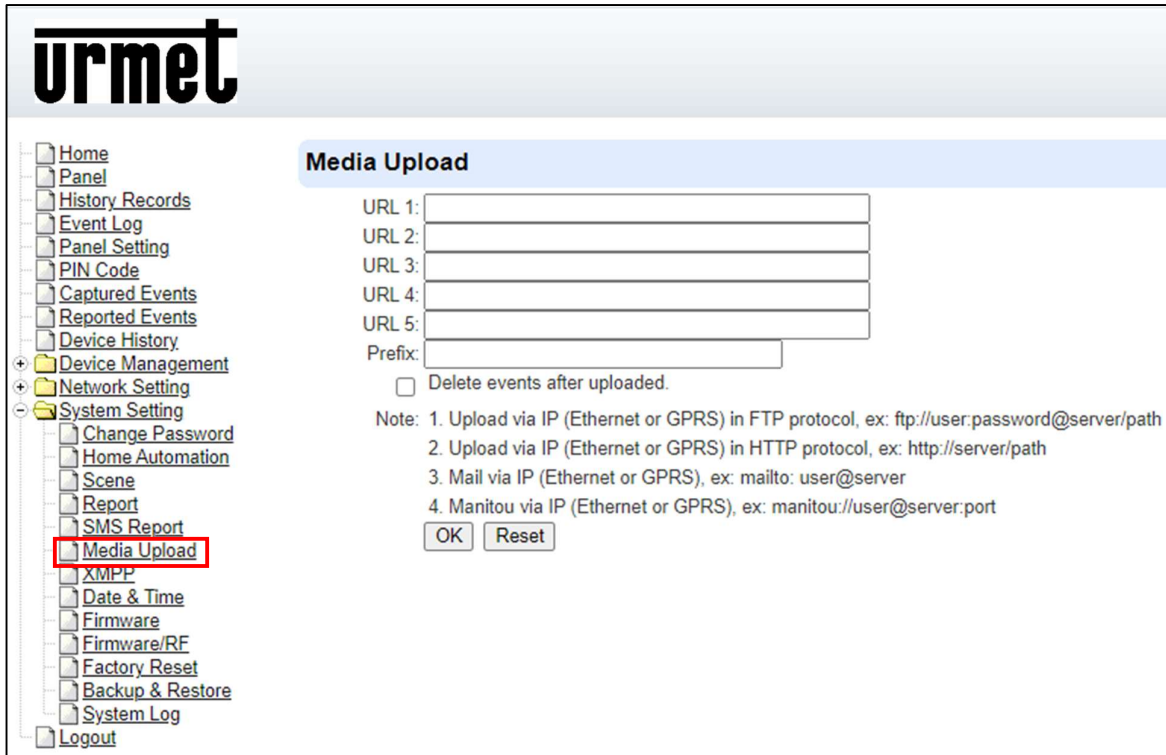

The screenshot shows the 'urmet' web interface. On the left is a navigation menu with items like Home, Panel, History Records, Event Log, Panel Setting, PIN Code, Captured Events, Reported Events, Device History, Device Management, Network Setting, System Setting, Change Password, Home Automation, Scene, Report, SMS Report, Media Upload (highlighted with a red box), XMPP, Date & Time, Firmware, Firmware/RF, Factory Reset, Backup & Restore, System Log, and Logout. The main content area is titled 'Media Upload' and contains five text input fields for URL 1 through URL 5, a Prefix input field, and a checkbox labeled 'Delete events after uploaded.' Below these is a 'Note' section with four numbered instructions: 1. Upload via IP (Ethernet or GPRS) in FTP protocol, ex: ftp://user:password@server/path; 2. Upload via IP (Ethernet or GPRS) in HTTP protocol, ex: http://server/path; 3. Mail via IP (Ethernet or GPRS), ex: mailto: user@server; 4. Manitou via IP (Ethernet or GPRS), ex: manitou://user@server:port. At the bottom of the form are 'OK' and 'Reset' buttons.

- **FTP:** <ftp://user.password@server/path>
- **HTTP:** <http://ip:port/path>
- **Email:** <mailto:user@server> (transmitting an alarm image over Ethernet)
- **Manitou:** <manitou://user@server:port>

<NOTE>

- ☞ If **"Deleted events after uploaded"** is checked, the system will automatically clear all captured images which are displayed in the Captured Events menu after it successfully sends out those captured images to preset reporting destinations.

8.7. XMPP

XMPP setting enables the Control Panel to query the set destination. This setting is required for the Control Panel to connect to Urmet's Home Portal Server for remote control. If the panel is disconnected from the server, it will retry connection every 3 minutes.

urmet

XMPP

Server: 59.124.123.24

Backup Server:

Port: 5222

User: hpgw

Password:

Domain: climax-home-portal

Buddy List: engin.lee

Ping Interval: 40 sec ▼

Connected. Events: 0

OK Reset

Home
Panel
History Records
Event Log
Panel Setting
PIN Code
Captured Events
Reported Events
Device History
+ Device Management
+ Network Setting
- System Setting
 Change Password
 Home Automation
 Scene
 Report
 SMS Report
 Media Upload
 XMPP
 Date & Time
 Firmware
 Firmware/RF
 Factory Reset
 Backup & Restore
 System Log
Logout

- **Server:** server address (dependent upon default firmware)
US server: us.vestasmarthome.com
EU server: eu.vestasmarthome.com
Taiwan server: tw.vestasmarthome.com
- **Port:** server's port number
- **User:** authorized user account name
- **Password:** authorized user password
- **Domain:** domain address
- **Buddy List:** contact destination
- **Ping Interval:** server connection test interval

8.8. Date & Time

Program the current **Date & Time** and set automatic synchronization with internet time server.

urmet

- Home
- Panel
- History Records
- Event Log
- Panel Setting
- PIN Code
- Captured Events
- Reported Events
- Device History
- + Device Management
- + Network Setting
- System Setting
 - Change Password
 - Home Automation
 - Scene
 - Report
 - SMS Report
 - Media Upload
 - XMPP
 - Date & Time**
 - Firmware
 - Firmware/RF
 - Factory Reset
 - Backup & Restore
 - System Log
- Logout

Date & Time

Date: 2021/08/10 30 (yyyy/MM/dd)
Time: 10 : 04 (hh:mm) Now
OK Reset

Time Zone

Time Zone: (GMT+00:00) Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London
OK Reset

Internet Time


☐ Automatically synchronize with an Internet time server.
Server: pool.ntp.org
OK Reset

- **Date & Time:** set current month, date and time.
- **Time Zone:** choose your time zone, and then the system will calculate the daylight saving time automatically (if necessary).
- **Internet Time:** the system will automatically synchronize with an internet time server. Tick the check box to enable this function. Available options: time1.google.com, pool.ntp.org, time.nist.gov and tick.usno.navy.mil.

8.9. Firmware Upgrade

You can update the firmware via this web page.

Step 1. Click on “**Browse**” and locate the latest firmware file (“**unzipped image.bin**” file) in your PC.

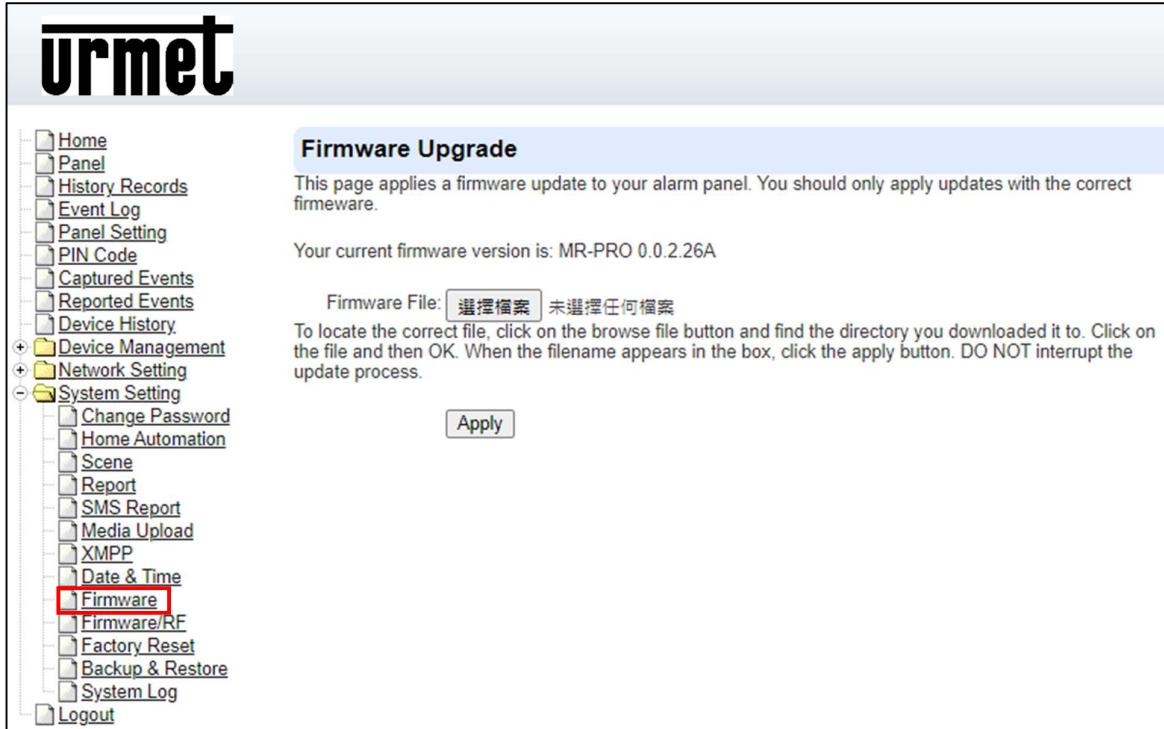

Step 2. Press “**Apply**” to upload the latest firmware to Control Panel


Step 3. Wait for 1 min and do NOT power off during this time.

Step 4. Once Firmware upgrading is complete, the Control Panel will reboot automatically

8.10. RF Firmware Upgrade

You can update the Control Panel's RF firmware via this web page.

Step 1. Click on “**Browse**” and locate the latest firmware file (“**unzipped image.bin**” file) in your PC.

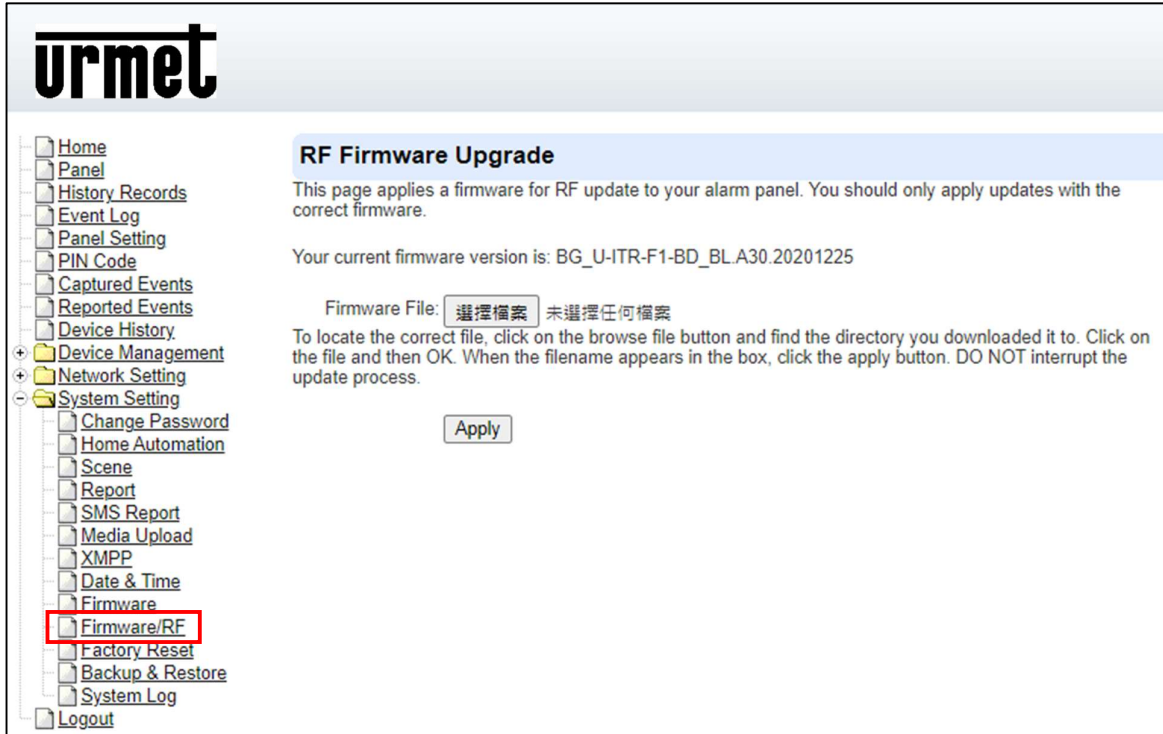

Step 2. Press “**Apply**” to upload the latest firmware to Control Panel

Step 3. Wait for 1 min and do NOT power off during this time.

Step 4. Once Firmware upgrading is complete, the Control Panel will reboot automatically


8.11. Factory Reset

You can clear all programmed parameters in the Control Panel and reset it to Factory Default.

Once the **Factory Reset** is executed, all the programmed settings will be returned to its default value, and all the learnt-in devices will be removed. You will need to restart the programming and learning process again.

Remote Reset

- Step 1.** Tick the **Kept current network setting** or **Kept current device list** box to keep the current Network settings. Otherwise, the system will reset its value back to factory default. Tick the **Kept current device list** box to keep the current learnt-in devices. Otherwise, the system will reset its value back to factory default.
- Step 2.** Press **Yes** to continue the Reset procedure.
- Step 3.** Wait for 1 min and do NOT power off during this time.
- Step 4.** Once reset is complete, it will automatically reboot the main unit.

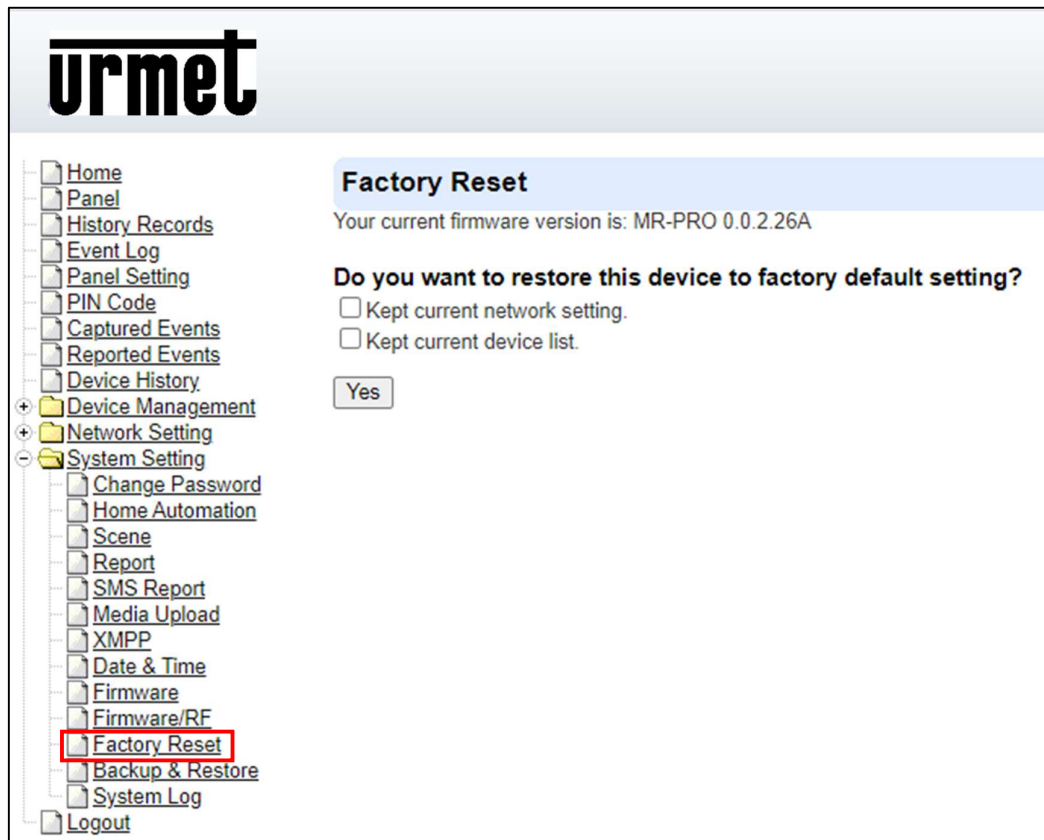


8.12. Backup & Restore

You can backup all programmed parameters and save these programmed values into a file. Besides, you also can restore pre-programmed settings.

8.12.1 Backup Data

You can backup all programmed data and save these programmed values into a file.

Click **Download configuration file**.

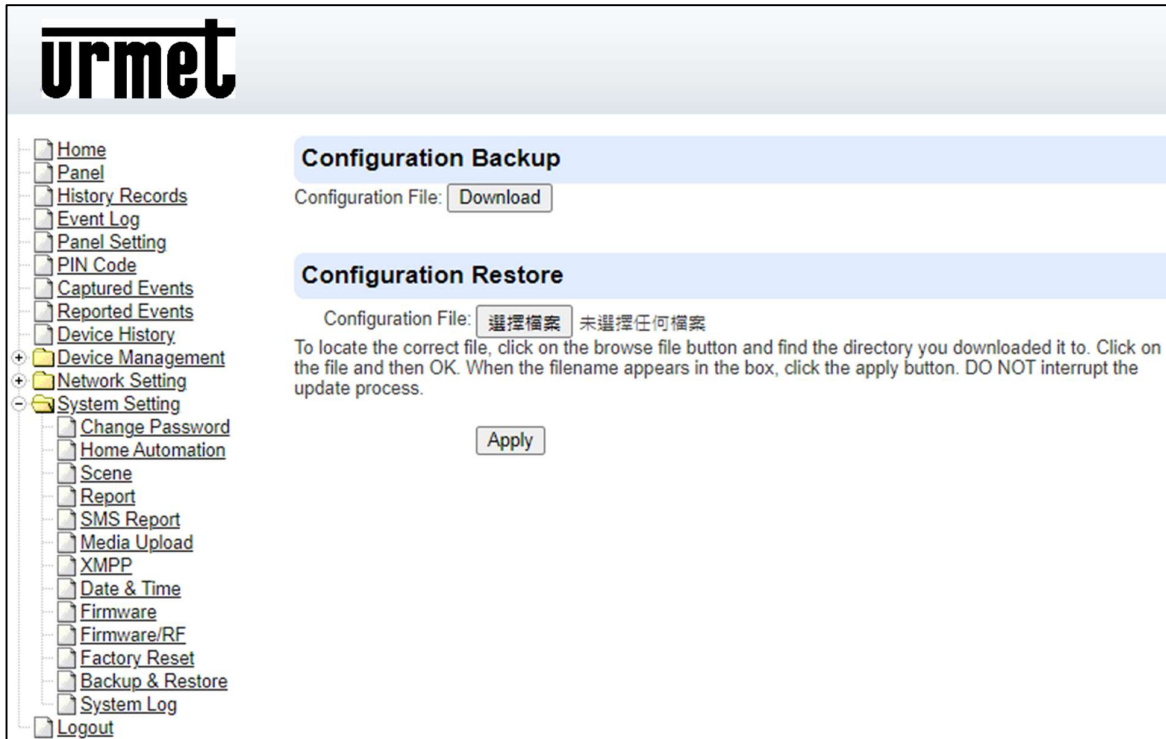

8.12.2 Restore Settings

Step 1. Click **Browse**, select a saved file.

Step 2. Click **Apply** to apply the pre-programmed values to the main unit.

8.13. System Log

The sytem log webpage logs the control panel's detail system operation history.

urmet

Home

Panel

History Records

Event Log

Panel Setting

PIN Code

Captured Events

Reverted Events

Device History

Device Management

Network Setting

System Setting

Change Password

Home Automation

Scene

Report

SMS Report

Media Upload

UMPS

Date & Time

Firmware

Firmware RF

Factory Reset

System Log

Logout

System Log

Reload

Time	Priority	Class	Action	Source	Message
2021/08/10 08:42:35	6	30	Net	Worker	Plugged
2021/08/10 08:41:49	4	30	Net	Worker	Unplugged
2021/08/10 06:59:21	6	30	Success	Worker	SNTP Setup Time
2021/08/10 06:59:11	6	30	Wireless LAN	Worker	Setup Network Address
2021/08/10 06:59:10	6	30	Net	Worker	Plugged
2021/08/10 06:59:05	6	30	Net	Worker	Setup Network Address
2021/08/10 06:59:05	5	23	Initialize	VFA	Module Not Exist
2021/08/10 06:59:05	5	2	Initialize	ZipBee	Module Not Exist
2021/08/10 06:57:43	6	19	Starting	Upgrader	Upgrading Firmware
2021/08/10 05:00:37	6	30	Net	Worker	Plugged
2021/08/10 05:00:17	4	30	Net	Worker	Unplugged
2021/08/10 05:00:13	6	30	Net	Worker	Plugged
2021/08/10 05:00:09	4	30	Net	Worker	Unplugged
2021/08/10 04:59:00	6	30	Net	Worker	Plugged
2021/08/10 04:58:59	4	30	Net	Worker	Unplugged
2021/08/10 04:56:14	6	30	Net	Worker	Plugged
2021/08/10 04:56:13	4	30	Net	Worker	Unplugged
2021/08/10 04:56:08	6	30	Net	Worker	Plugged
2021/08/10 04:56:07	4	30	Net	Worker	Unplugged
2021/08/10 04:35:11	6	30	Net	Worker	Plugged

Limit # of Items: 20

System Log File Download

- **System Log File Download** Click to download a detail log files into your computer for more information.


9. Event & History

This section introduces event history of the system.

9.1. Captured Events

This page stores all captured pictures and videos by PIR Camera and PIR Video Camera. When a PIR Camera is triggered, it will take 3 pictures in quick succession, when a PIR Video Camera is triggered, it will take a 10-second video clip. You can also request the PIR Camera to take a picture and PIR Video Camera to take a 10-second video clip manually.

Captured events will be displayed in this page with their information for you to view. Simply click on the picture or video to view them. You can also click **Delete** to delete the event.

Time	Zone	Type	Status	Media	Comment	
2012-09-12 16:24:52	10	Requested	Done		No Packet Lost;	Delete
2012-08-28 14:30:42		Requested	Done	Video	No Packet Lost;	Delete
2012-08-28 14:21:12		Requested	Done	Video	No Packet Lost;	Delete

Limit # of items: 10

- **Reload** : Click to refresh the page content
- **Limit # of Items**: Click the drop down menu on the page to select the numbers of captured events you want to display.

9.2. Reported Events

This page stores all triggered events by the control panel by recording the events' CID event code and report status.

Time	Zone / User	Trigger / Restore	CID event	Message	Report Status	Comment
2021-08-10 07:59:05	0	Trigger	602	Periodic Test	Done (No Transmission)	
2021-08-10 07:29:49	0	Trigger	311	Panel Battery Missing/Dead	Done (No Transmission)	
2021-08-10 06:59:07	0	Trigger	137	Panel Tamper	Done (No Transmission)	
2021-08-10 06:21:14	0	Trigger	602	Periodic Test	Done (No Transmission)	
2021-08-10 04:52:27	0	Trigger	311	Panel Battery Missing/Dead	Done (No Transmission)	
2005-01-01 00:00:06	0	Trigger	137	Panel Tamper	Done (No Transmission)	
2021-08-10 03:33:51	0	Trigger	137	Panel Tamper	Done (No Transmission)	
2005-01-01 00:00:06	0	Trigger	137	Panel Tamper	Done (No Transmission)	


Limit # of Items: 20

© 2011-2021 Climax Tech. Co., Ltd.

- **Reload** : Click to refresh the page content
- **Limit # of Items**: Click the drop down menu on the page to select the numbers of captured events you want to display.

9.3. Event Log

The Event Log page records specific actions performed by the Control Panel and accessory devices.

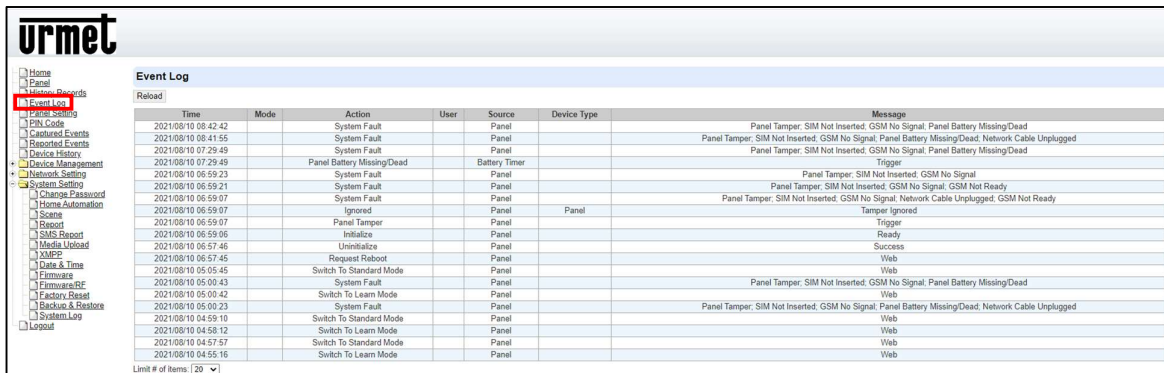

Time	Mode	Action	User	Source	Device Type	Message
2021/06/10 08:42:42		System Fault		Panel		Panel Tamper: SIM Not Inserted: GSM No Signal: Panel Battery Missing/Dead
2021/06/10 08:41:55		System Fault		Panel		Panel Tamper: SIM Not Inserted: GSM No Signal: Panel Battery Missing/Dead: Network Cable Unplugged
2021/06/10 07:29:49		System Fault		Panel		Panel Tamper: SIM Not Inserted: GSM No Signal: Panel Battery Missing/Dead
2021/06/10 07:29:49		Panel Battery Missing/Dead		Battery Timer		Trigger
2021/06/10 06:59:23		System Fault		Panel		Panel Tamper: SIM Not Inserted: GSM No Signal
2021/06/10 06:59:21		System Fault		Panel		Panel Tamper: SIM Not Inserted: GSM No Signal: GSM Not Ready
2021/06/10 06:59:07		System Fault		Panel		Panel Tamper: SIM Not Inserted: GSM No Signal: Network Cable Unplugged: GSM Not Ready
2021/06/10 06:59:07		Ignored		Panel	Panel	Tamper Ignored
2021/06/10 06:59:07		Panel Tamper		Panel		Trigger
2021/06/10 06:59:06		Initialize		Panel		Ready
2021/06/10 06:57:46		Uninitialize		Panel		Success
2021/06/10 06:57:45		Request Reboot		Panel		Web
2021/06/10 05:05:45		Switch To Standard Mode		Panel		Web
2021/06/10 05:00:43		System Fault		Panel		Panel Tamper: SIM Not Inserted: GSM No Signal: Panel Battery Missing/Dead
2021/06/10 05:00:42		Switch To Learn Mode		Panel		Web
2021/06/10 05:00:23		System Fault		Panel		Panel Tamper: SIM Not Inserted: GSM No Signal: Panel Battery Missing/Dead: Network Cable Unplugged
2021/06/10 04:59:10		Switch To Standard Mode		Panel		Web
2021/06/10 04:58:12		Switch To Learn Mode		Panel		Web
2021/06/10 04:57:57		Switch To Standard Mode		Panel		Web
2021/06/10 04:55:16		Switch To Learn Mode		Panel		Web

- **Reload** : Click to refresh the page content
- **Limit # of Items:** Click the drop down menu on the page to select the numbers of captured events you want to display.

10. Appendix

10.1. Fault Event Description

During operation, when the panel detects faulty events, the panel will log the event and make reports. When fault events exist in the system, the panel Fault LED will light up and the panel will emit a beep every 30 seconds.

- **Fault Event Table**

Fault Event	Descriptions
Panel AC Failure	The Control Panel's AC power is disconnected When AC failure is detected, the panel will turn off both Ethernet and mobile network functions when idle to conserve power. Ethernet and mobile network will be activated temporarily when an event is detected by the panel (i.e. alarm trigger) to send report, and will turn off again after finishing report. Accessing the panel via remote server XMPP connection is disabled during AC failure.
Panel Low Battery	The panel's backup battery is only used when AC failure is detected. When the backup battery voltage is low, the panel low battery event is generated
Panel Tamper	The tamper switch on back of the panel is not compressed against the back cover. This means the panel's cover is opened and not properly sealed.
Battery Dead/Missing	The panel cannot detect backup battery, this means the battery is either dysfunctional, or the battery switch is not slid to ON position.
Interference/Jamming	The panel detects radio frequency jamming, which will affect its ability to receive signal from RF devices
Device Low Battery	The accessory device at indicated zone number is low on battery
Device AC Failure	The accessory device at indicated zone number does not have AC power connection.
Device Tamper	The tamper switch of the device at indicated zone number is open
Device Supervision Failure	The panel was unable to receive supervision signal sent from accessory device at indicated zone number for the duration of Supervision Timer programmed. (i.e. If Supervision Timer is set to 12 hours, the panel will generate supervision failure event after failing to receive supervision signal for 12 hours)

10.2. Control Panel Mode and Response Table

For Alarm Activation by Events and Control Panel Responses, please refer to the following table:

Attribute	System Mode / Status					
	Disarm	Full Arm	Home Arm	Under Exit Timer	Under Exit Timer (No Response)	Under Entry Timer
No Response	No Response	No Response	No Response	Instant Burglar Alarm	No Response	No Response
Start Entry Delay 1	Instant Burglar Alarm (Interior)	Start Entry 1 → Burglar Alarm (Perimeter)	Start Entry 1 → Burglar Alarm (Interior)	Instant Burglar Alarm	No Response	Delayed Burglar Alarm
Start Entry Delay 2	Instant Burglar Alarm (Interior)	Start Entry 2 → Burglar Alarm (Perimeter)	Start Entry 2 → Burglar Alarm (Interior)	Instant Burglar Alarm	No Response	Delayed Burglar Alarm
Chime	Door Chime	Door Chime	Door Chime	Instant Burglar Alarm	No Response	Door Chime
Burglar Follow	Instant Burglar Alarm	Instant Burglar Alarm	Instant Burglar Alarm	Instant Burglar Alarm	No Response	Delayed Burglar Alarm
Burglar Instant	Instant Burglar Alarm	Instant Burglar Alarm	Instant Burglar Alarm	Instant Burglar Alarm	No Response	Instant Burglar Alarm
Burglar Outdoor	Instant Burglar Outdoor Alarm	Instant Burglar Outdoor Alarm	Instant Burglar Outdoor Alarm	Instant Burglar Alarm	No Response	Instant Burglar Outdoor Alarm
Cross Zone	See 10.3. Appendix – Cross Zone Verification			Instant Burglar Alarm	No Response	Delayed Burglar Alarm
Set/Unset (Opening)	Full Arm	No Response	Full Arm	Full Arm	No Response	No Response
Set/Unset (Closing)	No Response	Disarm	Disarm	Disarm	Disarm	Disarm
24H – Burglar	Instant Burglar Alarm	Instant Burglar Alarm	Instant Burglar Alarm	Instant Burglar Alarm	Instant Burglar Alarm	Instant Burglar Alarm

24H – Smoke	Instant Smoke Alarm	Instant Smoke Alarm	Instant Smoke Alarm	Instant Smoke Alarm	Instant Smoke Alarm	Instant Smoke Alarm
24H – Medical	Instant Medical Alarm	Instant Medical Alarm	Instant Medical Alarm	Instant Medical Alarm	Instant Medical Alarm	Instant Medical Alarm
24H – Fire	Instant Fire Alarm	Instant Fire Alarm	Instant Fire Alarm	Instant Fire Alarm	Instant Fire Alarm	Instant Fire Alarm
24H – Water	Instant Water Alarm	Instant Water Alarm	Instant Water Alarm	Instant Water Alarm	Instant Water Alarm	Instant Water Alarm
24H – CO	Instant CO Alarm	Instant CO Alarm	Instant CO Alarm	Instant CO Alarm	Instant CO Alarm	Instant CO Alarm
24H – Gas	Instant Gas Alarm	Instant Gas Alarm	Instant Gas Alarm	Instant Gas Alarm	Instant Gas Alarm	Instant Gas Alarm
24H – Heat	Instant Heat Alarm	Instant Heat Alarm	Instant Heat Alarm	Instant Heat Alarm	Instant Heat Alarm	Instant Heat Alarm
24H – Silent Panic	Instant Silent Panic Alarm	Instant Silent Panic Alarm	Instant Silent Panic Alarm	Instant Silent Panic Alarm	Instant Silent Panic Alarm	Instant Silent Panic Alarm
24H – Panic	Instant Panic Alarm	Instant Panic Alarm	Instant Panic Alarm	Instant Panic Alarm	Instant Panic Alarm	Instant Panic Alarm
24H – Emergency	Instant Emergency Alarm	Instant Emergency Alarm	Instant Emergency Alarm	Instant Emergency Alarm	Instant Emergency Alarm	Instant Emergency Alarm
24H – Emergency (Quiet)	Instant Silent Emergency Alarm	Instant Silent Emergency Alarm	Instant Silent Emergency Alarm	Instant Silent Emergency Alarm	Instant Silent Emergency Alarm	Instant Silent Emergency Alarm
24H – Fire with Verification	See 10.4. Appendix – Fire Verification					
Trigger Scene	Trigger Scene Number	Trigger Scene Number	Trigger Scene Number	Trigger Scene Number	Trigger Scene Number	Trigger Scene Number

<NOTE>

- ☞ **“Delayed Burglar Alarm”** reponse means the Control Panel will wait for the Entry Time to expire. If the Entry Time expires without disarming the system, the Control Panel will activate a Burglar Alarm after Entry Time expiry.
- ☞ **“Silent Panic Alarm”, “Silent Emergency Alarm” and “Burglar Outdoor Alarm”** does not activate any audible alarm. The Control Panel will report the alarm event silently without any warning sound.